

# **User Manual**

# Power Quality Network Analyser

# Model: PQI-DE

Power-Quality Evaluation Software WinPQ lite







#### Note:

Please note that these operating instructions may not always contain the latest information concerning the device. If, for example, you have changed the firmware of the device to a higher version via the Internet, this description will no longer be completely accurate.

In this case, contact us directly or use the latest version of the operating instructions available from our Internet site (<u>www.a-eberle.de</u>).

A. Eberle GmbH & Co. KG Frankenstraße 160 D-90461 Nuremberg Telephone: 0911 / 62 81 08 0 Fax: 0911 / 62 81 08 99 E-Mail: info@a-eberle.de Internet: <u>http://www.a-eberle.de/</u>

**A. Eberle GmbH & Co. KG** does not accept any liability for damage or losses of any kind arising from printing errors or changes in this manual.

Furthermore, **A. Eberle GmbH & Co. KG** will not accept any liability for loss or damage of any kind resulting from faulty equipment or devices that have been modified by the user.

Copyright 2024 A	24 A. Eberle GmbH & Co. KG				
Subject	to	change	without	prior	notice.



# **Table of Contents**

1.	User prompt	8
1.1	Target group	8
1.2	Warnings	8
1.3	Tips	9
1.4	Other symbols	9
1.5	Applicable documentation	9
1.6	Keeping	9
2.	Scope of Delivery/Order Codes	10
2.1	Scope of Delivery	10
2.2	Order Codes	10
3.	Safety instructions	13
3.1	Meaning of the symbols used on the device	14
3.1.1	Site information and assembly instructions of PQI-DE	14
4.	Intended use	14
5.	Technical Data	15
5.1	PQI-DE Description	15
5.2	Technical Data	17
5.2.1	Dimensions / Weight	18
5.2.2	Power supply for PQI-DE	18
5.2.3	Electrical safety – environmental parameter	18
5.2.4	Voltage Inputs	19
5.2.5	Current inputs	20
5.2.6	Residual current monitor (RCM)	20
5.2.7	Binary inputs / binary outputs	21
5.2.8	Temperature input	21
5.2.9	Protective earth	22
5.2.10	Storage of measured values	23
5.2.11	Communication Protocols	23
5.2.12	Time synchronization interface	23
5.2.13	Communication Interfaces	23
5.3	Mechanical design	24
5.3.1	Battery	25
5.4	Terminal strip number PQI-DE	27

5.4.1	Assembly instructions	30
5.5	Supply Voltage Connection	31
5.6	Mains connection for PQI-DE	32
5.6.1	3-phase / 4-wire connection	33
5.6.2	4-wire connection without neutral current	35
5.6.3	4-wire / 1-phase	36
5.6.4	3-phase / 3-wire connection	37
5.6.5	Low-level signal inputs for current measurement (Features C40 / C44 / C45)	42
5.6.6	DC mains connection	44
5.7	Additional interfaces	45
5.7.1	RS232 / RS485 Interfaces	45
5.7.2	Temperature input PT100/PT1000	48
5.7.3	Differential current input	49
5.7.4	Output relays	50
5.7.1	Binary Inputs	51
5.8	Measurement / Functions	52
5.8.1	Continuous Recording:	52
5.8.2	PQ Events	52
5.8.3	Recorder triggering	53
5.8.4	Memory management	53
6.	Operation of the PQI-DE	55
6.1	Getting started	55
6.2	Initial Setup - Operation of the Assistant	55
6.3	First commissioning - wizard - procedure	56
6.3.1	Wizard setting Language	56
6.3.2	Wizard setting Power Quality standard	56
6.3.3	Wizard setting Net type	56
6.3.4	Wizard setting Net frequency	57
6.3.5	Wizard setting Voltage Transformer	57
6.3.6	Wizard setting Voltage Grid	57
6.3.7	Wizard setting Current Transformer	58
6.3.8	Wizard setting Transformer Factor Equipment	58
6.3.9	Wizard setting Rated Current	58
6.3.10	Wizard setting Date, Time and Timezone	59
6.3.11	Wizard setting Interface	60
6.3.12	Wizard setting Security Mode	61



6.3.13	Wizard End of commissioning	62
6.4	Display	63
6.4.1	Numerical display	63
6.4.2	Graphical display	67
6.4.3	Pop-up display for residual current measurement messages	71
6.5	Setup display	74
6.5.1	Parameter	74
6.5.2	Residual Current Measurement / RCM	
6.5.3	Time settings	
6.5.4	Basic setting	
6.5.5	Password lock device display	88
6.5.6	Memory management	89
6.5.7	Setting up the device interfaces	89
6.5.8	Display	
6.6	Display lock	
7.	WinPQ lite Software	92
7.1	Installing the evaluation software	
7.2	Basic setting for Software	
7.3	Setting up a new PQI-DE	
7.3.1	Creating a device tile	
7.3.2	Completing the Instrument Wizard in Secure Mode	
7.3.3	Deleting a device tile	101
7.4	Device setup	101
7.4.1	Main Menu: Views and functions	102
7.4.2	Parameter Menu: Device parameters and settings	103
7.4.3	Basic Settings	104
7.4.4	Limits	107
7.4.5	Oscilloscope Recorder	108
7.4.6	RMS Recorder	112
7.4.7	Ripple Control	113
7.4.8	Time settings	114
7.4.9	RCM (Residual Current Measurement)	118
7.5	Device setup Expert View	121
7.5.1	Device designations	121
7.5.2	TCP/IP settings	122
7.5.3	Thresholds and Recording	123

7.5.4	Recordings parameter	136
7.5.5	Parameterization of the temperature measurement	
7.6	Online measurement values	
7.6.1	Measurement values	140
7.6.2	Vector diagram	141
7.6.3	Oscilloscope image	141
7.6.4	Online spectrum FFT-Analyse	142
7.6.5	Harmonic	143
7.6.6	Interharmonic	144
7.6.7	Supraharmonics from 2 kHz to 9 kHz	145
7.6.8	Software trigger	145
7.7	Measurement data import	146
7.8	Deleting measurement data in the device memory	150
7.9	Evaluating measurement data offline	151
7.9.1	Edit measurement data	152
7.9.2	EN50160 report	154
7.9.3	Voltage harmonics and interharmonics	154
7.9.4	Current harmonics and interharmonics	155
7.10	Importing measurement data from an SD card	157
7.11	Measurement supervision	158
7.11.1	Parameterization of an supervised measurand	158
7.11.2	Parameterization of the reaction after exceeding the threshold	159
7.11.3	Evaluation of the supervision states	160
8.	Online Diagnostic	161
8.1	Device Information	161
8.2	Time synchronization method	
9.	User database and access rights	163
9.1	Adding and Editing Users	164
9.2	IT security settings and password requirements	165
10.	Firmware update for PQI-DE	167
10.1	Firmware update with software WinPQ lite	167
10.2	Ensuring the integrity of firmware updates	
10.3	Automatic Firmware Update of Many Devices	
11.	Calibration PQI-DE (license required)	169
12.	License Update PQI-DE	170
13.	SCADA	171



13.1	Modbus	171
13.1.1	Modbus data list	172
13.1.2	Modbus settings	172
13.1.3	Set-up parameter Modbus with WinPQ	173
13.1.4	Modbus Gateway	177
13.1.5	Modbus Master with recording	178
13.2	IEC60870-104	183
13.2.1	IEC60870-104 Data point	183
13.2.2	IEC60870-104 Settings in WinPQ lite	183
13.3	IEC61850	185
13.3.1	Display settings IEC61850	185
13.3.2	IEC61850 Data Points	185
13.3.3	IEC61850 settings in WinPQ lite	186
14.	Webserver	188
14.1	Parameterization	188
14.2	Access and REST-API	188
15.	Data exchange formats	189
15.1	COMTRADE	189
15.2	PQDIF	189
15.3	Selection of the export format	191
16.	Intended use	192
17.	Measurement methods PQI-DE	193
18.	Service	202
19.	Disposal	203
20.	Product Warranty	203

# 1. User prompt

The user manual contains all important information for installation, commissioning and operation. Read the instruction manual completely and do not use the product until you have understood the instruction manual.

# 1.1 Target group

These operating instructions are intended for trained and qualified staff as well as trained and tested operators. The contents of these operating instructions must be made accessible to the persons responsible for installing and operating the system.

## 1.2 Warnings

#### Structure of the warnings

	Type and source of danger!
	Consequences of non-observance
WORD	Action to avoid the danger.

#### Types of warnings

#### Warnings differ according to the type of danger as follows:

$\wedge$	Warns of an imminent danger which, if not avoided, will result in death or
	serious injury.

$\wedge$		Warns of a potentially dangerous situation that can result in death or serious
WA	RNING!	injuries when not avoided.

	Warns of a potentially dangerous situation that can result in fairly serious or
CAUTION!	minor injuries when not avoided.

NOTIOEL	Warns of a potentially dangerous situation that if not avoided could result in
NOTICE!	material or environmental damage.



### 1.3 Tips



Notes on appropriate use of the device.

# 1.4 Other symbols

#### Instructions

Structure of the instructions:

Guidance for an action.

✤ Indication of an outcome, if necessary.

#### Lists

Structure of unnumbered lists:

- List level 1
  - List level 2

Structure of numbered lists:

- 1) List level 1
- 2) List level 1
- 1. List level 2
- 2. List level 2

# 1.5 Applicable documentation

For the safe and correct use of the product, observe the additional documentation that is delivered with the system as well as the relevant standards and laws.

## 1.6 Keeping

Keep the user manual, including the supplied documentation, readily accessible near the system.

# 2. Scope of Delivery/Order Codes

# 2.1 Scope of Delivery

- PQI-DE
- User Manual
- Ethernet cable
- Calibration certificate
- CD with WinPQ lite Software

# 2.2 Order Codes

Characteristic	Code
<ul> <li>Power Quality Interface and fault recorder</li> <li>4 voltage converters, 4 current transformers</li> <li>In accordance with DIN EN 50160 and IEC 61000-4-30 (Class A)</li> <li>8 digital inputs</li> <li>4 relay outputs</li> <li>WinPQ Lite software for PQI-DE</li> </ul>	PQI-DE
<ul> <li>Supply voltage (operation range)</li> <li>AC 90 V110 V264 V or DC 100 V220 V350 V</li> <li>DC 18 V60 V70 V</li> <li>DC 40 V160 V</li> </ul>	H1 H2 H3
<ul> <li>Supply voltage (operation range)</li> <li>100 V 2MΩ (CAT IV 300 V)</li> <li>100 V / 400 V / 690 V 10MΩ (CAT IV 300 V)</li> <li>3.25 V 2MΩ (CAT IV 300 V) for small signal transducer</li> </ul>	E1 E2 E3
<ul> <li>Current inputs</li> <li>4 current inputs for metering circuit 1 A / 5 A (range 10 A)</li> <li>4 current inputs for protection circuit 1 A / 5 A (range 100 A)</li> <li>4 current inputs for Rogowski Coils (330 mV input)</li> <li>4 AC current inputs for current clamps (0.5 V input AC converter)</li> <li>4 DC current inputs for current clamps (5 V input DC converter)</li> </ul>	C30 C31 C40 C44 C45 (
<ul> <li>Binary inputs</li> <li>8 programmable binary inputs (AC/DC 48250 V)</li> <li>8 programmable binary inputs (DC 1048 V)</li> </ul>	M1 M2
<ul> <li>Option IEC 61000-4-7 (40.96 kHz sampling)</li> <li>10.24 kHz sampling; without 2 kHz to 20 kHz measurement</li> <li>Frequency measurement of voltage and current from 2 kHz to 20 kHz according IEC61000-4-7; 40.96 kHz sampling oscilloscope recorder</li> </ul>	B0 B1
Option RCM <ul> <li>Without Residual current monitor RCM (5th current input)</li> <li>Residual current monitor RCM (5th current input) (Firmware V2.2)</li> </ul>	D0 D1



Option communication protocol Modbus RTU & TCP IEC 60870-5-104 (RJ45) IEC 61850 (RJ45)	P0 P1 P2
<ul> <li>Option Data format</li> <li>Without PQDIF export function according to IEEE1159-3</li> <li>With PQDIF export function according to IEEE1159-3 Data transfer via feature P2 - IEC61850 / MMS</li> </ul>	F0 F1
Operating instructions German English	G1 G2



With a license code it is possible to upgrade the 2 kHz to 20 kHz option (40.96Hz sampling rate for oscilloscope pictures), the communication protocols (P - features) for the SCADA system as well as the RCM feature.

Software WinPQ lite	Code
Software WinPQ lite For parameterising PQI-DE, as well as reading PQI-DE measurement data and online data as a sin- gle-user licence – free of charge	
Expansion WinPQ lite For calibration of the PQI-DE and test report creation	900.9287


WinPQ database	Code
Software WinPQ	WinPQ
<ul> <li>For parameterization, archiving and evaluation of PQI-D, PQI-DA, PQI-DA smart and PQI-DE measurement data with the following basic functions:</li> <li>32-bit/64-bit Windows program interface</li> <li>Database for saving the measured values per measuring point</li> <li>Data access via TCP/IP network</li> <li>Visualization option for all measured variables retrievable from a PQI-D, PQI-DA, PQI-DA smart and PQI-DE as a function of time and as a statistical variable</li> <li>Automatic reporting according to EN50160; IEC61000-2-2 / 2-4; IEEE519; etc.</li> <li>Automatic export functions (Comtrade , PQDiff, ASCII, PDF) and fault report transmission</li> </ul>	
One additional workstation license for one Windows user is included in the price	
<ul> <li>as single-user license for 2 PQ measuring instruments (PQI-D, PQI-DA, PQI-DA smart, PQI-DE)</li> <li>as single-user license for 2 to 10 PQ measuring instruments (PQI-D, PQI-DA, PQI-DA smart, PQI-DE)</li> <li>as single-user license for &gt; 10 PQ measuring instruments (PQI-D, PQI-DA, PQI-DA smart, PQI-DE)</li> <li>as single-user license for &gt; 100 PQ measuring instruments (PQI-D, PQI-DA, PQI-DA smart, PQI-DE)</li> </ul>	L0 L1 L2 L3
PQI-DE Operating instructions German English	A1 A2
French	A3

PQI-DE - Accessories	Code				
SD-memory card (external): 4 GB industrial standard					
Radio time clock interface DFC 77					
<b>GPS-Clock</b> – Navilog Set - RS485 GPS receiver, GPS converter 5m connection cable, mounting bracket					
Power supply for Navilog (DIN rail power supply, 88-264VAC/24V, 10W)					



# **3.** Safety instructions

- **•** Follow the operating instructions.
- Keep the operating instructions with the device.
- Ensure that the device is operated only in a perfect condition.
- **•** Never open the device.
- Ensure that only qualified personnel operate the device.
- Connect the device only as specified.
- Ensure that the device is operated only in the original condition.
- Connect the device only with recommended accessories.
- Ensure that the device is not operated outside the design limits.
   (Refer to the technical data in chapter 5.2)
- Ensure that the original accessories are not operated outside the design limits.
- **D**o not use the device in environments where explosive gases, dust or fumes occur.

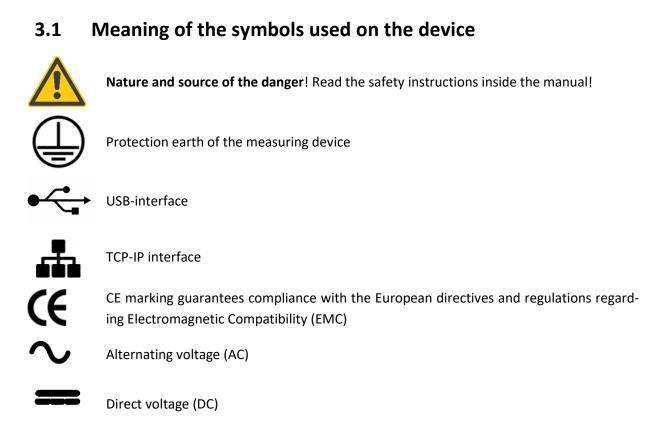

## 3.1.1 Site information and assembly instructions of PQI-DE

The PQI-DE is suitable for the following sites:

Panel mounting

# 4. Intended use

The product is used for the measurement and evaluation of voltage and current signals in the power grid only. If the instrument is used in a manner not specified by the manufacturer, the protection provided by the instrument may be severely impaired.

The instrument is intended for use in the low voltage range in CAT IV (300 V) up to a maximum of 690 V (conductor - conductor). Other voltage levels such as medium or high voltages must be connected to the instrument via voltage transformers.



# 5. Technical Data

# 5.1 PQI-DE Description

The Power Quality Analyser and Fault Recorder PQI-DE for low, medium and high voltage networks is the central component of a system with which all measurement tasks in electrical networks can be solved.

The PQI-DE can be used as a Power Quality Interface according to power quality standards such as IEC61000-2-2 / EN50160 or to check the technical connection guidelines such as DIN VDE AR 4110 and DIN VDE 4120 and many more. Due to the available open SCADA standard interfaces Modbus RTU/TCP, the device can also be used as a highly accurate measurement transducer for all physically defined measured variables in 3-phase systems parallel to the continuous recording of measured values over a very long period.

In addition to the possibility of standard evaluations, the PQI-DE also has a high-speed disturbance recorder with a recording rate of 40.96kHz/10.24kHz and a 10ms TRMS effective value recorder. This allows a detailed evaluation of grid disturbances.

The PQI-DE is equipped with a fifth current input for continuous residual current monitoring (RCM). It is possible to freely program thresholds for alarms or warnings (from firmware version 2.2).

Modern Power Quality Analysers comply with the IEC 62586 standard, which describes the complete product feature of a Power Quality Analyser. This standard defines not only the purpose of use, the EMC environment and the environmental conditions, but also the exact measurement methods IEC 61000-4-30 - Class A, in order to create a comparable and reliable basis for the end-user.

According to IEC 62586, the PQI-DE is a device of class PQI-A-FI-H and is therefore fully certified in external laboratories. Power Quality Interface – Class A – Fixed Installed Measurement Device for Indoor operation in Harsh EMC environments.

The PQI-DE meets the requirements of IEC 61000-4-30 Ed.3 (2015) for Class A measuring instruments for 100% of the parameters.

The measuring device and the development are subject to strict security requirements within the scope of the requirements in the area of KRITIS. In relation to these, an active patch management, encrypted communication standards as well as a User Rights Management (URM) via RADIUS are available in the device! This also includes

Parameter IEC61000-4-30	Class
Power frequency	А
Magnitude of the Supply Voltage	А
Flicker	А
Supply voltage dips and swells	А
Voltage interruptions	А
Supply voltage unbalance	А
Voltage harmonics	А
Voltage Interharmonic	А
Mains signalling voltage	А
Underdevation and overdeviation	А
Measurement aggregation intervals	А
Time-clock uncertainty	А
Flagging	А
Transient influence quantities	А

signed firmware updates, security logging and active protection against brute force attacks. All this contrib-utes to a secure operation in your IT environment! The PQI-DE has been developed for measurements performed in public grids, as well as for recording PQ data in industrial environments, up to 690 V (L-L) measurement voltage:

- No moving parts (fans, hard drives etc.)
- CAT IV
- Extensive storage capability (can be extended up to 32 GB by the user, permitting several years recording without connection to database)

#### Optional: IEC61000-4-7 – 2 kHz to 20 kHz (Option B1)

Frequency measurement of voltage and current according IEC 61000-4-7 from 2 kHz to 20 kHz. Standard IEC61000-4-7 describes the measuring of harmonics and interharmonic in power supply grids and connected devices.

**Optional: RCM continuous residual current monitoring (Option D1).** 

**Temperature input for PT100 / PT1000 / KTY sensors** 



# 5.2 Technical Data

- 5-inch colour display
- Keypad for basic/direct device configuration
- 1 GB internal memory (extended up to 32 GB)
- IP54 in installed condition
- Input channel bandwidth 20 kHz (voltage and current)
- 4 voltage inputs Accuracy < 0.1%
- 4 current inputs
- 5. current input for the detection of differential currents or currents of the ZGP central grounding point (CGP) (from firmware version 2.2)
- Temperature input for PT100 and PT1000 sensor (from firmware version 2.2)
- Simultaneous processing of sampled and calculated voltages and currents
- Oscilloscopic voltage and current recorder sampling rate : 40.96kHz / 10.24kHz
- Half cycle recorder :
  - power frequency, RMS of voltages and currents, voltage and current phasors,
  - power recording rate : ~10ms (50 Hz) / ~8.33ms (60 Hz)
- Powerful recorder triggering
- Online streaming of voltages and currents at 40.96 kHz sampling rate.
- Recording of power quality incidents according to DIN EN 50160; IEC61000-2-2; -2-12; -2-4
- Power buffer for voltage interruptions of up to 2 seconds
- Spectral analysis 2 kHz...20 kHz (35 frequency bands, Bandwidth = 200 Hz) of voltages and currents according (IEC 61000-4-7)
- Phase of voltage and current harmonics n=2..50
- 8 general purpose digital inputs (Triggering fault records, Recording Start / Stop, General documentation of external level)
- 4 relay outputs for protection monitoring and alarming
- EDGE function 32 freely configurable monitoring states for monitoring and triggering all measured variables - Output as binary message or via protocol
- Free of charge analysis software WinPQ lite

#### Option WinPQ – Database Software

Analysis of the data on an MYSQL-based database using the WinPQ software package. Permanent communication with many devices, in parallel.

# 5.2.1 Dimensions / Weight

Dimensions / Weight				
LxBxH	144 x 90 mm without terminals			
	144 x 150 x 110 mm with terminals			
Outbreak size:	138 x 138 mm (+0.8mm)			
Weight	1220g			

### 5.2.2 Power supply for PQI-DE

Power supply					
Feature	H1	H2	H3		
AC Nominal range [V]	100240	-	-		
AC Operating range [V]	90264	-	-		
DC Nominal range [V]	120320	2460	48138		
DC Operating range [V]	108350	1875	40160		
Power consumption	≤ 10 W < 20 VA	≤ 10 W	≤ 10 W		
Frequency Nominal	5060 Hz	DC	DC		
Frequency Operating	4070 Hz	DC	DC		
External fuse characteristics	6A B	6A B	6A B		
Energy storage	2 sec	2 sec	2 sec		

# 5.2.3 Electrical safety – environmental parameter

Environmental parameters	Storage and transport	Operation
Ambient temperature : Limit range of opera- tion	IEC 60721- 3-1 / 1K5 -40 +70°C IEC 60721- 3-2 / 2K4 -40 +70°C	IEC 61010 -25 +45°C H1 -25 +50°C H2/H3
Ambient temperature : Rated range of opera- tion H1 Rated range of opera- tion H2/H3 Relative humidity: 24h average No condensation or ice	 595 %	IEC DIN EN 61010 -25 +45°C -25 +50°C 595 %
Solar radiations Vibration, earth trem- ors	 IEC 60721- 3-1 / 1M1 IEC 60721- 3-2 / 2M1	700W/m <sup>2</sup> IEC 60721-3-3 / 3M1

sec	– IEC 61010-1	
	- IEC 61010-2-030	
า-	Protection class	1
-	Pollution degree	2
ect	Overvoltage category mains supply option : H1 H2/H3	300 V / CAT II 150 V / CAT III
	Measurement category	300V / CAT IV
		600V / CAT III
	Altitude	≤ 2000m
	IP protection class in	IP54
_	installed condition	

Electrical safety

Depending on the power supply unit installed, supply the meter with the correct voltage range.



#### 5.2.4 Voltage Inputs

5.2.4 Voltage Inputs				Voltage inputs		
				Power frequency	±1 mHz	
Voltage inputs	<b></b>	1			@ 10 %200 % U <sub>nom</sub>	
Feature	E1	E2	E3	Flicker DIN EN 61000-4-	Klasse F2	
Channels	U <sub>1</sub> , U <sub>2</sub> , U <sub>3</sub>	3, U <sub>N/E/4</sub>	r	15:2011		
Electrical safety DIN EN 61010	150V CATII	300V CAT IV	SELV	Dip residual voltage	±0,2 % U <sub>nom</sub> @ 10 %100 % U <sub>nom</sub>	
		600V CAT III		Dip duration	±20 ms @ 10 %100 % U <sub>nom</sub>	
Input reference level	PE	PE	PE	Swell residual voltage	±0,2 % U <sub>nom</sub>	
Impedance -> PE	2 MΩ    25pF	10 MΩ    25pF	2 MΩ   50pF	Swell duration	@ 100 %150 % U <sub>nom</sub> ±20 ms @ 100 %150 % U <sub>nom</sub>	
Nominal input voltage Un	100 V <sub>AC</sub>	230 V <sub>AC</sub>	3,25V	Interruption duration	±20 ms @ 1 %100 % U <sub>nom</sub>	
Full scale range (FSR)	0120 V <sub>AC</sub> L-E	0480 V <sub>AC</sub> L-E	05 V <sub>AC</sub> L-E	Voltage unbalance	±0,15 % @ 1 %5 % Messwert	
Overload, permanent	$150V_{AC}$	600V <sub>AC</sub>	10V <sub>AC</sub>	Mains signalling voltage	±5% des Messwerts	
Maximum crest factor	3	3	2,2	(< 3 kHz)	@ U <sub>s</sub> = 3%15% U <sub>nom</sub>	
@ U <sub>nom</sub>					±0,15 % Un @ U <sub>s</sub> = 1 %3 % U <sub>nom</sub>	
Bandwidth		DC20 kH	Z			
Nominal power fre- quency fnom	5	50 Hz / 60 I	Ηz	_		
Frequency range of the fundamental		f <sub>n</sub> ± 15 % ,55057,9 ,06069,0	5 Hz			
A	ccuracy					
Fundamental, r.m.s.						
U1 ≤ 150% U <sub>nom</sub>						
0°C ≤ TA ≤ +45°C:	±0.1% v.	Unom				
-25°C ≤ TA ≤ +55°C:	±0.2% v.	Unom				
Fundamental, Phase						
$U1 \ge 10\% U_{nom}$ :	±0.02°					
Harmonics n = 250, r.m.s.	±5.0% v.	Ub		-		
$U_h \ge 1\% U_{nom}$ :	±0.05% v					
U <sub>h</sub> < 1% U <sub>nom</sub> :						
Harmonics n = 250, Phase	±0.5°					
$U_h \ge 1\% U_{nom}$ :						
Interharmonics n = 149, r.m.s.				-		
$U_{ih} \ge 1\% U_{nom}$ :	±5.0% v.	U <sub>h</sub>				
$U_{ih} < 1\% U_{nom}$ :	±0.05% v	±0.05% v. U <sub>nom</sub>				

# 5.2.5 Current inputs

Current inputs			I <sub>ih</sub> < 3% I <sub>nom</sub> :					
Option	C30		C31					
Channels I1, I2, I3, IN/4				sidua	al curren	t monitor		
Electrical safety DIN EN 61010	300V CAT III			(RCM)				
Input type	potentialfrei			Residual curre			1) – (from	
Impedance	≤ 4mΩ			firmware versi				
Nominal input cu rent In	r- 5 A <sub>AC</sub>			- Nominal curren Impedance	t	30 mA		
Full scale range (F	SR) 10Aac	:	100Aac	Overload capaci	it.	5 A (1 sec)		
Overload capacity permanent ≤ 10s ≤ 1s	20 A <sub>AC</sub> 100 A <sub>AC</sub> 500 A <sub>AC</sub>	100 A <sub>AC</sub>				24bit-ADC		
Waveform	AC, any			_				
Maximum crest fa tor @ In	ac- 3	30		-				
Bandwidth	andwidth 25Hz20kHz			_				
Tightening torque	e 2 Nm			_				
Accuracy								
Feature	30	C31						
Fundamental, r.m.s.	$I_1 \ge 10\%$ FSR: $\pm 0.1\%$ v. $I_1$ $I_1 < 10\%$ FSR: $\pm 0.01\%$ v. FSR	FSR: I <sub>1</sub> < 1	%20% ±0.5% v. l₁ % FSR: D5% v. FSR	-				
Fundamental, Phase	I <sub>1</sub> ≥ 10% FSR: ±0.1°	l <sub>1</sub> = 1% ±0.5°	%20% FSR:	-				
$\begin{array}{l} \mbox{Harmonic } n \ = \ 250, \ r.m.s. \\ \mbox{I}_h \ge 3\% \ \mbox{I}_{nom} \ \\ \mbox{I}_h < 3\% \ \mbox{I}_{nom} \ \end{array}$	±5.0% v. I <sub>h</sub> ±0.15% v. I <sub>nom</sub>	±10% ±0.3%	ó v. I <sub>h</sub> % v. I <sub>nom</sub>	-				
Harmonic n = $250$ , Phase $I_h \ge 3\% I_{nom}$ :	±0.5°	±2.0°	,	-				
Interharmonic n = 149, r.m.s.	±5.0% v. l <sub>ih</sub>	±10%	όν. I <sub>ih</sub>					

$I_{ih} \ge 3\% I_{nom}$ :	±0.15% v. I <sub>nom</sub>	±0.3% v. I <sub>nom</sub>
l <sub>ih</sub> < 3% l <sub>nom</sub> :		



# 5.2.7 Binary inputs / binary outputs

Binary outputs (BO)	
4 binary outputs	3 x closer
	1 x changeover
Contact specification (EN60947-4-1, -5-1) : Configuration Nominal voltage Nominal current Nominal load AC1 Nominal load AC15, 230 VAC Interrupting power DC1, 30/110/220 V	3 x SPST (Single Pole Single Throw) 1 x SPDT (Single Pole Double Throw) 250VAC 6 A 1500 VA 300 VA 6/0.2/0.12 A
Number of switching operations AC1	$\geq 60.10^3$ electrical
Electrical Isolation	Isolated from all internal potentials
Electrical safety DIN EN 61010	300 V

### 5.2.8 Temperature input

Temperature input PT 100 / PT 1000 / KTY – (from firmware version 2.2)						
Contacting measure-	2 wire					
ment sensor	3 wire					
(software setting)	4 wire					
Update rate	1 Hz					
Resolution	15 Bit					
Burden	1.9 kΩ					
Accuracy	0.05% FSR					

Binary inputs (BI)				
Feature	M1	M2		
8 binary inputs	0 V250 V <sub>AC</sub>	0 V48 V <sub>DC</sub>		
Range	/V <sub>DC</sub>			
<ul> <li>H – Level</li> </ul>	> 35 V	> 10 V		
L – Level	< 20 V	< 5 V		
Signal frequency	DC 70 Hz	DC 70 Hz		
Input resistance	> 100 kΩ	6.8 kΩ		
Electrical isolation	Optocoupler,			
	electrically isolated			
Electrical safety	300 V			
DIN EN 61010				




#### **Connection cable to be used**

- Provide fuses for protection for CAT II
- No mix of touchable and dangerous active circuits
- Connecting cables must be designed for a temperature of at least 62°C

### 5.2.9 Protective earth

The device has a protective earth, which also serves as reference potential for the voltage inputs.

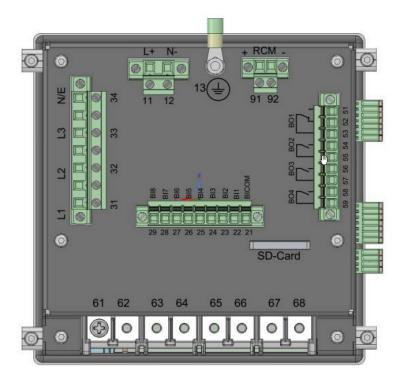

Protection Earth on the Backside from the device

The protective earth is marked with  $\biguplus$  and terminal X1 / 13 on the measuring instrument.

Connect the earth cable to terminal X1 / 13 on the meter and tighten the screw. Use an eyelet terminal for the connection and make sure it is tight!

# A DANGER!

#### Danger to life due to electric shock!

Incorrect connection of this measuring instrument can lead to death, serious injury or fire hazard!

- The protective earth must always be connected to PE potential.
- The protective earth must not carry a dangerous voltage under any circumstances



The protective earth is the measurement potential for the voltage measurement.



## 5.2.10 Storage of measured values

Storage of measured values					
Internal memory	1024 MB				
SD memory card	1 GB to 32 GB				

### 5.2.11 Communication Protocols

#### **Communication Protocols**

- MODBUS RTU
- MODBUS TCP
- IEC60870-5-104 (Option P1)
- IEC61850 (Option P2)

### 5.2.12 Time synchronization interface

Time synchronization protocols (Receive / Slave)

- IEEE1344 / IRIG-B000...007
- GPS (NMEA +PPS)
- DCF77
- NTP

### 5.2.13 Communication Interfaces

Interfaces	
Ethernet	RJ45 (10/100 Mb)
USB	USB – Type-C
2 * RS232/RS485 on terminals	Switchable

### Property damage due to unauthorized IT access via network interface!

- IT security guidelines for the place and purpose of use must be observed!
  - IT security settings of the device must be observed!



**NOTICE!** 


#### LAN, COM interface

- Even when disconnected, all COM and LAN connecting cables must not fall below the insulation distance to dangerous parts.
- It must not be possible to disconnect individual wires from the clamp.
- Pull the plugs only directly on the housing, never on the cable.

Make sure that the connection cable is fixed or strain-relieved.


# 5.3 Mechanical design

The PQI-DE is used as a panel-mounted device and fulfils IP54 when installed. All connections are accessible via Phoenix terminals. With the exception of the current and voltage inputs, the connections are made using plug-in terminal technology. A TCP/IP interface (RJ 45 LAN connection) and a USB interface (type C socket) are available for communication. In addition to the internal memory of 1 GB, the device memory can be expanded by a further 32 GB via an external memory card. The memory card can also be used to easily read out measurement data from the instrument and transmit it to an evaluation PC.

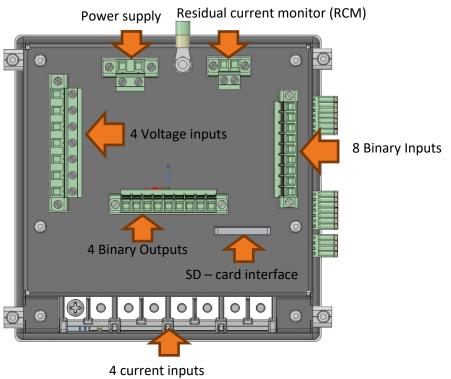

Back view PQI-DE



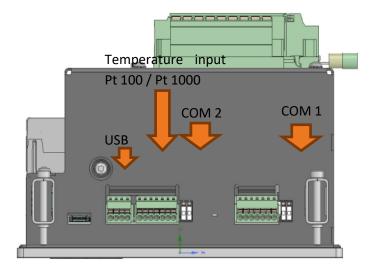


Side view of PQI-DE

5.3.1 Battery

Battery compartment



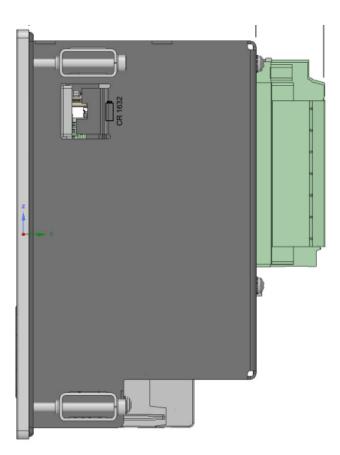

Side view - right -PQI-DE

#### **Changing the battery:**

The service life of the battery is > 5 years and is only required for the RTC time if there is no time synchronization. A battery change does not affect the operation of the device when the mains supply is connected, as the device is supplied with voltage internally.


Pull the battery out of the housing and insert a new battery.

#### Battery type:

Li- button cell CR1632



# 5.4 Terminal strip number PQI-DE

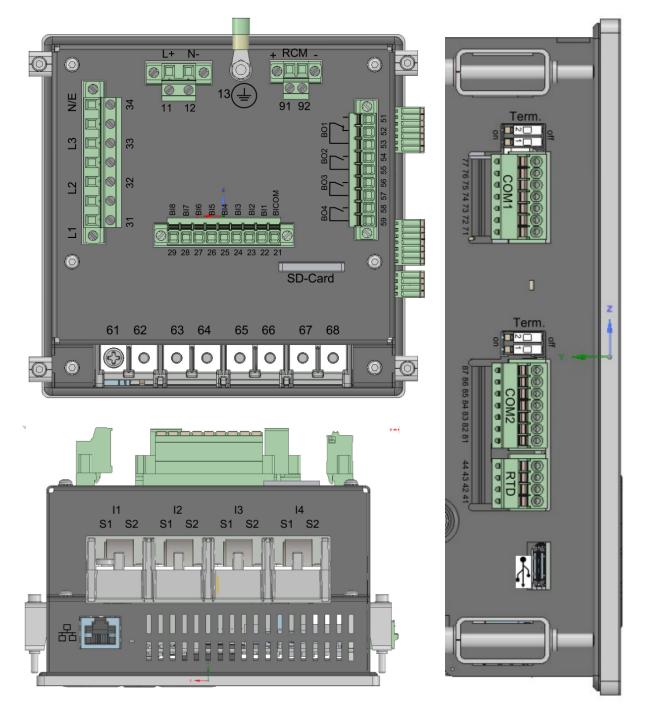

Terminal strip no.	Designation		Function	Terminal no.	cross section [mm <sup>2</sup> ]	Stripping length mm	Torque in Nm
V1	A:liam		L (+)	11	0.2 2.5	10	0,5 0,6
X1 Auxiliary voltage	U <sub>H</sub>	N (-)	12	0.2 2.5	10	0.5 0.6	
X1	Ground	GND	PE	13	ring terminals M4	-	0.5 0.6

#### We take care of it.


Terminal	Designation		Function	Terminal	cross section	Stripping	Torque in
strip no.				no.	[mm²]	length mm	Nm
Ya		BICOM	-	21	-	10	0.5 0.6
		BI1	+	22		10	0.5 0.6
		BI2	+	23	solid:	10	0.5 0.6
	Binary input	BI3	+	24	0.2 1.5	10	0.5 0.6
X2		BI4 BI5	+ +	25 26	flexible:	10 10	0.5 0.6
		BI6	+	20	0.2 2.5	10	0.5 0.6
		BI7	+	28		10	0.5 0.6
		BI8	+	29		10	0.5 0.6
	Phase voltage L1 (AC)	U <sub>1</sub>	L1	31		10	0.5 0.6
	Phase voltage L2 (AC)	U <sub>2</sub>	L2	32		10	0.5 0.6
Х3	Phase voltage L3 (AC)	U <sub>3</sub>	L3	33	0.2 2.5	10	0.5 0.6
	Neutral point voltage (AC)	U <sub>4</sub>	N/E	34		10	0.5 0.6
			RTDOUT+	41		10	0.5 0.6
X4	PT100/PT1000/KTY Tem-	T1	RTDIN+	42	0.14 0.5	10	0.5 0.6
74	perature input	11	RTDIN-	43	0.14 0.5	10	0.5 0.6
			RTDOUT-	44		10	0.5 0.6
	Binary output	R1	NO contact	51	solid: 0.2 1.5 flexible: 0.2 2.5	10	0.5 0.6
			NC contact	52		10	0.5 0.6
			Pol	53		10	0.5 0.6
		R2	NO contact (+)	54		10	0.5 0.6
X5			Pol (-)	55		10	0.5 0.6
		R3	NO contact (+)	56		10	0.5 0.6
			Pol (-)	57		10	0.5 0.6
		R4	NO contact (+)	58		10	0.5 0.6
			Pol (-)	59		10	0.5 0.6
	Phase current L1	11	S1 (K) S2 (L)	61 62	_		0.5 0.8
X6	Phase current L2	12	S1 (K) S2 (L)	63 64	ring terminals		0.5 0.8
	Phase current L3	13	S1 (K) S2 (L)	65 66	1.5 – 4 mm²		0.5 0.8
	Neutral / sum current	14	S1 (K) S2 (L)	67 68			0.5 0.8
X9	RCM - Input	15	+	91	solid:	10	0.5 0.6



		-	92	0.34 2.5 flexible: 0.2 2.5	10	0.5 0.6
--	--	---	----	----------------------------------	----	---------

### 5.4.1 Assembly instructions

The PQI-DE is used as a panel-mounted device and fulfils IP54 in the installed condition. Mounting must be carried out with the following cut-outs and minimum distances as shown in the figure below. The maximum thickness of the panel for PQI-DE installation is 8mm.

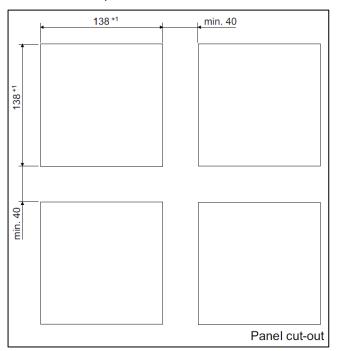

Example of an assembly of four PQI-DE's with cut-out dimensions

For mounting the PQI-DE, four mounting brackets are included in the scope of delivery. These must be snapped into the housing of the PQI-DE at all four corners (see picture below). The clamps must then be screwed against the panel with a maximum torque of 5 Nm using an Allen key (2.5 mm) on the back of the PQI-DE to ensure that the PQI-DE is securely mounted in the panel cut-out.



Mounting bracket for PQI-DE




Mounting bracket engaged on PQI-DE



# 5.5 Supply Voltage Connection

The PQI-DE is available in three different supply voltage versions. Please take the correct supply voltage from the type lable before connection.

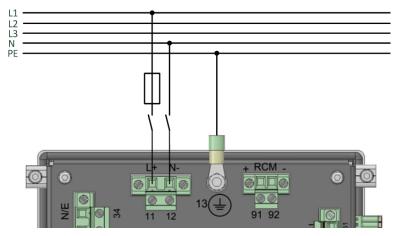

Example of connection to 230 V AC with feature

After connecting and switching on the power supply, the status LED lights up red, changes to green and the display starts in the commissioning wizard.

#### A DANGER!

#### Danger to life due to electric shock!

Serious personal injury or death may result from:

- Touching bare or stripped wires that are energised.
- Touching dangerous inputs on the device.
- Make sure that the device is connected in a deenergized state.
- Ensure that all connecting cables are fixed and strain relief is provided.
- Solution Control C

#### NOTICE!

#### Material damage due to non-observance of the connection conditions or impermissible overvoltages!

Failure to comply with the connection conditions or exceeding the permissible voltage range may damage or destroy your device.

Before applying the supply voltage to the device, the following points must be observed:

- Voltage and frequency must correspond to the specifications on the type lable! Observe the limit values as described in the technical data (see chapter 5.2)!
- Observe features of the device H1 / H2 / H3
- In the building installation, the supply voltage must be provided by a listed miniature circuit breaker and fuse that meets the requirements of IEC 60947-1 and IEC 60947-3!
- **The miniature circuit breaker** 
  - be easily accessible to the user and installed close to the device.
  - Label for the respective device.
- Do not take the supply voltage at the voltage transformers.
- Provide a fuse for the neutral conductor if the neutral connection of the source is not earthed.


# 5.6 Mains connection for PQI-DE

The mains connection of the PQI-DEs depends on the type of mains in which the measurement is to be made.

The PQI-DE is designed for direct measurement in low voltage (3 phase / 4 wire connection) for low voltage networks (TN, TT and IT networks) or for residential and industrial applications. A special form of low voltage measurement is the measurement 4-wire / 1 phase connection with which three independent voltage circuits and current circuits can be measured with the same ground conditions.


For medium and high voltage the device can be connected via suitable transformers. A connection with three voltage and current transformers is possible as well as the connection via transformer saving circuits (V-circuit, Aron circuit).

In addition, current measurements with small signal inputs are possible with the corresponding sensor transformers (hardware features C40, C44 and C45).

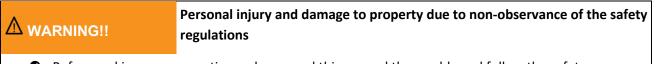

Before making any connections, please read this manual thoroughly and follow the safety measures described here.



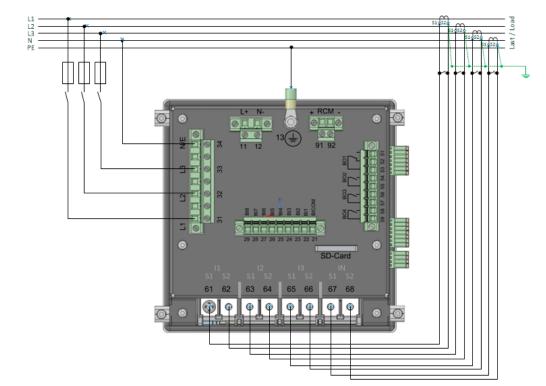

### 5.6.1 3-phase / 4-wire connection

Example of a connection for a PQI-DE in a three-phase four-wire system

#### Voltage connections

- The voltage connections must be made as shown in the circuit diagram above
- If no N conductor connection is available, connect connections E and N together.
- Make sure that the switching mode (4-wire) is set (settings are described in chapter 6.3).

#### Current connections

• The PQI-DE is designed for measuring circuits (C30) or protection circuits (C31) depending on the characteristics.

The current transformer ratio is set at the factory to nominal current (e.g. 5A) depending on the feature and must be adapted to the transformers used. With feature C30 / C31 only alternating currents, no DC currents can be measured. Furthermore features C40, C44 and C45 offer the possibility to connect Rogowski coils, mini current clamps and DC current clamps to the measuring instrument. This makes it possible to connect the measuring device without disconnecting the current transformer or consumer circuits. The corresponding converters can be obtained from A.Eberle. The connection of converters of other manufacturers is possible as long as the described connection conditions (input range, impedance) are observed.

### **DANGER!**

Danger to life due to electric shock!


Attention dangerous contact voltage!

Flashover and high short-circuit currents possible in CAT III and CAT IV!

• Ensure that the PE conductor (earthing) is connected to the PQI-DE.

- Before starting work, check that no voltage is present!
- **Provide protective equipment for CAT II, CAT III or CAT IV.**
- High-load fuses >10 kA or >50 kA must be used in accordance with the CAT.
- Short-circuit current transformers before starting work.
- Ensure that all connecting cables are fixed and strain-relieved.
- Solution Control C



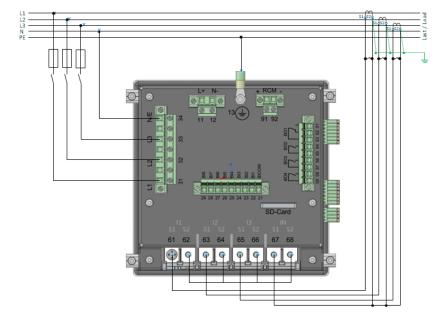

### **5.6.2 4-wire connection without neutral current**

#### PQI-DE without neutral conductor Current transformer in 4 conductor connection

#### Voltage connections

- If no N conductor connection is available, connect connections E and N together.
- Make sure that the switching mode (4-wire) is set (settings are described in chapter 6.3).

#### Current connections

- If no neutral conductor current is available in the 3-phase / 4-wire network, the S2 current inputs of the PQI-DE must all be short-circuited and the S2 terminals of the current transformers used must be connected to S1 (terminal X6:67).
- The PQI-DE is designed for measuring circuits (C30) or protection circuits (C31) depending on the characteristics.

#### ADANGER!


#### Danger to life due to electric shock!

Attention dangerous contact voltage!

Flashover and high short-circuit currents possible in CAT III and CAT IV!

- Ensure that the PE conductor (earthing) is connected to the PQI-DE.
- Before starting work, check that no voltage is present!
- Provide protective equipment for CAT II, CAT III or CAT IV.
- High-load fuses >10 kA or >50 kA must be used in accordance with the CAT.
- Short-circuit current transformers before starting work.
- Ensure that all connecting cables are fixed and strain-relieved.
- All cable requirements of the terminal blocks must be observed. (e.g. stripping length of the cables)

### 5.6.3 4-wire / 1-phase

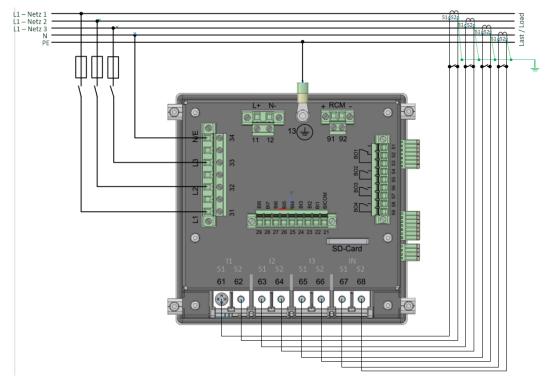

PQI-DE in 4-wire connection -1-phase

In the 4-wire network / 1-phase circuit type, no wire-conductor events and three phase network events are evaluated. Voltages with the same earth potential can be connected (e.g. three networks with phase L1) and any currents can be connected.



#### Danger to life due to electric shock!


Attention dangerous contact voltage!

Flashover and high short-circuit currents possible in CAT III and CAT IV!

- Ensure that the PE conductor (earthing) is connected to the PQI-DE.
- Before starting work, check that no voltage is present!
- Provide protective equipment for CAT II, CAT III or CAT IV.
- High-load fuses >10 kA or >50 kA must be used in accordance with the CAT.
- Short-circuit current transformers before starting work.
- Ensure that all connecting cables are fixed and strain-relieved.
- Solution Control C



### 5.6.4 3-phase / 3-wire connection

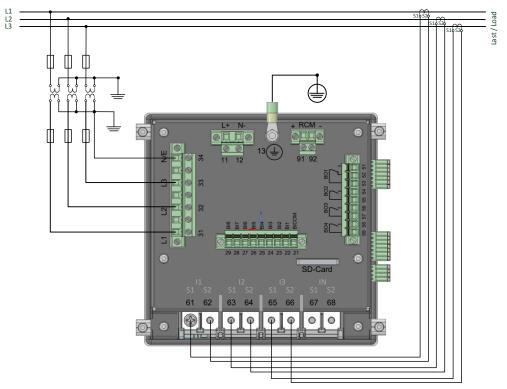

### 5.6.4.1 Connection to secondary transformer for feature E1 & E2

PQI-DE in three-wire connection for medium and high-voltage networks via transformer

### Voltage connections

- Make sure that the measuring cable N/ E is connected to terminal 34 for each measurement. This is usually the earthing point of the voltage transformer.
- Ensure that the switching mode (3-wire) is set (settings are described in chapter 6.3).
- Set the voltage transformation ratio
- Enter the nominal voltage of the conductor-conductor voltage.

### Current connections

Set current transformer ratio.

### Connection PQI-DE current I<sub>N</sub> in 3-wire network

If a current is connected to input  $I_N$  in the 3-wire network, it is not physically measured. The current  $I_N$  is always calculated in 3-wire operation.




1

### transducer settings

The transducer settings are set in the assistant in the chapter 6.3.

### 5.6.4.2 Connection to voltage sensors for feature E3

3 Phasen / 3-Leiter Anschluss E3

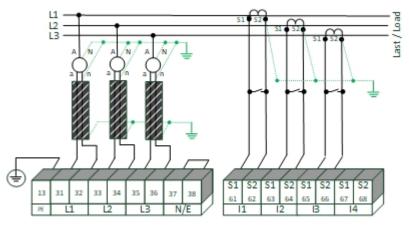

PQI-DE in three-wire connection for medium and high-voltage networks via voltage sensors

#### Voltage connections

- Ensure that terminals 37 & 38 (N/E) are short-circuited for each measurement.
- Ensure that the shielding of the voltage sensors is grounded on both sides.Set the voltage transformation ratio.



Ground loops must be avoided! If there is a potential difference, only one side of the shielding must be grounded!

- Enter the nominal voltage of the conductor-conductor voltage.
- Enter the nominal voltage of the conductor ladder voltage.

### Current connections

• Set current transformer ratio.

#### Connection PQI-DE current $I_{\ensuremath{\mathsf{N}}}$ in 3-wire network



If a current is connected to input  $I_N$  in the 3-wire network, it is not physically measured. The current  $I_N$  is always calculated in 3-wire operation.



### Transducer settings

The transducer settings are set in the assistant in the chapter 6.3.



# **DANGER!**

### Danger to life due to electric shock!

Attention dangerous contact voltage!


Flashover and high short-circuit currents possible in CAT III and CAT IV!

- **C** Ensure that the PE conductor (earthing) is connected to the PQI-DE.
- Before starting work, check that no voltage is present!
- **Provide protective equipment for CAT II, CAT III or CAT IV.**
- ➡ High-load fuses >10 kA or >50 kA must be used in accordance with the CAT.
- Short-circuit current transformers before starting work.
- Ensure that all connecting cables are fixed and strain-relieved.
- Solution ⇒ All cable requirements of the terminal blocks must be observed. (e.g. stripping length of the cables)

### 5.6.4.3 V connection; Aron connection

The V connection or Aron connection can be configured in the device set-up of the software. These connection types are only available in the 3-wire configuration.

- 1) V connection (set-up via the evaluation software)
- 2) Aron connection (set-up via the evaluation software)

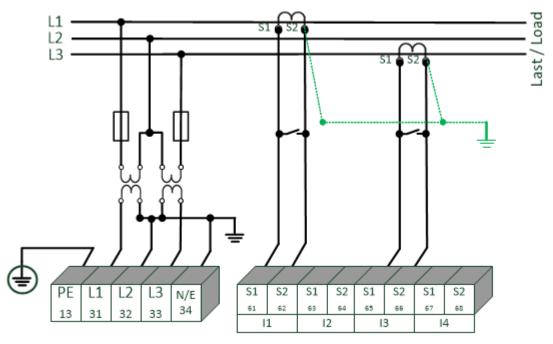

*PQI-DE* in the V-circuit / Aron circuit for medium and high voltage networks via converters with L2 grounded

**Possible connection configurations in 3-wire grids:** 

- Voltage converter connections: 1, 2, 3, 4,
- Current transformer connections: 1, 2, 3, 4,

The voltage converter and current transformer selection fields can be set-up. The grounded voltage in each case or the current that has not been connected is calculated by the measurement device.

- Make sure that the switching mode (3-wire) is set (settings are described in chapter 6.3).
- Setting the voltage migration ratio.



### 3-phase voltage converter connections:

		Mea	asurir	ng ch	annel	
Connection configuration	VT	1	2	3	4	Reference potential
Voltage converter: L1, L2, L3, N/E	1	U1	<b>U</b> 2	U3	Un/e	
V connection, earth L1	2	E	u <sub>2</sub>	U <sub>3</sub>	E	F
V connection, earth L2	3	U1	E	U3	E	L
V connection, earth L3	4	<b>u</b> 1	U2	E	E	

#### **3**-phase current transformer connections:

	-	Measuring channel			
Connection configuration	СТ	1	2	3	4
Current transformer: L1, L2, L3, N	1	İ1	İ2	İ3	İN
Current transformer: L2, L3	2	-	İ2	İ3	İ4
Current transformer: L1, L3	3	İ1	-	İ3	İ4
Current transformer: L1, L2	4	İ1	İ2	-	İ4

### **DANGER!**

#### Danger to life due to electric shock!

Attention dangerous contact voltage!

Flashover and high short-circuit currents possible in CAT III and CAT IV!

- **C** Ensure that the PE conductor (earthing) is connected to the PQI-DE.
- Sefore starting work, check that no voltage is present!
- Provide protective equipment for CAT II, CAT III or CAT IV.
- High-load fuses >10 kA or >50 kA must be used in accordance with the CAT.
- Short-circuit current transformers before starting work.
- Ensure that all connecting cables are fixed and strain-relieved.
- All cable requirements of the terminal blocks must be observed. (e.g. stripping length of the cables)

# 5.6.5 Low-level signal inputs for current measurement (Features C40 / C44 / C45)

The PQI-DE is available with the following features for current measurement with external equipment such as Rogowski coils, DC current clamps and AC current clamps.

- 4 inputs for Rogowski coils Feature C40
- 4 AC Low level inputs for mini current clamps (0.5 VAC) Feature C44
- 4 DC Low level inputs for mini current clamps (5.6 VDC) Feature C45

Advantages of measurement via low level inputs are:

- Simple installation in switchgear also retrofitted.
- High frequency resolution for measurement according to VDE AR 4105 / 4110/4120 in the range 2-20 kHz.
- No separation of the current transformer circuits necessary.

It is imperative to ensure that the technical data of the equipment used is matched to the impedance conditions of the input configuration of the characteristic used!


(The exact technical data are described in chapter 5)

Recommended cable type for connecting the small signal inputs:

- Recommended cable type: STP shielded twisted pair!
- Maximum conductor cross-section: 1.5 mm
- Recommended minimum conductor cross-section: 0.2 mm<sup>2</sup>
- The maximum cable length should not exceed 20 metres.


#### Connection

The parameters 4-wire connection and 3-wire connection are valid for current measurement with C4X features as well as for C3X features.

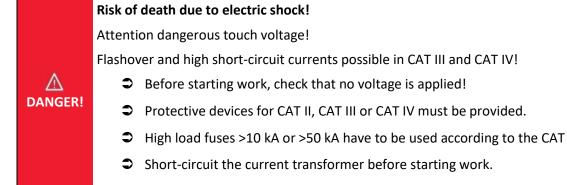

	Risk of electric shock!	
Δ	Make sure that all connecting cables are fixed and strain-relieved.	
WARNING!	All cable requirements of the terminal blocks must be observed. (e.g.	
	stripping length of cables)	



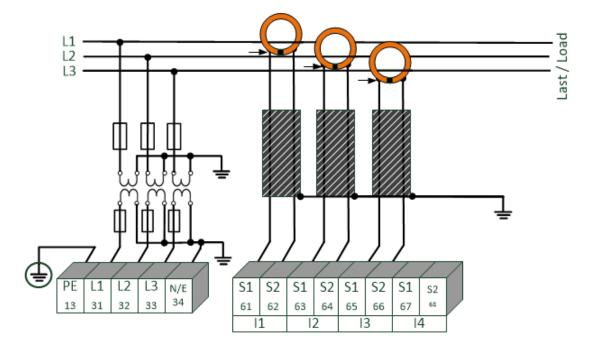

### 5.6.5.1 Connection of low level measurement inputs - feature C40 / C44 / C45


#### Example of PQI-DE connection with Rogowski coils in a 3-wire network

### **Connection PQI-DE low level inputs**

The shield of the converters used must be earthed in order to minimize stray influences!

**Feature C40:** The input is calibrated to 85 mV/A. When using other converter factors, the converter factor ratio must be set correctly.

The assignment between polarity and wire-color of the Rogowski coils from A.Eberle can be found in the technical datasheet of the coil. The technical datasheets are placed in the download center of power quality systems on the homepage of A.Eberle.

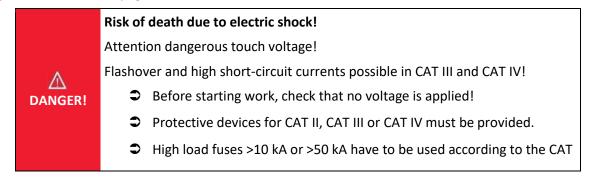

#### Toggle switch (un)balanced connection



By means of the toggle switches behind the current terminals the potential separation of the small signal inputs can be adjusted:

- To the left: Balanced
- To the right: Unbalanced




### 5.6.6 DC mains connection

Using the small signal converters for current measurement described in Chapter 5.6.5, it is generally possible to use the PQI-DE also in DC systems under the following conditions.


For DC voltage measurement, a difference must be made between symmetrically earthed and solidly earthed systems.

- For IT systems with high-impedance centre grounding, the device is designed for measurements up to ± 600 V, with more than ± 300 V an overvoltage protection is required to comply with the CAT III 600 V.
- For TN-S system, the device is designed for measurement up to 600 V.

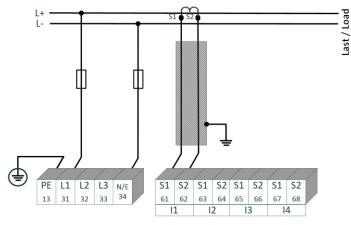

Example connection PQI-DEt with current transformer with small signal output (e.g. 4V)

Depending on the feature, the device is suitable for direct acting current transformers (e.g. open-loop Hall Effect current transformers) with an analogue output voltage up to  $\pm$  5.6 V (typically  $\pm$  4 V or  $\pm$  1 V). The measurable bandwidth on the device is DC...20 kHz. Shielding of the signal lines is recommended, but not absolutely necessary.

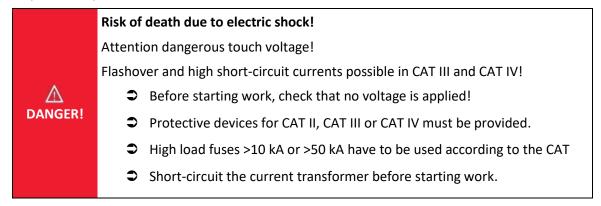

Risk of electric shock!
Make sure that all connecting cables are fixed and strain-relieved.
All cable requirements of the terminal blocks must be observed. (e.g.
stripping length of cables)

# 5.7 Additional interfaces

### 5.7.1 RS232 / RS485 Interfaces


The PQI-DE has two serial interfaces which can be used either as RS232 or RS485. The changeover and functions are determined by the parameterization via the WinPQ Lite software or the display.

### > The following functions are available:

- Modbus (RS232 / RS485)
- Time signals from various external timers' further information can be found in chapter 6.5.2

### 5.7.1.1 Connection and Termination RS232/RS485 Interface

	Interface	Terminal No.	function
-		77	RS485 Pos (A)
Term.		76	RS485 Neg (B)
		75	CTS
	COM 1 (X7)	74	RxD
		73	GND
1		72	RTS
Term.		71	TxD
		87	RS485 Pos (A)
		86	RS485 Neg (B)
		85	CTS
	COM 2 (X8)	84	RxD
<i>′</i> / <b>₊</b> ∰		83	GND
		82	RTS
		81	TxD

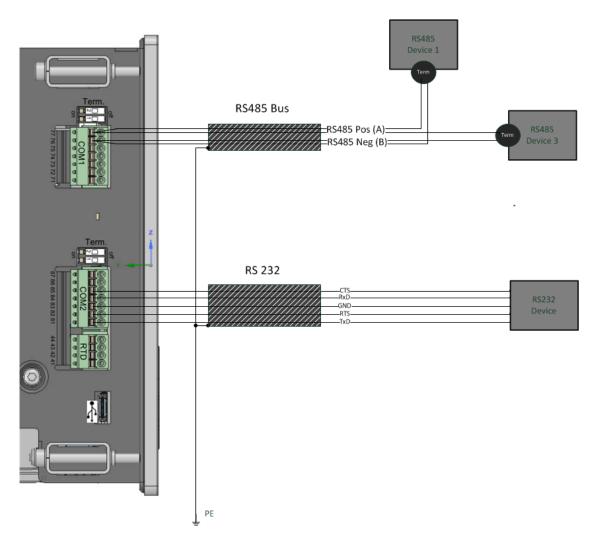

#### Wiring example PQI-DE COM interfaces!




Use a twisted shielded cable for the RS232 and RS485 interfaces. The shields of all cables must be connected to a voltage-free ground as close as possible to the device!

Please make sure that the maximum cable length of 1200 m for RS485 and 15 m for RS232 is not exceeded!

#### Termination RS485

The first and last station on the bus must be terminated. Dip switches "Term 1" for the Com 1 interface and "Term 2" for the Com2 interface is provided on the PQI-DE for this purpose. Bus termination is switched on with "ON

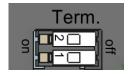

- Set both dips switches to ON:
- Bus termination is switched on
- Both dips switches set to Off:
- Bus termination is switched off



### 5.7.1.2 Connection of PQI-DE as Modbus Master in a bus

The measuring device can also function as Modbus RTU master in a bus. Notes on parameterization and operation can be found in 13.1.4 and 5.7.1.2. When setting up the bus, the following notes should be observed:

🕨 RS-485

- Max. 32 participants allowed (Gateway plus 31 RTU-Slaves)
- Connect wire RS-485A, RS-485B and GND (see chapter 5.7.1.1)
- 1 terminating resistor (120...150 Ohm) each at the beginning and end of the backbone
- Ground the shield of the cable on one side only (to PE)!
- Maximum length of the backbone: approx. 700m (at low baud rates also up to 1200m)

**RS-232** 

- Only 2 participants allowed (Gateway plus one RTU-Slave)
- Connect wires RXD, TXD and GND (see chapter 5.7.1.1)
- Ground the shield of the cable on one side only (to PE)!
- Maximum length approx. 20m

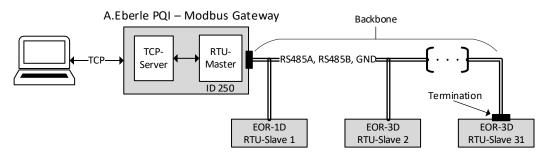


Figure 1: Exemplary connection of a RS485 bus with Modbus gateway


### 5.7.2 Temperature input PT100/PT1000

The PQI-DE has a temperature input for recording process temperatures. When connecting the sensor, please note that a shielded cable with twisted pairs of wires of the same length should be used. In addition, the total load of 1,9 k $\Omega$  including the thermocouple must not be exceeded.

The PQI-DE generally has three connection options:


### PT100 in 2-wire circuit

In a 2-wire circuit, the resistance of the supply line is included in the measurement as an error.

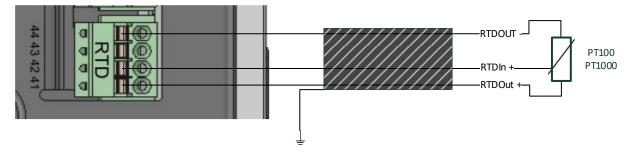


#### PT100 in 3-wire circuit

The influence of the line resistance is largely compensated by a 3-wire circuit.

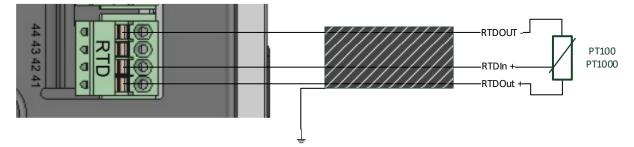

### PT100 in 4-wire circuit

The 4-wire circuit completely eliminates the influence of the connecting cable on the measurement result.

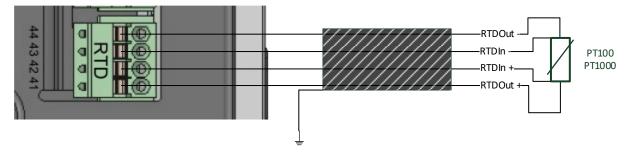




#### 5.7.3 **Differential current input**

The PQI-DE is equipped with a residual current input (RCM) for residual current monitoring on the rear panel. The input is suitable for alternating currents, for pulsating DC currents and for pure DC currents.


All external residual current transformers with a rated current of 30 mA can be connected to terminals 91 / 92.

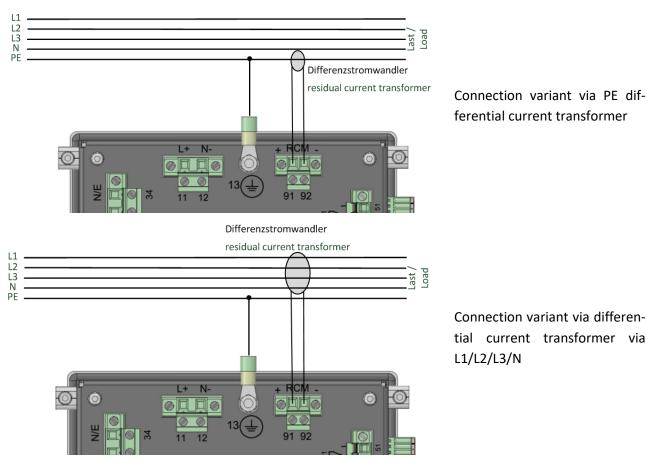

#### Differential current transformer connection

Connection variant via differential current transformer via

### 5.7.4 Output relays

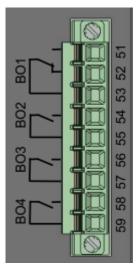

The functions of the output relays have been defined as follows:

- Relay B01 Watchdog relay
   Self-monitoring of the measurement device.
- Relay B02 B04 Reports new sequence of events recording .
   If a new event is captured relay B02 B04 is operated for one second.
   The settings are described in Chapter 7.4.5.4.

The binary outputs can switch AC loads directly up to the specified technical specifications! The connection is made directly via terminals X5! The terminal assignments are specified in chapter 5.4.

$\wedge$	Risk of electric shock!
DANGER!	Before starting work, check that there is no voltage!

Risk of electric shock!
Make sure that all connecting cables are fixed and strain-relieved.
All cable requirements of the terminal blocks must be observed. (e.g.
stripping length of cables)

Destruction of components due to overload!	
Only loads as specified in the technical specifications may be switched.	



### 5.7.1 Binary Inputs

The PQI-DE has eight binary inputs which can be assigned to the following functions:

- Recorder trigger
- Trigger Interval of power average values (see chapter: 7.5.3.7)
- For recording control

The binary inputs are designed for the voltage 48 - 250 V AC/DC - feature M1 and up to 24 V DC - feature M2, whereby the level detection is set to the following characteristic values:

Feature M1 (230 V inputs)

- High level > 35 V
- Low level < 20 V</p>

Feature M2 (24V - inputs)

- High level > 10 V
- Low level < 5 V</p>

$\wedge$	Risk of electric shock!
DANGER!	Before starting work, check that there is no voltage!

	Risk of	electric shock!
$\wedge$	€	Make sure that all connecting cables are fixed and strain-relieved.
WARNING!	€	All cable requirements of the terminal blocks must be observed. (e.g.
		stripping length of cables)

	Material damage due to connection
	Make sure that the supply voltage:
	Is inside the technical specification (chapter) is!
CAUTION!	Is correctly polarized!
	Does not exceed the permissible maximum voltage!

# 5.8 Measurement / Functions

PQI-DE complies with the automatic event detection and measurement standards, which are:

Standard	Description
EN50160	European power quality standard
IEC61000-2-2	EMC standards in low voltage grids
IEC61000-2-12	EMC standards in medium voltage grids
IEC61000-3-6/7	EMC standards in high voltage grids
IEC61000-2-4 (Class 1, 2, 3)	Industrial EMC standards
IEC61000-3-2/3	Limits for harmonic current emissions
NRS048/IEEE519	International power quality standards
IEC61000-4-30 Class A ed. 3	Methods of measuring power quality
IEC61000-4-7	EMC standards up to 18,6 kHz
IEC61000-4-15	Flicker measurement

### 5.8.1 Continuous Recording:

Five fixed and two variable measurement time intervals are available for continuous recording. All measured values can be freely activated or deactivated in the data classes. More detailed information about the available measurands per data class can be found in the technical datasheet.

- 10/12 periods (200ms)
- 1 sec
- n\*sec (can be set from 2 seconds to 60 seconds)
- 150/180 periods (3 secons)
- n\*min (can be set from 1 minute to 60 minute)
- 10 min
- 2 hrs.

### 5.8.2 PQ Events

trigger quantity	lower	upper
voltage dip (T/2)	$\checkmark$	
voltage swell (T/2)		$\checkmark$
voltage interruption (T/2)	$\checkmark$	
voltage rapid voltage change (T/2)	sliding averag mean +/- thre	
voltage change (10min)	$\checkmark$	$\checkmark$
voltage unbalance (10min)		$\checkmark$
mains signalling voltage (150/180T)		$\checkmark$
voltage harmonics (10min)		$\checkmark$
voltage THD (10min)		$\checkmark$
voltage short term flicker PST (10min)		$\checkmark$
voltage long term flicker PLT (10min)		$\checkmark$
power frequency (10s)	✓	✓



### 5.8.3 Recorder triggering

trigger quantity	lower	upper	step
r.m.s. phase voltages (T/2)	✓	✓	✓
r.m.s. phase-phase voltages (T/2)	✓	✓	✓
r.m.s. residual/neutral-ground voltage (T/2)		✓	✓
Positive sequence voltage (T/2)	✓	✓	
Negative sequence voltage (T/2)		✓	
Zero sequence voltage (T/2)		✓	
Phase voltage phase (T/2)			✓
phase voltages wave shapes (wave shape filter)			
phase-phase voltages wave shapes (wave shape filter)	+/- threshold		
residual/neutral-ground voltage wave shape (wave shape filter)			
r.m.s. phase currents (T/2)	✓	$\checkmark$	$\checkmark$
r.m.s. total / neutral current (T/2)		$\checkmark$	$\checkmark$
Power frequency (T/2)	✓	✓	✓
Binary inputs (debounced)	rising, falling slope		
Command	external		

Command

external

### 5.8.4 Memory management

The PQI-DE is equipped with one gigabyte of internal memory and intelligent memory management. This ensures that the oldest data records are always overwritten by the most current data according to the First in First out principle (FiFo).

By default, the measuring device is divided into two memory areas:

- Continuous measurement data with 50% of the total memory
- Fault record and events and other asynchronous measurement data



In the standard parameterization with approx. 800 measured variables in the 10 min data class, the device is able to continuously and seamlessly record all 800 measured variables such as current, voltage, harmonics and power over 140 weeks.

#### Memory allocation

The memory distribution of the PQI-DA smart uses the internal 1 GB memory in a circular ring buffer for all measurement data.

The circular buffer is divided as follows:

- 512 MB circular memory for long-term measurement data
- 320 MB circular memory for disturbance records (oscilloscope images; ½ periods RMS values)
- 16 MB circular memory for log files and power quality events

In addition, a maximum of 512 files can be saved in each circular memory area.



It is possible to change the memory allocation using parameters. Please contact the support of A.Eberle.

### 5.8.4.1 Memory Expansion with SD Card

If a SD-card is inserted in the device, you have to choose between different methods of using the SD-card.

- Copy all data of the last 7 days
- Copy all data of the last 30 days
- Copy all data a complete snapshot of the whole internal memory
- Circular (ext.) = the SD-card will stay in the device and will be filled in a circular memory. If the SC-card is bigger than one gigabyte, the time period of the SD-card is much longer than into the PQI-DE. (extended Memory)


SD Sync method	1/4
7 days	
30 days Snapshot	
circular (ext.)	

Confirm with "OK" and the PQI-DE will start automatically to copy the selected internal memory onto the SD card.



The minimum size of an external memory card is 1 GB. The device can manage memory cards up to a max of 32GB.

In the display menu Memory the progress of the copy process is shown.

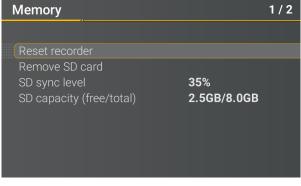

**T**o remove the memory card, operate the "Remove SD card "function.

The "Remove SD card" function stops the copying function for the measuring data of the internal memory to the SD memory card and releases the card for removal.

	Data loss! Defect / loss of data due to incorrect operation
NOTICE	Before removing the SD card, the "Remove SD card" function must
	be activated to ensure that no data is lost!



# 6. Operation of the PQI-DE

# 6.1 Getting started

When the power analyser PQI-DE is put into operation for the first time, the instrument will appear in a guided "Wizard " mode. The operator is automatically guided through the initial commissioning of the instrument. This Wizard <u>must</u> be performed once after the PQ meter has been fully connected.



It is recommended to perform the wizard only after all wiring has been completed so that no incorrect measurement data is recorded due to the absence of measurement voltage, currents or parameters that have not been entered.




Since firmware version 2.0 the recording of the measurement data is only started after the complete completion of the wizard!

# 6.2 Initial Setup - Operation of the Assistant

The following actions can be performed using the navigation cross on the PQI-DE:



```
    Arrow key right / down:
    Continue in wizard
    Arrow key left / up:
    Back in wizard
```

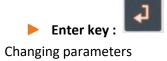

### 6.3 First commissioning - wizard - procedure

### 6.3.1 Wizard setting Language

Setup wizard	
Language	
English	<ul> <li>Selection of display language PQI-DE</li> </ul>


### 6.3.2 Wizard setting Power Quality standard

Setup wizard	
PQ standard	<ul> <li>Selection of the Power Quality standard</li> </ul>
EN50160-LV	Press the key to switch between the following PQ standards.
PQ standard 1/3	<ul> <li>Low-voltage grid – TN system =&gt; EN50160-LV</li> </ul>
EN50160-LV	Low-voltage grid – IT system => EN50160-LV-IT
EN50160-MV EN50160-HV	<ul> <li>Medium-voltage grid =&gt; EN50160-MV</li> </ul>
	<ul> <li>High-voltage grid =&gt; EN50160-HV</li> </ul>

Automatic basic settings and limit values for the following voltage level according to EN50160:

The selection of the voltage level has an influence on which measures should be recorded, on the thresholds and also at the IEC61850 Interface which data can be used at IEC61850 Interface.

### 6.3.3 Wizard setting Net type

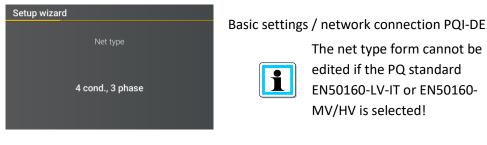

### For more information about the network connection, see Chapter 5.6.

Net Type:

Entering the grid type "3-conductor grid", "4-conductor grid" and/or "4 x 1 conductor grid" will determine how the Power Quality events are recorded.

Switch between 3-conductor and 4-conductor grids.




- In a 3-conductor grid, all events are calculated from the line-line voltages.
- In a 4-conductor grid and/or a 4 x 1 conductor grid all Power Quality events are determined from the line-earth voltages.

### 6.3.4 Wizard setting Net frequency



### 6.3.5 Wizard setting Voltage Transformer

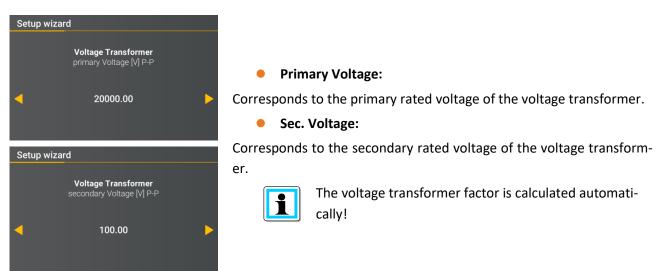



If Power Quality standard for low voltage network (EN50160-LV & EN50160-LV-IT) is selected, the page voltage transformer is skipped, because the device can cover the complete range without transformer settings. Therefore, no input is necessary, as no voltage transformer factor has to be calculated.

### 6.3.6 Wizard setting Voltage Grid




### Reference voltage in low voltage

Setting the reference voltage in the low voltage – TN system as conductor-earth voltage in volts and in the low voltage - IT system or medium and high voltage as conductor-conductor voltage in volts.




The non-editable parameters are calculated automatically.

#### 6.3.7 Wizard setting Current Transformer

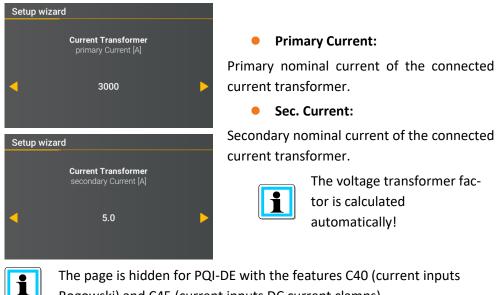


Rogowski) and C45 (current inputs DC current clamps).

#### Wizard setting Transformer Factor Equipment 6.3.8

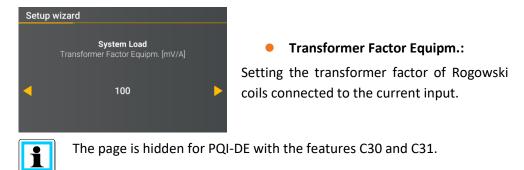

#### Wizard setting Rated Current 6.3.9

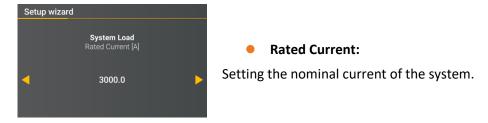




After the commissioning wizard has been completed, the conversion factor of the flags C40/44/45 is shown with the reciprocal value in the display and the software. For conversion, see section 7.4.3.5.



### 6.3.10 Wizard setting Date, Time and Timezone

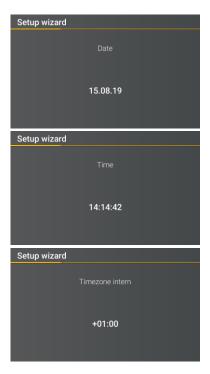


Manual entry of date and time as local time. Furthermore the local time zone must be entered and if the device should calculate the changeover for summer / winter time by its own



In the factory setting, the device is set to time zone UTC+1 with automatic winter time changeover. The time zone and summer/winter time changeover must be adapted to local conditions. According to IEC61000-4-30, an external synchronization source such as NTP / DCF77 / GPS is required.


### 6.3.11 Wizard setting Interface

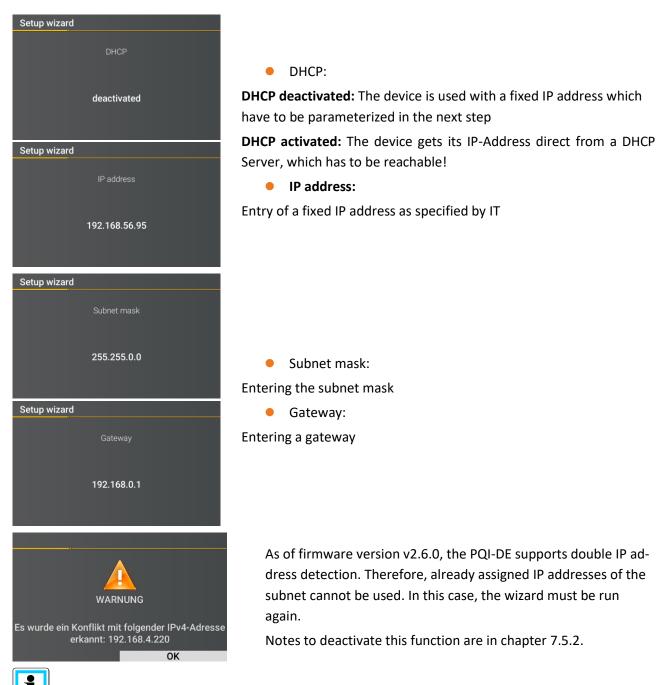

In the factory setting, the PQI-DE is factory pre-set with the IP address 192.168.56.95 and the subnet mask 255.255.0.0.



### 6.3.12 Wizard setting Security Mode

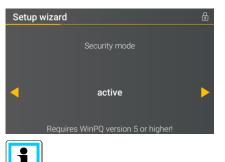

In any case, make a note of the serial number of your measuring instrument!

When the SD card is inserted, an identification file with the required certificates for the recognition of the device is stored in the root directory of the SD card when the device is restarted



The separate security documentation for administrators describes all security-relevant system settings for setting up and operating the device and the entire PQ system (requirement of the BDEW Whitepaper).

### Security Mode

### Active: high security mode

The device is set up in security mode. Communication is encrypted and device access is protected. The completion of the commissioning in security mode requires the setup of the necessary user accounts and must be completed with the software WinPQ or WinPQ lite with version 5.0 or higher. All details on encryption technology etc. are described in the security documentation.


### Inactive compatible mode

The installation of devices in compatibility mode results in a non ITsecure operation of the measuring device, if no other measures for the encryption of the connection are available in the used network (e.g. VPN solutions with encryption / disconnected network or similar), because neither the communication between WinPQ software and the PQ device is encrypted nor the device access is protected. This mode is intended for compatibility with WinPQ systems smaller than version 5 and systems with WinPQ versions 5 or higher should be operated in high security mode.

In the active security mode it is recommended to password the display in addition to the encryption.

Lock menu	
Menu password	
0000	

### 6.3.13 Wizard End of commissioning

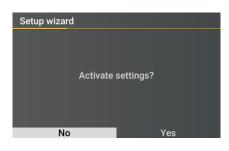

### • Accept settings:

At this point all settings for the device can be accepted or the setup wizard can be cancelled.

If the wizard is aborted, the wizard will appear again and again each time the device is restarted because the necessary basic settings have not been made.

With the confirmation "Yes".

- restarts the device,
- the device accepts all changes,
- the device deletes all old measurement data in the device memory,
- many parameters are reset to factory settings.

The measurement campaign is started after the restart, all recorders are active.



## 6.4 Display

The colour display of the device provides information about the correct connection of the measuring cables and transducers and shows online data for voltages, currents, total harmonic distortion (THD), power values and energy. As well as the bar graphs for voltage and current harmonics.



Pressing the "right" and "left" keys on the keypad will change the side of the numeric display.



Pressing the "up", "down" keys on the keypad switches to the graphical display pages. By pressing the "right", "left" keys on the keypad, the page of the graphic display changes.

If no key is operated, the screen will switch to sleep mode after 5 minutes.

### 6.4.1 Numerical display

The following screens provide online information of the measured data in numerical form:

Display	page	1
---------	------	---

U, I, P				
	L1	L2	L3	N/Σ
UN	0.07 <b>9</b>	0.053	0.053	0.052
[/	25.99	68.58	26.32	98.23
P [M	/ - <b>0.289</b>	+0.424	-0.215	-0.080
THD U 🕅	0.000	0.000	0.000	0.000
THDI 🕅	0.000	0.000	0.000	0.000
F (H;	z] <b>0.000</b>			

- Conductor-earth Voltages
- Currents L1, L2, L3, N conductor
- Active power with sign (+/-)
- Distortion factor of voltages and currents (Total Harmonic Distortion)
   The THD calculation H2 to H40 or
  - H2 to H50 is adjustable.
- Mains frequency

### Display page 2

<b>U</b> c-c				
		L12	L23	L31
U	[V]	0.054	0.013	0.045
Extreme	e values U C-C	[10min]		
Umax 7d	[V]	0.064	0.020	0.051
Umin 7d	[V]	0.051	0.008	0.039
Umax	[V]	0.064	0.020	0.051
Umin	[V]	0.000	0.000	0.000

#### **Display Page 3**

P, Q,	S				
		L1	L2	L3	Total
S	[VA]	2.328	3.651	1.430	7.376
Q	[VAR]	2.321	3.646	1.408	7.375
Р	[W]	+0.175	+0.198	-0.249	+0.125
D	[VAR]	2.321	3.646	1.408	7.375
PF		1.000	1.000	1.000	1.000
COS	phi	1.000	1.000	1.000	1.000

#### **Display Page 4**

Active and reactive	energies	RCM 😑
		Total
Active energy	[kWh]	900.00
Active energy in	[kWh]	1000.00
Active energy out	[kWh]	-100.00
Reactive Energy	[kVARh]	25.00
Reactive energy in	[kVARh]	25.00
Reactive energy out	[kVARh]	0.00

- Conductor-conductor voltages
- Extreme values conductorconductor voltage of the selected data class in the following periods
  - 7 days
  - Total measuring period, since the last reset

The desired data class must be set via the setup display or the software (see section 6.5.4 Basic settings or section 7.5.3.9 Statistics)! The setting made is identical for all statistical values (maximum voltage value, minimum voltage value and maximum current value).

The extreme values can be reset via the display

- S:Apparent power
- Q: collective reactive power (unsigned)
- P: Active power
- D: Distortion reactive power
- PF: Power factor
- Cos phi: cos Phi
- Total active energy
- Active energy related (positive sign)
- Active energy supplied (negative sign)
- Total reactive energy
- Reactive energy referred (positive sign)
- Reactive energy supplied (negative sign)



### **Display Page 5**

Imax [10min]					
		L1	L2	L3	N/Σ
I	[A]	0.000	0.000	0.001	0.001
Imax 1d	[A]	0.000	0.000	0.001	0.001
Imax 7d	[A]	0.001	0.001	0.003	0.002
Imax 30d	[A]	0.001	0.001	0.003	0.002
Imax	[A]	0.001	0.001	0.003	0.002


- Current and current maximum of the selected data class in the following periods:
  - of the last day
  - of the last 7 days
  - of the last 30 days
  - of the total measuring time •

1 The extreme values can be reset via the display

### **Display Page 6**

RCM		RCM 😑
IR [mA]		0.000
Warning threshold	[mA]	10.00
Alarm threshold	[mA]	18.00

- IR: Residual Current in [mA]
- Warning threshold: Threshold for state Warning in [mA]
- Alarm threshold: Threshold for state Alarm in [mA]

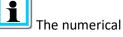

The numerical display only appears, if the function RCM is active.

### **Display Page 7**

Recorder			
	1T	7T	30T
Oszilloskop	0	0	0
RMS	0	0	0
PQ-Events	126	816	3432

The number of PQ events, oscillographs and RMS records that occurred for the last day, week and month appear on the instrument display.



The break of the event counters is at 24:00 hrs at the change of day.

#### **Display page 8**

Device information	
Firmware	2.1.0
Build	14057
Date	15.08.19
Time	14:22:54
S/N	19025758
A/N	1197801

Current firmware for PQI-DE / Device date and time.

### **Display page 9**

# Licence information Sampling rate 40 kHz SCADA SCADA IEC60870-5-104 IEC61850

Display information about the license of this device.

In this example the PQI-DE has no IEC61850 communication licensed.

### Display page 10

### Security

RSA2 Fingerprint (md5) 79:c4:3f:b5: 0d:ac:a3:85: 7d:83:fa:3b: 7f:c1:fe:5e

ECDSA Fingerprint (md5) ac:52:9a:65: cd:e0:fa:6d: 8c:6c:d1:78: a0:93:c4:4d **SSH RSA Fingerprint** of the Puplic Key of the PQI-DEs for verification of the connection via the software WinPQ lite / WinPQ.

**SSH ECDSA Fingerprint** of the Puplic Key of the PQI-DEs for verification of the connection via the software WinPQ lite / WinPQ. Elliptic Curve Digital Signature Algorithm (ECDSA)



### 6.4.2 Graphical display


Press the "right" and "left" keys on the keypad to switch to the selection menu of the graphic display. With the keys "left", "right" on the keypad the measured variable can be selected and with the "Enter" key it can be activated or deactivated. The "down" key on the keypad is used to switch to the bar chart. The desired harmonic can be selected with the "left", "right" keys. By pressing the "Enter" key, the measurement data of the selected harmonic is displayed below the legend. The selected harmonic is

marked by a dot below the bar chart. Press the "Return" key to exit the selection menu.


### 6.4.2.1 Bar graph harmonics

The following screen pages provide online information of the measured data in graphical form:

### Display page 1

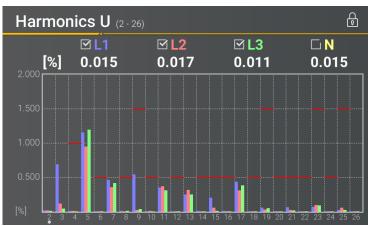

### Display page 2

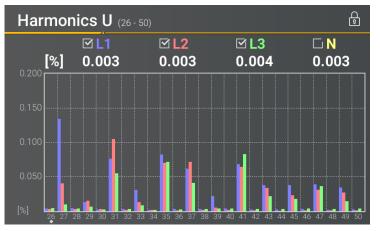

The presentation of the bar graphs depends on the selected network type:

- Net type 4-wire: Bar graphs voltage harmonics H2 - H26 for L1, L2, L3 and N.
- Net type 3-wire: Bar graphs voltage harmonics H2 - H26 for L12, L23 and L31.


The red limit lines symbolise the limit value of the respective voltage harmonics according to EN50160.

The presentation of the bar graphs depends on the selected network type:

- Net type 4-wire: Bar graphs voltage harmonics H26 – H50 for L1, L2, L3 and N.
- Net type 3-wire: Bar graphs voltage harmonics H26 – H50 for L12, L23 and L31.


The red limit lines symbolise the limit value of the respective voltage harmonics according to EN50160.

### Display page 3

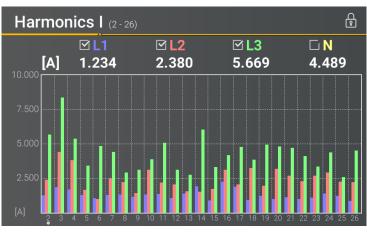


 Bar graphs current harmonics H2 - H26

### Display page 4

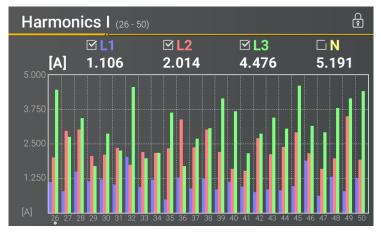

 Bar graphs current harmonics H26 – H50

### Display page 5

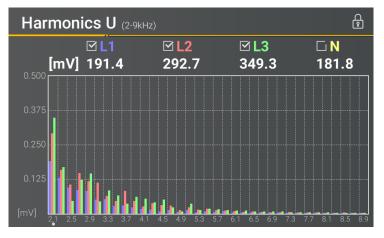


 Bar graphs Voltage harmonics 2 - 9 kHz.

The bar graphs for the frequency bands 2 - 9 kHz are only displayed with device option B1.




### Display page 6

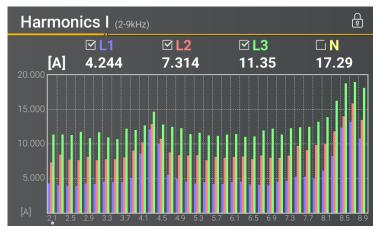

 Bar graphs current harmonics 2 - 9 kHz.

The bar graphs for the frequency bands 2 - 9 kHz are only displayed with device option B1. 6.4.2.2 Section detailed information

### Display page 1

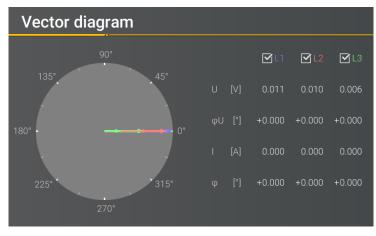

### Display page 2: States of binary inputs and outputs

S	State of binary inputs/outputs			P
		Binary input	Binary output	
	1	🔵 off	🔶 on	
	2	🔵 off	🔵 off	
	3	🔵 off	🔵 off	
	4	🔵 off	🔵 off	
	5	🔵 off		
	6	🔵 off		
	7	🔵 off		
	8	🔵 off		

- Voltage vector U1E, U2E, U3E.
- Current vector I1, I2, I3

Additionally numeric display:

- Phase angle of the respective voltage vector
- Phase shift current-voltage

- State of eight binary inputs
- State of four binary outputs

### Display page 3: Level time diagram of residual current measurement

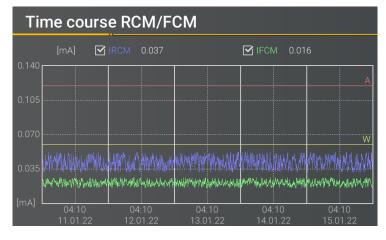


Diagram of the residual current (RCM) and fault current (FCM) over the last 7 days Selectable curves:

- Residual current (I<sub>RCM</sub>)
- Fault current (I<sub>FCM</sub>)

Thresholds:

- Warning threshold
- Alarm threshold



#### 6.4.3 Pop-up display for residual current measurement messages

According to DIN EN 62020, the task of a residual current monitor (RCM) is to monitor an electrical installation or circuit for the occurrence of a residual current and to indicate by means of an alarm if this exceeds a specified value.


In the following, the different pop-up displays implemented for the RCM function are described in this chapter. Please also refer to the white paper "Residual current measurement" from A. Eberle GmbH.



Chapter 6.5.2, chapter 0, chapter 7.5.3.6 and chapter 7.5.3.8 described the parameterisation of the RCM function is in detail.

#### 6.4.3.1 **Pop-up Display Alarm Message**

### Pop-up Display Alarm Message

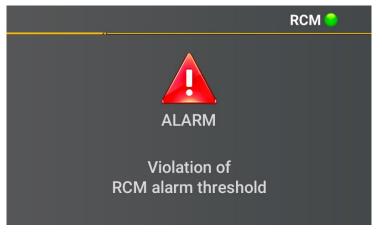

If the set alarm threshold is exceeded (see chapter 6.5.2), a visual alarm message must appear on the display according to DIN EN 62020.

Ĭ In addition to the visual signal, a binary output can be switched, e.g. to give an acoustic signal. Chapter 7.5.3.6 described the parameterisation of the binary output.






Press the "Enter" key on the keypad to switch to the acknowledgement menu for the

alarm message.

### Acknowledgement menu for the Alarm Message

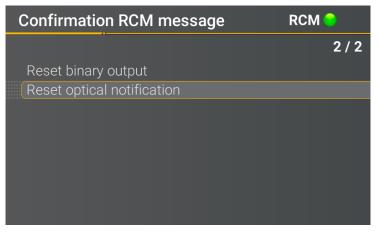

In this display, you can reset the optical message and the binary outputs.

According to DIN EN 62020, the optical signal can only be reset when the alarm threshold is no longer violated.

### 6.4.3.2 Pop-up Display Warning Message

### Pop-up Display Warning Message



If the set warning threshold is exceeded (see chapter 6.5.2), a visual alarm message must appear on the display according to DIN EN 62020.

In addition to the visual signal, a binary output can be switched (see chapter 7.5.3.6).



alarm message.

### Acknowledgement menu for the Warning Message

Confirmation RCM message	RCM 😑
	2/2
Reset binary output	
Reset optical notification	

In this display, you can reset the optical message and the binary outputs.

According to DIN EN 62020, the visual signal can be reset at any time, even if the warning threshold is still violated.

The warning message can be automatically reset when the value falls below the warning threshold. Chapter 7.5.3.8 described the parameterisation required for this.




#### 6.4.3.3 Pop-up Display Error Message

#### Pop-up Display Error Message



If an error occurs (e.g. wire breakage in the differential current transformer) an error message is displayed.

In addition to the visual signal, a binary output can be switched (see chapter 7.5.3.6).

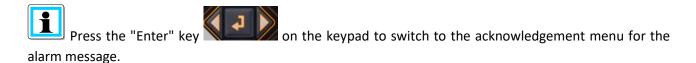

#### Acknowledgement menu for the Error Message

Confirmation RCM message	RCM 😑
<u>^</u>	1 / 2
Reset binary output	
Deactivate RCM function	

In this display, you can disable the RCM function until the error is corrected. The binary output can also be reset.

After deactivating the RCM function, the PQI-DE restarts.

i

The error message is automatically reset when the error is corrected.

# 6.5 Setup display

Pressing the key on the keypad will change the display to the setup menu.

The following main menus are available in setup mode:

Setup	RCM 😑
	2 / 8
Parameters	
RCM	
Time setup	
Basic setting	
Memory	
Interface config.	
SCADA	
Display	

# 6.5.1 Parameter

#### Parameter page 1

Parameters	1 / 8
Net type	4 cond., 3 phase
Net frequency [Hz]	50
Voltage transducer	1.00
Current transducer	1.00
Nominal Voltage [V]	230.0
Reference voltage [%]	100.000
Reference voltage [V]	398.37
Nominal current [A]	5.0

## Net type

Entering the grid type "3-conductor grid", "4-conductor grid" and/or "4 x 1 conductor grid" will determine how the Power Quality events are recorded.

#### We take care of it.



Net type	1/3
4 cond., 3 phase	
4 cond., 1 phase	
3 conductors	

Switch between 3-conductor and 4-conductor grids.

- In a 3-conductor grid, all events are calculated from the line-line voltages.
- In a 4-conductor grid and/or a 4 x 1 conductor grid all Power Quality events are determined from the lineearth voltages.

#### Grid frequency

Setting grid frequency to 50 Hz or 60 Hz. When used in DC networks, this parameter can be ignored.

#### Voltage converter

Corresponds to the ratio between the primary and secondary voltage.

**Example:** Voltage: primary = 20,000 V / secondary = 100 V; conversion factor = 200

#### Current transformer

Corresponds to the ratio between the primary and secondary current.

**Example**: Current: primary = 100 A / secondary = 5 A; conversion factor = 20

#### Nominal Voltage / Reference Voltage

The displayed value for the nominal voltage is:

- In a 4-conductor grid = 230 V line-earth voltage
- In a 3-conductor grid it corresponds to the set primary value of the voltage transformer The % value is used to set the reference voltage at a different value to the nominal voltage.



**Example 1:** 20,000 V \* 105% = Reference voltage of 21,000 V. This is the reference value for all trigger thresholds as well as Power Quality events.

Example 2: 500 V grid (line-line): 230 V \* 125% = 287.5 V (line-earth)

Nominal Current

The nominal current corresponds to the set system current from the commissioning wizard (see chapter 6.3).



Reference channel		
Parameters		6/8
Reference channel	U1N	
Power measurement	Standard	
Flicker calc.	230V	

#### Reference channel:

Defines the measuring channel for frequency measurements and grid synchronization.

#### **Power measurement:**

The power calculation in the device firmware can be selected from two measuring functions:

- Power calculation in accordance with DIN 40110, part 2 including the calculation of the imbalance reactive power (factory setting for the device).
- Simplified power calculation without considering the imbalance reactive power in the three phase power.

i

This setting has an impact on the measured power values on the device display, the online measured values and the recorded measured values.

# 6.5.2 Residual Current Measurement / RCM

The RCM function is disabled by default. By pressing the "Enter" key

y the function can activated.

RCM		RCM	
	1 / 10		9 / 10
State	activated	RCM state change delay [s]	3
Transformer factor residual current	600.00	Acknowledge all binary output	
Selected observed current	IRCM		
Rated response residual current IRN [mA]	300.00		
Residual current warning threshold [mA]	150.00		
Residual current alert threshold [mA]	300.00		
Slope rising line [mA/kW]	100		
Maximum threshold current [mA]	600.00		



When the RCM function is activated, the long-term recording and the fault record in case of overcurrent of the residual current are also activated automatically (see chapter 7.5.3.6 and chapter 7.5.4).



#### Transformer Factor Diff.Current

Parameterisation of the transformer factor of the installed differential current transformer.

When using the residual current transformer with part number 111.7097.020, the following transformer factor residual current must be set:

600

#### Selected observed current

Selection whether the differential current (IRCM) or the fault current (IFCM) is to be monitored.

#### Rated Threshold Current [mA]

Setting of the rated response differential current at which the RCM must respond under specified conditions.

According to DIN EN62020, preferred values of the rated differential response current are:

0,006 - 0,01 - 0,03 - 0,1 - 0,3 - 0,5 A

Warninig Threshold mA]

Definition of the warning threshold

#### Alarm Threshold [mA]

Definition of the alarm threshold

#### Slope rising line [mA/kW]

Optional definition of a coefficient for a linear slope of the thresholds. A detailed explanation can be found in section 7.4.9.

#### Maximum threshold current [mA]

Determination of the maximum threshold current when using the linear rise line.

#### State Change Delay [s]

Set a time delay between RCM state changes.

#### Reset all binary outputs

Reset all binary outputs to the initial state. The parameterisation of the binary outputs is described in chapter 7.5.3.6.



The PQI-DE restarted after activating the RCM function. The residual current measurement starts

automatically after the restart. This can be seen from the visualisation **RCM** in the unit display.

# 6.5.3 Time settings

The PQI-DE has various possibilities to synchronize the time in the device to the world time clock. A.Eberle recommends in any case to select a high-precision time synchronization variant and also to consider the quality of the time signal.

## 6.5.3.1 DCF77 time settings

The meter can obtain the time via an external DCF 77 clock (Germany / Austria restricted / Switzerland restricted). The following settings must be made in the menu.

Time setup	1/5	
Time protocol advanced	DCF77	
Time one intern DST	+01:00 INT	Time synchronization to an external DCF77 radio-controlled clock
DST hange Dato Tim	15.08.19 15:16:04	
DCF77 setup	1 / 2	
DCF77 setup	1 / 2 RS232	
<u>`</u>		DCF77 settings on the RS232/RS485 interface and the time zone of the DCF signal.



# 6.5.3.2 Connection DCF77 GPS Clock

It is recommended to use the COM2 interface as time synchronization interface.

To control the DCF clock Art. No. 111.9024.01 to the PQI-DE, the following wiring is necessary:

	Com	clamp	function	DCF Clock Wires Description
Term.		77	RS485 Pos (A)	
		76	RS485 Neg (B)	
		75	CTS	
	COM 1 (X7)	74	RxD	
		73	GND	
Term.		72	RTS	
		71	TxD	
		87	RS485 Pos (A)	
		86	RS485 Neg (B)	
		85	CTS	
	COM 2 (X8)	84	RxD	green wire of DCF - clock = clock signal
)		83	GND	white wire of the DCF - clock = GND
		82	RTS	red wire of the DCF - clock = +6V
+ <u>1997</u>		81	TxD	black wire of the DCF - clock = -6V

- In extended mode, parameterize interface type RS232
- Time zone external: + x hours for time zone (time of data shown in the software)
- Time zone internal: + x hours for time zone (time of the PQI-DE display)

## 6.5.3.3 Manual time setting

Time setup	1 / 6
Time protocol	Manual
Timezone intern	+01:00
DST	INT
DST change	
Date	15.08.19
Time	15:17:05

• Time protocol:

**Manual:** The time setting is carried out manually on the device.

Internal time zone:

Defines the time zone in which the device is located.

DST

**INT**: the time zone is calculated by the device itself with the parameters stored in the device.

**OFF**: Summer/winter time setting is switched off.

- Date: Input of the local date
- Manual entry of the current date (local time)
- Time: Entry of the current local time



The PQI-DE internally converts the times into the UTC format using the times entered and the time zones entered. All stored measured values are in UTC.

It is therefore recommended to enter the time zones correctly!

#### 6.5.3.1 Summer- Wintertime change (DST – Daylight Saving Time)

If the DST operating mode is set to internal, the summer/winter time changeover inside the PQI-DE takes place automatically each year. The PQI-DE uses an internal algorithm with the following three parameters:

DST change	6 /	6
Winter to summer		
Date	25.03.	
Time	02:00	
Day of week	Sunday	
Summer to winter		
Date	25.10.	
Time	03:00	
Day of week	Sunday	

Menu for setting the parameters for summer time changes.



- **Day and month**: This is not specifically the date/month of the next change, but rather a method to specify **the week** in the month that the change is to occur on. Refer to the following examples.
- Weekday: The day of the week that the changeover always takes place on.
- **Time**: Time that the changeover will occur (the start of the changeover).

#### Example 1: Europe – Germany

The changeover from **summer to wintertime** always takes place on the last Sunday in the month of October at 03:00 with the time changing back to 02:00 hrs.

The changeover from winter to summertime always takes place on the last Sunday in March at 02:00 with the time changing forward to 03:00 hrs.

	Summer to wintertime	Winter to summertime
Date and Month :	25.10	25.3
Day ::	Sunday	Sunday
Time :	03:00	02:00

These parameters cause the PQI-DE to:

Change from daylight savings at 3 am on the Sunday that occurs **on or after** the 25.10, i.e.: The first Sunday that occurs **on or following** the 25<sup>th</sup> of the month. As there are 31 days in October, the Sunday occurring **on or after** the 25<sup>th</sup> will always be the last Sunday of the month of October.

Change to daylight savings at 2 am on the Sunday that occurs **on or after** the 25.3, i.e.: The last Sunday of the month of March.

#### Example 2: Australia – New South Wales

The changeover from **summer to wintertime** takes place on the first Sunday in the month of April at 03:00 with the time changing back to 02:00 hrs

The changeover from **winter to summertime** always takes place on the first Sunday in the month of October at 2:00 with the time changing forward to 03:00 hrs.

	Summer to wintertime	Winter to summertime
Date and Month :	1.4	1.10
Day :	Sunday	Sunday
Time :	03:00	02:00

These parameters ensure for all future years that the changeover from summer to wintertime is always performed automatically by the PQI-DE on the first Sunday **on or after** 01.4 and the change from winter to summertime is always performed on the first Sunday **on or after** 01.10.

# 6.5.3.2 NTP time setting

The PQI-DE has the possibility to synchronize itself with the Network Time Protocol (NTP) to an existing NTP server in the network. The used NTP server should be able to deliver a high time signal quality. Synchronization to SNTP server is possible, but not recommended due to high inaccuracies.

Time protocol: 1/5 Time setup NTP: The time setting is carried out via an NTP server in the network. Time protocol NTP Timezone intern +01:00 With a click on "extended" the NTP servers DST INT can be entered. DST change 15.08.19 15:19:26 The PQI-DE supports up to four time servers NTP setup 1/8 in the network. The device automatically uses the NTP server with the highest accuracy. Time server 1 IP 0.0.0.0 Time server 1 IP: 123 Time server 1 Port Time server 2 IP 0.0.0.0 Entering the IP address of the time server Time server 2 Port 123 Time server 1 port: Time server 3 IP 0.0.0.0 Enter the network port under which the de-Time server 3 Port 123 vice can reach the NTP server. 0.0.0.0 Time server 4 IP Time server 4 Port 123



The port for the NTP server is, by default, "123" NTP and must be accessible from the device to the NTP server.



It is recommended to use an NTP server with a stratum of at least 8. All NTP servers with a higher stratum are ignored by the device.

See also: <u>https://de.wikipedia.org/wiki/Network\_Time\_Protocol</u>



# 6.5.3.3 NMEA-ZDA time setting

Time setup		1/5
4		
Time protocol	NMEA:ZDA	
	.01.00	
Timezone intern DST	+01:00 INT	
DST change		
Date	15.08.19	
Time	15:20:28	
MEA setup		1 / 2
NMEA protocol	RS232	
PCM protocol	RS232	

Setting up the RS232/RS485 interface for NMEA protocol

# 6.5.3.4 NMEA-RMC time setting

Time setup		1 / 5
Time protocol	NMEA:RMC	
	.01.00	
Timezone intern DST	+01:00 INT	
DST change		
Date	15.08.19	
Time	15:21:14	
NMEA-Einstellungen		1 / 2
NMEA-Protokoll	RS232	
PCM-Protokoll	RS232	

Setting up the RS232/RS485 interface for NMEA protocol



## 6.5.3.5 IRIG-B time setting

Time codes between instrument groups, commonly known as IRIG time codes, are standard formats for transmitting time information. Atomic clock standards and GPS receivers designed for precise timing are often equipped with an IRIG output.

The PQI-DE has with the COM 2 interface a possibility to use the precise IRIG B format for time synchronization.

On the PQI-DE, the correct format IRIG-BXX0..3 or IRIG-Bxx4-7 must be selected, as well as the time zone of the synchronised time, so that the PQI-DE can internally store the measurement data with a correct UTC time stamp.

#### IRIG-B formats 0 to 3

#### IRIG-B formats 4 to 7

Time setup	1 /	Time setup	1 /
Time protocol advanced Timezone intern DST DST change Date Time	IRIG-Bxx03 +01:00 INT 15.08.19 15:22:36	Time protocol advanced Timezone intern DST DST change Date Time	IRIG-Bxx47 +01:00 INT 15.08.19 15:23:17
IRIGB setup	1 /	IRIGB setup	1 /

- Selection of the IRIG-B format
- Setting up the COM 2 interface and time zone sent from the external IRIG B clock

# 6.5.3.6 IEEE 1344 time setting

IEEE 1344 is a standard that defines parameters for synchrophasors for energy systems. The standard extension of the IRIG-B time code includes year, time quality, summer time, local time offset and leap second information.

In addition to the IEEE1344 protocol, the interface must also be selected on the PQI-DE, as well as the time zone of the synchronized time, so that the PQI-DE can internally store the measurement data with a correct UTC time stamp.

Time setup	1 / 5	
Time protocol advanced Timezone intern DST DST change Date Time	IEEE1344 +01:00 INT 15.08.19 15:23:48	Time synchronization to an IRIG-B time proto- col (in accordance with IEEE1344)
IEEE1344 setup	1 / 2	
IEEE1344 setup Interface type	1 / 2 RS232	
		Setting up the interface and the time zone



# 6.5.4 Basic setting

Basic setting	1 / 8
Language	English
Wizard	
Menu password	0000
Lock menu	
Drag indicator	10min
Reset events	
Reset energy counter	
Reset Imax	

- Language: Select the display language
- Wizard: This function takes you through an automatic device setup. This function is started automatically when the device is put into operation for the first time and does then not appear again. You can go to the guided setup at any time via "Auto Setup".



When automatic setup is performed, all the data saved on the meter is deleted. In addition, the complete set-up is reset to the factory state, except for the changes made in the wizard itself.

- **Menu password**: Access to the device setup can be blocked via a 4-digit password (describtion see chapter 6.5.4).
- **Lock menu**: With this function you lock the menu.
- **Drag pointer:** Selection of the data class for the extreme values of voltage. The following data classes can be selected:
  - 10/12 periods (200ms interval)
  - 1 second interval
  - 10 minute interval
  - N minutes interval



The extreme values voltage and current will reset automatically, if the data class is changed.

- Reset events: The event counter for fault records and PQ events in the device display is reset to
   0. All measurement data and PQ events in the device memory are retained.
- Reset energy counters: The energy counters in the device display and in the device memory are set to 0.
- **Reset Extrema:** The absolute maximum value (voltage and current) can be reset here.

# 6.5.5 Password lock device display

Access to the device setup can be disabled via a 4-digit password.

Menu password	
<u>, , , , , , , , , , , , , , , , , , , </u>	
	<b>8</b> 000
	<mark>0</mark> 000

If a password is assigned, no access to the device set-up via the display is possible.

Menu password		
Invalid password!		
<mark>0</mark> 000		
<ul> <li>Enter your correct password</li> </ul>		

• Confirm with unlock

Now the device setup over the keys and the display can be achieved. The password has no restriction for the software.



# 6.5.6 Memory management

The "Remove SD card" function stops the copying function for the measuring data of the internal memory to the SD memory card and releases the card for removal.

Memory	2/2
Reset recorder Remove SD card	
SD sync level SD capacity (free/total)	100% 2.5GB/8.0GB

# 6.5.7 Setting up the device interfaces

The PQI-DE has a TCP/IP interface for communication with the client software WinPQ Lite or WinPQ. The necessary parameters can be set in the Interfaces menu.

Interface config.	1 / 4
DHCP	deactivated
IP address	172.16.3.1
Subnet mask	255.255.0.0
Gateway	192.168.0.1



In the factory setting, the PQI-DE is factory pre-set with the IP address **192.168.56.95** and the subnet mask **255.255.0.0**.

# DHCP

Activate or deactivate DHCP

• DHCP deactivated:

The meter is used with a fixed IP address to be assigned with the parameter "IP address"-

• DHCP activated:

The meter receives its IP address via a DHCP server in the network.

#### IP address / subnet mask / gateway

Enter a free IP address and the associated subnet mask and gateways. Please make sure that you use IP addresses that are located in the same subnet if you want to communicate directly with the device in which your PC is located.

# 6.5.8 Display

The display behavior of the PQI-DE can be adjusted in the Display menu.

	Display	1 / 4
Brightness [%]70Standby timeout [s]900Standby brightness [%]10Screensaverdeactivated	Brightness [%] Standby timeout [s] Standby brightness [%]	70 900 10



The PQI-DE is delivered in the factory setting with the display brightness of 70%, a standby timeout of 900 seconds and the standby brightness in standby of 10%.

## Brightness [%]

The display brightness can be adjusted in 1-percent steps from 10% to 100%.

#### Standby timeout [s]

Standby timeout can be set in 1-second increments from 60 seconds to 9999 seconds. After the standby time has elapsed, the set brightness in the display becomes active.

#### Standby brightness [%]

Adjustment of the standby brightness in 1 percent steps from 0% to 70% possible.

#### Screensaver

Enable or disable screensaver.



The standby mode can be left by pressing any key.



# 6.6 Display lock

The device display of the PQI-DE can be completely locked by pressing the key combination "Return"




five seconds



When the lock is activated, the display of the device is switched off completely. It is no longer possible to view the display or the setup display.

When any device key is pressed, the following message is displayed:

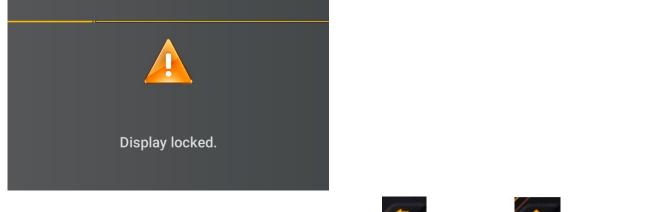

To unlock the display, press the key combination "Return" and "Home" again for five seconds.

# 7. WinPQ lite Software

The free WinPQ lite evaluation software has been created exclusively for the Network Analyser PQI-DA *smart* and PQI-DE and includes the following functions:

- Set-up of the Network Analyser PQI-DA smart & PQI-DE
- Online analysis of the measurement data,
- Reading the measurement data from the measuring device
- Evaluating measurement data,
- Firmware update for PQI-DA smart & PQI-DE
- Calibration of the Devices (Option).



The **powerful database and evaluation software WinPQ** which is available at an extra charge supports all mobile and permanently installed Network Analysers supplied by A. Eberle in one system. Measuring data from different devices can be compared to each other. There is a fully automated and permanent connection to all permanently installed devices. Detailed Power-Quality reports and sequence of events recording are automatically created by the system and can be sent via e-mail. There are separate operating and commissioning instructions for the WinPQ software.

# 7.1 Installing the evaluation software

To start the installation of the evaluation software, place the installation CD in your CD-ROM drive. If the Auto start function is activated, the installation program starts automatically. Otherwise, go to the root

directory of your CD-ROM drive and start the program by double-clicking the file 😼 SETUP.EXE .

The installation complies with the Windows standard, including uninstalling the program system via the **Software** option on the Control Panel. The installation location of the program (target directory) can be freely selected during installation.



Install the software in a directory in which you also have read and write rights.



The start icon wing is created automatically on your PC's Desktop.



#### Uninstalling the software via the control panel

The components are removed from the PC using Windows Control panel.

Under Software, WinPQ lite entry, use the Remove button to delete the evaluation software.

All parts of the program, including the generated links, are completely removed after a single confirmation. Before uninstalling the program, the components launched must be closed.

#### Software Update

You find the evaluation software and all updates and the current device firmware, free of charge, on our website under the product group "Power Quality / Software WinPQ lite":

#### www.a-eberle.de



Please also install the current device firmware on your measuring device to ensure that you can use any new functions.



Start screen for WinPQ lite, example with three devices

# 7.2 Basic setting for Software

4	X	
New Device	Settings	Refresh

The following changes are possible under the menu item "Options":

General S	Settings		
Gen	eral settings	Color settings	
Write Logfile			
Syslog (UDP)		514	
Compress Files			
Language	English v		
Data Folder	C:\Users\Pfeifer\AppData\Roa	ming\WinPQlite\Data\	Change
Allowed inactivity [s]	600		
	Cancel	Save Save	

- Write Logfile: software messages are logged in a file.
- Syslog (UDP): the logbook messages are also transmitted via syslog protocol via the network.
- **Compress files:** if this option is activated the WinPQlite is zipping the .xml-files of parameterization before sending them to the device. This leads into a faster communication and parameterization.
- Language: software language setting (SW must be restarted after a change)
- Data folder: Folder in which all measurement data are stored. This can be individually adapted to your own folder structure, for example to store the measurement data of the PQI-DA *smarts* on D:\measurement data\.
- Allowed Inactivity: if this time of inactivity will be reached, the WinPQlite closes open connections with the device. The default-value of allowed inactivity are 10min=600s.

2		
General	settings	Color settings
Color 1		
Color 2		
Color 3		
Color 4		o
Color 5		
Color 6		
Color 7		
Color 8		
Color 9		
Color 10		
·· ··		

Individual colours can be used to display the measurement data.

The colours are used in the order of the clicked measurement data.



# 7.3 Setting up a new PQI-DE

Via the function **New device** an assistant is called up which creates the measuring devices as a tile on the WinPQ lite Desktop and also completes the commissioning of the device.

👍 WinPQ lite 5.0.0 -	12.06.2019	-
6	X	•
New Device	Settings	Refresh



For a fully secure connection, the "IT Security Guide PQI-DE for Administrators" must also be observed in addition to these operating instructions!

# 7.3.1 Creating a device tile


Since the A.Eberle devices with firmware version 2.0 or higher have several modes due to the increased IT security requirements, it is necessary to differentiate when adding encoders to the WinPQ lite software.

Under the following conditions, a device can be created in the WinPQ lite software without further actions:

- A device with a firmware version lower than V2.0 is present.
- A device with firmware V2.0 and switched on compatibility mode is present.
- There is a device with firmware V2.0 and already setup user administration.

If none of the above requirements are fulfilled, the measuring instrument is not yet completely set up. The instructions in chapter 6.2 must be followed in order to completely setup the device.

## 7.3.1.1 Wizard Step 1 - Device Selection

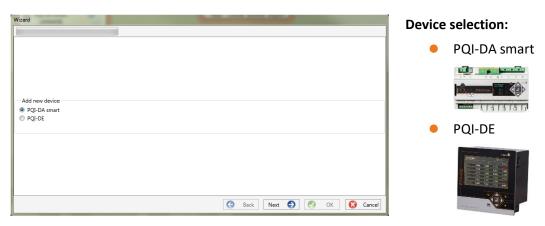

### 7.3.1.2 Wizard Step 2 - Device Setup

Wizard							
Add BO desires							
Add PQ-device:							
<ul> <li>Add device: Connect a device that has already been set up.</li> </ul>							
connect a device that has arready been set up?							
<ul> <li>Finish commissioning with IT security:</li> <li>Complete commissioning of a new device with activated IT security option.</li> </ul>							
Complete commissioning of a new device with activated 11 security option.							
Create a tile for an offline device.							
L							
	G	Back Next	Ð	Ø	OK	8	Cancel

# 7.3.1.3 Wizard Step 3 - Device Mode

Wizard	
Mode	
<ul> <li>Compatibility mode: without IT security option</li> </ul>	
Security mode:	
T security indue:	
	G Back Next 🕤 🧭 OK 😣 Cancel

# Selection for a device according to the requirements listed above is

"Connect device that's already been set up."

# Selection of the procedure for finishing the devices - Security settings:

- Compatibility mode
  - The TCP/IP communication to the device is unencrypted.
- Security mode

The TCP/IP communication device is encrypted using the SSH protocol.

#### 7.3.1.4 Wizard Step 4 - Device Connection

Wizard	and the second se
Choose connection type:  TCP/IP - Network interface	
O USB	
	🕒 Back Next 🌍 🧭 OK 🔇 Cancel


## Selection of connection

The device can be connected via USB or TCP / IP (network) communication.

If the USB interface is used, it must be selected in the following step.



## 7.3.1.5 Wizard Step 5 - IP Version

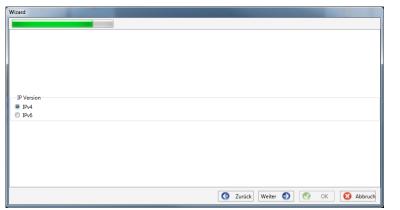

# Selection of IP version

A distinction can be made between IPv4 and IPv6. IPv6 is currently only supported via gateways.

The default connection is IPv4.

# 7.3.1.6 Wizard Step 6 - IP Address

IP / Port 192.168.2.94 5040	1
192.168.2.94	
	/ Port
C Zurück Weiter 🕥 🐼 OK 🔀 Abbruch	

#### IP address of the measuring instrument:

Enter the IPv4 address and the connection port of the encoder.

The default port depends on the selected mode:

- Security mode: Port 22
- Compatibility mode: Port 5040

Click "OK" to accept the values and create a tile for this device on the software interface. Any number of devices can be created.

# 7.3.2 Completing the Instrument Wizard in Secure Mode

If the setup of the meter was performed in **Security Mode**" (as described in chapter 6.2), the meter will display the following screen after restarting until the setup is complete:



At the end of commissioning in security mode, a user database is created on the device in which all information of users, their roles and the associated rights are stored.

In order to create individual users for the device in this database, it is necessary to execute the commissioning assistant via the **New device** button.

The device is selected as described in chapter 7.3.1.1.

#### 7.3.2.1 Security Wizard - Completion

Wizard		
Add PQ-device:		
Add device:		
Connect a device that has already been set up.		
Finish commissioning with IT security:		
Complete commissioning of a new device with activated IT security option.		
Create a tile for an offline device.		
	🕒 Back Next 🌖 🧭 OK 🔀 C	ancel
		ancel

#### Selection to complete all security settings:

"Completion of commissioning with IT security".

#### 7.3.2.2 Security Wizard - Procedure Selection

Wizard	
Commissioning with IT security option:  Manual setup: Input data for setting up the device Setup with identification file: Identification file available	
	G Back Next 🕤 🔗 OK 😢 Cancel

## Selection of the procedure for completing the devices - Security settings:

 Manual setup (see chapter 7.3.2.3)

Manual entry of all data such as IP address/serial number of the device

> Identification file (see chapter 7.3.2.4)

Use of an identification file made available by the device.





#### 7.3.2.3 Security Wizard – Manual

Wizard						
Serial number of device:						
14094458	1					
14054450						
		•				
		G	Back Next	6	ок 😣	Cancel

For setup, the serial number of the instrument must be known and entered in the field to establish the first connection via an encrypted connection to the instrument.

# 7.3.2.4 Security Wizard - Identification File

ard									
Setup with identification file:									
oad identification file	Load								
Information from identificatio	on file:								
Serial number:									
ECDSA Fingerprint:									
IP:									
Port:									
				G	Back	Next 😜		ОК	3 Canc
Öffnen			G.		Back				
Öffnen ↓ ↓ Computer → Wec	hseldatenträger (F	±) → Anlage_Gerae			Back	Next 🌖	Anlage_	OK	
	hseldatenträger (H	+;) → Anlage_Gerae			Back		Anlage		me_17042
Organisieren - Neuer Ordner		+;) ► Anlage_Gerae me		7 ,	Back	• 49	Anlage	Geraete-Nar	me_17042
v v v v v v v v v v v v v v v v v v v		me 2019		7 • Änd 14.00	erungsdatum 6.2019 11:19	<ul> <li>✓ 4<sub>9</sub></li> <li>Typ</li> <li>Dateiordne</li> </ul>	r	Geraete-Nar BⅢ ▼	me_17042
v v v v v v v v v v v v v v v v v v v		me 2019 scratchpad		7 • Änd 14.00 14.00	erungsdatum 5.2019 11:19 5.2019 11:18	• 49 Typ Dateiordno Dateiordno	r	Geraete-Nar BⅢ ▼ Größe	ne_17042
		me 2019		7 • Änd 14.00 14.00	erungsdatum 6.2019 11:19	<ul> <li>✓ 4<sub>9</sub></li> <li>Typ</li> <li>Dateiordne</li> </ul>	r	Geraete-Nar BⅢ ▼	ne_17042
Computer  Computer  Vece Computer Comp		me 2019 scratchpad		7 • Änd 14.00 14.00	erungsdatum 5.2019 11:19 5.2019 11:18	• 49 Typ Dateiordno Dateiordno	r	Geraete-Nar BⅢ ▼ Größe	ne_17042
		me 2019 scratchpad		7 • Änd 14.00 14.00	erungsdatum 5.2019 11:19 5.2019 11:18	• 49 Typ Dateiordno Dateiordno	r	Geraete-Nar BⅢ ▼ Größe	ne_17042
Computer Vece Computer Vece Ordner Computer	) (L:) E	me 2019 scratchpad		7 • Änd 14.00 14.00	erungsdatum 5.2019 11:19 5.2019 11:18	• 49 Typ Dateiordno Dateiordno	r	Geraete-Nar BⅢ ▼ Größe	ne_17042
Computer Vece Computer Vece Ordner Computer Coale Datenträger (C) DataBase, of (E) DataBase, of (E) Vecheoldatenträger (H) Finnedaten (\DoC-Sw2012R2) Werkneidatenträger (H)	) (L:) E	me 2019 scratchpad		7 • Änd 14.00 14.00	erungsdatum 5.2019 11:19 5.2019 11:18	• 49 Typ Dateiordno Dateiordno	r	Geraete-Nar BⅢ ▼ Größe	ne_17042
Computer Vecc  Trganisieren Vecc  Computer  C	) (L:) E	me 2019 scratchpad		7 • Änd 14.00 14.00	erungsdatum 5.2019 11:19 5.2019 11:18	• 49 Typ Dateiordno Dateiordno	r	Geraete-Nar BⅢ ▼ Größe	ne_17042
Computer Vecc  Computer	) (L:) b(c.php,	me 2019 scratchpad		7 • Änd 14.00 14.00	erungsdatum 5.2019 11:19 5.2019 11:18	<ul> <li>✓ 49</li> <li>Typ</li> <li>Dateiordn</li> <li>AEI-Datei</li> </ul>	त त	.Geraete-Nor ∦≕ ▼ Größe 1 KE	ne_17042
Computer Vecc  Trganisieren Vecc  Computer  C	) (L:) b(c.php,	me 2019 scratchpad		7 • Änd 14.00 14.00	erungsdatum 5.2019 11:19 5.2019 11:18	• 49 Typ Dateiordno Dateiordno	r	Geraete-Nar ∃∷ ▼ Größe 1 KE :(".aei)	ne_17042

If the option **Identification file** was selected in chapter 7.3.2.2, the \*.aei file, which is provided by the instrument via an SD card (see chapter 5.8.4), must be selected via "Open".

The \*.aei file contains all information such as serial number, ECDSA fingerprint, IP address and the port parameterized on the encoder. It can be found on the SD card in the main directory of the measuring instrument.


Setup with identificat	ion file:			
Load identification file	Load			
Information from i	dentification file:			
Serial number	14094458			
ECDSA Fingerprint	1: 26:96:38:97:1a:2f:0e:e2:55:e3:23:65:7b:1f:40:dc			
IF	192.168.56.211			
Port	22			
	- [			

After the file has been selected, all information required for the connection is automatically entered.

In any case, the ECDSA fingerprint must be compared with the fingerprint on the measuring device before clicking Continue in order to uniquely verify the identification!

Click "Next" to download the password guidelines from the meter.

	-		and the second se
			Password requirements:
Administrator name	Administrator password	Confirm password	
Operator name	Operator password	Confirm password	
User name	User password	Confirm password	
		🕒 Bac	ik Next 🕘 🧭 OK 😣 🕻

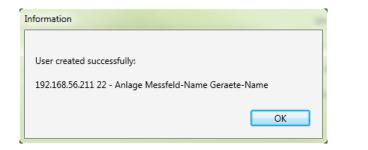

For each of the three roles defined (administrator, operator, user), the device requires a user who must be entered together with a password.

Depending on the password policy, a password that complies with the company's IT policy is required.

If all users have been successfully created and transferred to the meter, the following message appears "User successfully created!" Commissioning in high-security mode is now complete.



The detailed description of rights and roles with specification of rights is listed in the security documentation.



In addition to the three standard users per role, further users can be created in the measuring instrument. The settings are described in chapter 9.

#### 7.3.2.5 Security Wizard - User Setup



# 7.3.3 Deleting a device tile

Device tiles can be deleted via the **Setup general** device menu.

- -	
20	Edit
0	Relete Device
	0pdate firmware

# 7.4 Device setup



The PQI-DE's parameter setup can be accessed via **Para** button on the device panel. Parameters can be set in basic or expert view, which is also referred to as the classic view in the following sections. These views can be switched by choosing the corresponding selection field in the right main menu of the parameterization window.

The **main menu** (see chapter 7.4.1) is displayed in the right area of the parameterization window. The **parameters menu** with selectable parameter

groups is shown in the left window area (see chapter 7.4.2).

# 7.4.1 Main Menu: Views and functions

The **basic view** allows application-driven parameterization of the device; the **classic expert view** shows the parameter structure of the device in list form and is described in chapter 0. The service view should only be used for parameterizations in cooperation with the A-Eberle service team. Incorrect parameterizations can lead to malfunctions!

Via **Send** button, the previously defined parameters are sent to the device. The buttons **Open templates** or **Open custom templates** can be used to load different standard templates or custom parameter sets.

- Low voltage network according to EN50160 and trigger settings
- Medium voltage network according to EN50160 and trigger settings
- High voltage network according to EN50160 and trigger settings
- IEEE519 for different voltage levels

Via **Save** button, settings are saved to an XML file. The **Factory settings** option resets all settings on the device with the exception of the network, connection and license settings to the default parameters.

Form1	e parameters which sho	uld be evereted in	E the CSV
file.	e parameters which sho	uid be exported in	to the CSV
🔲 Win	PQ Interface (CCCI)		*
📃 Time	stamp		
🗸 devi	ce designation		
🗸 Logi	book		
V IP-S	ettings		
Licer	nse Manager		
SD-0	Card parameter		
🔽 Time	stamp		
🚺 Mod	bus		
📝 Thre	sholds / Recording		
🗸 Bina	ry Recording		
🗸 Men	norySettings (schreiber)		
🗸 🛛 Bin I	O / Relais / LED-Setting:	5	
soft	vare manager		-
	Abort		Ok

Basic Desktop	*
Send	
Open Templates	
Open custom templates	
Save	
Export (CSV)	
factory settings	
Close	


36	
37 Frequency	50
38 Frequency ripple signal voltage [Hz]	168
39 Flicker bulb	1
40 Normalized voltage L-L-Sp. [percent from UNOM]	100
41 hysteresis 1/2-Perioden-voltage [percent from UC bzw. UC/1	1
42 tolerance band fast voltage change RVC, dd [percent from U	1
43 dmax - threshold fast voltage change RVC [% from UC bzw.	6
44 threshold voltage dip (Dip) [percent from UC bzw. UC/1.73]	90
45 threshold voltage swell (threshold) [percent from UC bzw. U	110
46 threshold voltages interruption [percent from UC bzw. UC/1.	5
47 lower threshold 10s- network frequency /Hz	49,5
48 higher threshold 10s-Total network frequency /Hz	50,5
49 lower threshold 10min-voltage [percent from UC bzw. UC/1.]	90
50 higher threshold 10min- voltage [percent from UC bzw. UC/1	110
51 threshold 10min-THD [percent]	8
52 threshold 10min-voltages unbalance [percent]	2
53 threshold short time flicker PST	1
54 threshold long time flicker PLT	1
55 threshold 3 Sec -ripple signal voltages [percent from UC bzw.	9
56 Trigger-threshold 200ms-ripple signal voltage recorder [perc	1
57 limit table 10min-voltages harmonic (H2) [percent]	2
58 threshold 10min-voltages harmonic (H3) [percent]	5
59 threshold 10min-voltages harmonic (H4) [percent]	1
60 threshold 10min-voltages harmonic (H5) [percent]	6
61 threshold 10min-voltages harmonic (H6) [percent]	0,5
62 threshold 10min-voltages harmonic (H7) [percent]	5
63 threshold 10min-voltages harmonic (H8) [percent]	0,5
64 threshold 10min-voltages harmonic (H9) [percent]	1,5
65 threshold 10min-voltages harmonic (H10) [percent]	0,5
66 threshold 10min-voltages harmonic (H11) [percent]	3,5

#### Selection dialog for exporting the desired data

#### Example of a CSV file in Excel

After resetting the PQI-DE to factory settings, the assistant must be executed again! All measurement data will be deleted from the device after the wizard has been executed! **Close** closes the parameterization menu. Changes that are not saved will be lost!



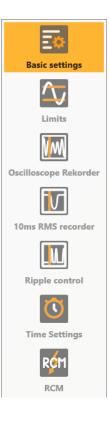

# 7.4.2 Parameter Menu: Device parameters and settings

The device parameters and settings are divided into functional groups and can be selected in the left window area (see left figure). These are explained in more detail in the following sections. The different parameters are partly dependent on each other as well as on the loaded or selected template when the device has been commissioned.

Further explanations of the various setting values can be found in the next chapter 0.

# 7.4.3 Basic Settings

All main settings can be found into the basic settings window.

Ξο	Device	Connection settings			
Basic settings	Device designation	Norminal voltage PE / PP [	V] (primary)	230,000	398,372
	Plant Anlage				
$\sim$	Field Messfeld-Name				
Limits	Group Messfeld-Gruppe				
7000	Device Geraete-Name				
M	Frequency	Connection configuratio	n voltage inputs	Connection con	figuration current inputs
Oscilloscope Rekorder	Frequency 😟 50 Hz 💿 60 Hz	VT L1, L2, L3, N	•	CT L1, L2, L3, N	-
	Reference voltage input frequency measurement UIN *	Voltage transducer facto		Current transdu	cer factor
10ms RMS recorder	Network Type	UL1	1,000	n	100,000
	<ul> <li>4 conductor system (3 phases)</li> </ul>	UL2	1,000	12	100,000
	4 conductor system (indep. phases)	UL3	1,000	B	100,000
Ripple control	3 conductor system	UNE	1,000	14	100,000
0	Measuring interval	Flicker bulb	Power cal	culation	
Time Settings	Interval n-seconds-data class [s], 2.60 + 60 +	120 V curve	Unbala	nce: off	
	Interval N-Minute-data class [min] , 160 • 15 •	230 V curve	Unbala	nce: on	

To provide a clear overview, all parameters are bundled into functional groups.

#### 7.4.3.1 Device

All device identifiers can be entered here for a clear assignment of the PQI-DE. These identifiers are used for presentation in the WinPQ lite interface, when copying data to an SD card (folder name) and also for unique assignment into the WinPQ database.

## 7.4.3.2 Connection Settings

Primary nominal voltage (conductor-earth) in volts is defined here The PQI-DE refers all trigger thresholds or PQ events to the set nominal voltage. The nominal voltage in the 3-wire network is the agreed conductor-conductor voltage, e.g. 20400V. In 4-wire network, the conductor-ground voltage is specified, e.g. 230V.

#### 7.4.3.3 Frequency

Selection of the grid frequency and selection of the reference voltage input for frequency measurement.

## 7.4.3.4 Network Type

Selection of the network type:

If a 3 conductor system has been selected, all evaluations of standard EN50160 are calculated based on the conductor-conductor voltages. In 4 conductor system, all power quality parameters are determined from the conductor-ground voltages. Choosing 4 conductor systems with independent phases, the power values of the individual phases are calculated separately.



# 7.4.3.5 Connection configuration of voltage and current inputs

Selection of the connection configuration and the voltage transformer factors. Enter the ratio of the current and voltage transformers to which the power analyser is connected in the transformer settings.

**Example:** 

- Voltage: primary = 20.000 V; secondary = 100 V → internal conversion factor knu = 200
- Current (C30/C31): primary = 100 A; scondary = 5 A → internal conversion factor kni = 20

For the small signal inputs at the current input with the characteristics C40, C44, C45, the conversion factor kni has to be determined via the following relationships. The numerical values are purely example values, the correct values are to be taken from the data sheets for the specific application.

- **C40 (Rogowski-coils):** 
  - Conversion factor of the Rogowski coil:  $CT = 85 * \frac{mV}{kA}$
  - internal conversion factor:  $kni = \frac{1}{CT} = 11761,71\frac{A}{V}$

#### C44 (AC-Ministromzangen):

Since a mini current clamp is usually connected in the secondary circuit of a current transformer, the internal conversion factor kni depends on both the transformer ratio of the current transformer and the ratio of the mini current clamp.

Secondary rated current of the current transformer:  $I_{W,sek} = 5A$ 

Primary rated current of the current transformer:  $I_{W,pr} = 200A$ 

- Conversion factor of the current clamp:  $CT = 100 \frac{\text{mV}}{\Lambda}$
- $\rightarrow$  internal conversion factor:  $kni = \frac{I_{W,pr}}{I_{W,sek}*CT} = \frac{200A}{5A*100\frac{mV}{A}} = 400\frac{A}{V}$

#### C45 (DC current clamps):

- Wandlerfaktor der DC-Ministromzange:  $CT = 85 \frac{\text{mV}}{\text{kA}}$
- $\rightarrow$  internal conversion factor:  $kni = \frac{1}{CT} = 11761,71\frac{A}{V}$

The conversion factors have to be entered identically on all four phases.

## 7.4.3.6 Measuring interval

Configuration of the two adjustable recording intervals N-seconds and N-minutes. In addition to the class A measurement intervals, numerous values can be recorded by the PQI-DE at freely adjustable intervals. For example, this can be used for the measurement of maximum power in the 15 minutes interval. The intervals are always synchronic to full hours.

## 7.4.3.7 Flicker-Curve-Lamp model

Select the lamp model for a 120 V or 230 V flicker curve. In 120 V systems (e.g. America), a different flicker curve is specified than in a 230 V system (e.g. Europe).

## 7.4.3.8 Power calculation

Selection of the power calculation with or without unbalance. The various types of reactive power can be switched on or off as required. This has an influence on the calculation of the collective reactive power as well as the apparent power.

Unbalance: On

Power calculation according to DIN40110 Part 2 - with calculation of the unbalance reactive power and the modulation reactive power is the default setting of the device. This Adjustment is strongly recommended for measurements on the transformer stations.

#### • Unbalance:

Off

Power unbalance is not considered in the calculation of reactive power. This setting has an influence on the measured power values of reactive and apparent power in the display, the online measured data and the recorded measured data as well as in process controlling.



# 7.4.4 Limits

In this menu, all limit values of the currently set standard or loaded standard template are preselected. The compatibility levels can be changed by the user. This setting has a direct influence on the standard reports! It is recommended to work with standard templates!

🙏 WinPQSmart 4.4.0 - 04.07.20	18				_ <b>_</b> ×
E¢ Basic settings	Slow voltage change Tolerance 100%	positive 1	10 negative	90	Basic Desktop    Send
	Voltage Changes (Dip/Swell) Threshold 100% [%]	positive [%]	10 negative [%]	90	Open Templates Open custom templates
Limits	Rapid voltage change				Save factory settings
VM	Hysteresis RVC [%]		Detection limit for RVC [%]	6	ractory settings
Oscilloscope Rekorder	Network Frequency Threshold 99,50%	positive [Hz]	i0,5 negative [Hz]	10.5	
10ms RMS recorder	Unbalance [%]	positive [Hz]	THD	49,5	
	Tolerance 95.00% [%] 2 Threshold long time	e flicker PLT 1	Tolerance 95.00% [%]	8	
Ripple control	Threshold short tim	e flicker PST 1			
Ū	Voltage harmonics				
Time Settings	ш.				
			Harmonics Tolerance 95.00% [%]	• 2 • 2	
	C:\Program Files (x86)\WinPQSmart\Templates\Europe\EN5	0160 IEC61000 2 2 Law? "			Close
- M.	C:\Program Files (x80)\WINPQSmart\Templates\Europe\EN5	0100_IEC01000-2-2_LowVoltage.	(TTI		

For a clearer overview, all parameters are organized in functional groups. The various (physical) quantities and their calculation methods are defined and described in chapter 17.

- Voltage changes Limits for slow voltage changes and fast voltage changes (for details see the respective standard).
- **Frequency**

Upper and lower limit value of the permitted frequency deviation in relation to the set grid frequency.

- Unbalance
   Limit value for unbalance.
- Flicker
   Limits of long and short-term flicker.
- THD Limits of the Total Harmonic Distortion.
- Voltage harmonics
   Limits of voltage harmonics with direct selection.

# 7.4.5 Oscilloscope Recorder

The trigger conditions and thresholds, i.e. trigger criteria for oscilloscope recorder, as well as other settings of the oscilloscope recorder can be set in this menu. In default configuration, an effective value threshold of +10% and -10% of the nominal voltage is defined.

inPQSmart 4.4.0 - 04.07.2	018													
	Voltage	e- / curre	ent trigger											Basic Desktop
			Lov	wer threshol	d		Upper thresho	ld	Step [V]	Phar	e Step [°]		nvelope	Send
Basic settings		active	passive	[V]	active	e passive	[V]		Step [v]	Thas	e steh [ ]		rigger[%]	Open Templa
$\overline{\mathbf{\Lambda}}$	UL1	$\checkmark$		90	$\checkmark$		110		10		6		20	Open custom ten
Limits	UL2	$\checkmark$		90	$\checkmark$		110		10		6		20	Save
	UL3	$\checkmark$		90	$\checkmark$		110		10		6		20	factory settin
<u>N M</u>	UNE				<b>V</b>		30		10				20	
loscope Rekorder	U12	$\checkmark$		90	$\checkmark$		110		10				20	
	U23	$\checkmark$		90	$\checkmark$		110		10				20	
	U31	$\checkmark$		90	$\checkmark$		110		10				20	
ns RMS recorder		1000		0.05			10	[ee]		Disala	i aureat i l-	or in		
	11			0,05			10		1	0%	/ current valu	ies in		
Ripple control	12			0,05			10		1	A of nom	ninal current	5 A		
	13			0,05			10		1	0111011				
	14						2,5		1					
Time Settings	Summer of the second seco	trical Co	omponents T	slager										
	Symme	Ur	ndervoltage	Ove	rvoltage		vervoltage	7.	ero sequence					
			itive sequent component		e sequence Iponent		itive sequence omponent	20	system					
	active		90		110		10		30					
	passive		90		110		10		30					
	Freque	ncy Trigg	ger		active		passive							
	Fromuor	can Loun	er Limit [Hz]			49,5	- ·	49,5						
			oer limit [Hz]			50,5		50,5		Freque	ency Step		0,5	
	riequei	icy : Opp	ber minit [Fi2]		V	50,5		50,5						
	Binary	Trigger												_
			ling edge 1		Binary	input fallir	na edae 2							
	-	-	sing Edge 1		-	Input Risir			Tr	igger Con	nmand		$\checkmark$	
	billary	iiput ius	ang tuge i		binary	input tusii	ig tuge z							
	Record	er lengtl	h / Pre-even	t time										
		-												
	Samplin	a Freau	encv : 40960	)Hz / 10240F	lz	1024	0 🗢 N	linimum R	Recorder Time	[ms]			400	
	Samplin Pre-Eve			)Hz / 10240H	lz	1024			Recorder Time Recorder Time				400	

For a clearer overview, all parameters are organized in functional groups. If a field is greyed out and/or not selected, this trigger criterion is not active or cannot be activated. The parameters of the current trigger can be displayed either absolute or as percentage value of the nominal current (setting in the basic configuration).



The trigger thresholds of the oscilloscope and RMS recorder are not completely independent. All common parameters are automatically adjusted in both recorders.



## 7.4.5.1 Voltage and current trigger

In general, the trigger thresholds refer to the nominal voltage, e.g. 230 V or 20,400 V, which has been set in the basic settings.

If the voltage/current value (10ms RMS value) falls below the lower trigger threshold or exceeds the upper trigger threshold, a recording is started as well as in case of RMS value jump or phase jump.

The envelope trigger starts a recording in case of a so-called sinus violation. Thereby the device detects a violation of sampling points with respect to the configured envelopes of the sinusoidal curve (e.g. commutation dips). In practice, a setting in the range of 10 to 25% (of the nominal voltage) is usually recommended.

## 7.4.5.2 Symmetrical Components Trigger

A record is started in case of the specified symmetrical component thresholds are violated.

## 7.4.5.3 Frequency Trigger

Starts the recorder when the values fall below or exceed the set mains frequency (basic settings). The frequency jump parameter triggers the ROCOF (Rate of Change of Frequency). For internal processing and determination of the ROCOF, filters are used which can be optimised for each application in the field. To design these filter coefficients, please contact product support, who will be happy to provide you with the white paper and package for recording the ROCOF. The standard parameters are suitable for detecting ROCOF>0.2Hz/s with a duration of at least 0.25s.

### 7.4.5.4 Binary Trigger

A record is started in case of an external trigger via software or a falling or rising edge at binary input 1 to 8.

### 7.4.5.5 Recorder length and Pre-event time

The recorder length specifies the total time frame of the oscilloscope recorder in milliseconds. Pre-event time is defined as the time that passed before a (trigger) event occurred and is also recorded.


The PQI-DE's fault recorders provide a minimum recording length and a maximum recording length. Thereby, the minimum recording length is extended up to the maximum recording length, depending on the trigger condition. This function offers the possibility to reduce data due to short events as well as to record very long events ensuring an effective use of data storage!

## 7.4.5.6 Active / passive trigger:


Active triggering occurs, if e.g. the voltage drops from desired to undesired state.

Passive triggering allows triggering the transition from undesired to desired state e.g. after voltage interruptions.

This feature offers the possibility to record very long earth faults with an enormous data reduction, since both the beginning and the end of the event can be recorded entirely, without the obligation to record the whole event!

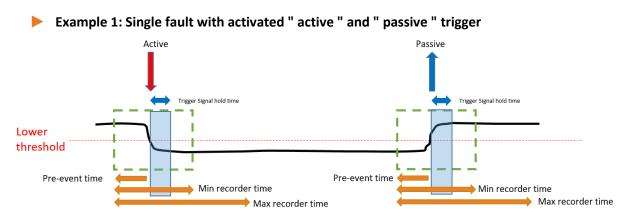

Example 2: Single fault with activated «active» and «passive» trigger & retrigger

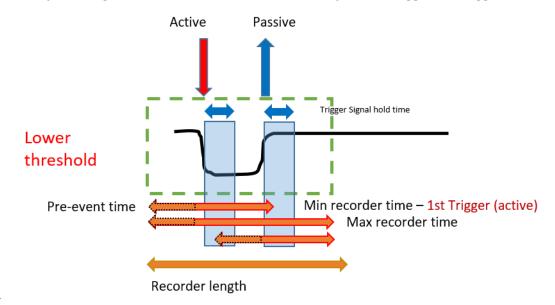


1

If another trigger criterion occurs during the minimum recording length after the trigger signal holding time, the Record is extended by the minimum length up to the maximum length

i



Example 3: double fault with activated «active» and «passive» trigger, retrigger combined with trigger signal hold time & max time

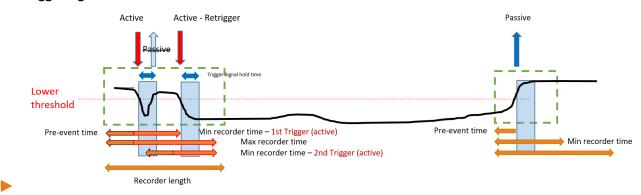

Passive Trigger is not evaluated during "trigger signal hold time", which can be set up inside Expert mode

## 7.4.6 RMS Recorder

In this menu, the trigger conditions of the RMS recorder can be set. In the default settings, an effective value threshold of +10% and -10% of the nominal voltage is set.

WinPQSmart 4.4.0 - 04.07.20	018												×
=	Voltag	e- / curi	rent trigger										Basic Desktop
<b>E1</b>			Le	ower threshold	1		Upper threshol	d	Step [V]	Phase Step [°]		Envelope	Send
Basic settings		active	passive	[V]	active	passive	[V]		216h [A]	Thase Step []	T	rigger[%]	Open Templates
$\Delta$	UL1	<b>V</b>		90	<b>V</b>		110		10	6		20	Open custom templates
Limits	UL2	<b>V</b>		90	$\checkmark$		110		10	6		20	Save
	UL3	<b>V</b>		90	$\checkmark$		110		10	6		20	factory settings
	UNE				$\checkmark$		30		10			20	
Oscilloscope Rekorder	U12	V		90			110		10			20	
ET.	U23	<b>V</b>		90			110		10			20	
	U31	1		90			110		10			20	
10ms RMS recorder		_		0.05				(a)		Disalau aun			
	11			0,05			10		1	Display current v	aiues in		
Ripple control	12			0,05			10		1	<ul> <li>A</li> <li>of nominal curre</li> </ul>	nt 5 A		
Ripple control	13			0,05			10		1				
	14						2,5		1				
Time Settings	C			T-1									
	Symme		omponents Indervoltag		voltage	0	vervoltage	-					
		pos	sitive seque component	nce positive	e sequence ponent	nega	tive sequence omponent	Ze	ero sequence system				
	active		90		110		10		30				
	passive		90		110		10		30				
	_												
	Freque	ncy Trig	jger		active		passive						
	Freque	ncv: Low	ver Limit [H:	7]		49,5		49,5					
			per limit [H			50,5		50,5		Frequency Step		0,5	
	incque	icy i op	per mine (ri	-1		50,5		50,5					
	Binary	Trigger											
	Binary	input fa	lling edge 1		Binarv i	nput fallir	a edae 2						
	-	-	sing Edge 1		-	nput Risin			T	rigger Command		<b>V</b>	
			5 5										
	Record	ler lengt	th / Pre-eve	nt time									
							п	ninimum r	ecorder time	[s]		10	
	pre-eve	ent time	[s]			2			recorder time			30	
													Close
*			C:\Program	Files (x86)\Win	PQSmart\Tem	plates\Eur	ope\EN50160_IE	C61000-2	-2_LowVoltage	e.xml			

The settings in this menu are similar to the settings of oscilloscope recorder (see chapter 7.4.5) and are therefore not explained here again. If a field is greyed out and/or not selected, this trigger criterion is not active or cannot be activated.



The trigger thresholds of the oscilloscope and RMS recorder are not completely independent. All common parameters are automatically adjusted in both recorders.



# 7.4.7 Ripple Control

In this menu, the parameters frequency ripple signal voltage [Hz] and threshold 3 sec ripple signal voltage [% of UC] can be set.

👃 WinPQSmart 4.4.0 - 04.07.2	2018		_ <b>_</b> ×
WinPQSmart 4.4.0 - 04.07.3 Basic settings Limits Doscilloscope Rekorder IOms RMS recorder Ripple control C	2018 Ripple control Frequency ripple signal Voltage [Hz] Threshold 3 Sec -ripple signal Voltages [percent from UC bzw. UC/1.731	168	Basic Desktop
Time Settings			Close
*	C:\Program Files (x86)\WinPQSmart\Tem	nplates\Europe\EN50160_IEC61000-2-2_LowVoltage.xml	

## 7.4.8 Time settings

In this window, the time settings of the device are parameterized. In the upper area, the time zone and the daylight saving time (DST) can be set.

👃 WinPQSmart 4.4.0 - 04.07.2	D18	- 🗆 X
E¢ Basic settings	Timezone       DST Mode       Timezone       (UTC) Koordinierte Weltzeit	Basic Desktop    Send
Limits	Time sync Method Time Synchronisation Method:	Open Templates Open custom templates Save
Oscilloscope Rekorder		factory settings
10ms RMS recorder		
Ripple control		
		Close
*	C\\Program Files (x86)\WinPQSmart\Templates\Europe\EN50160_IEC61000-2-2_LowVoltage.xml	

Below, the method of time synchronization can be selected.

For high-precision measurements, an independent clock such as GPS/DCF or NTP is recommended. (IEC61000-4-30: Class A - Measuring method!)

If the connection to the signal of a time synchronization method fails during the active measurement, the PQI-DE uses its internal oscillator, which has previously been synchronized to the pulse generator. If the connection to the pulse signal is subsequently re-established, the oscillator approaches the time of the pulse signal again in subsecond steps (<1sec). This prevents time jumps in the recording. The possible time deviations, which are above 1 second, are hard set.

Depending on the selection, the corresponding settings are displayed. The necessary setup steps, e.g. connection of a GPS clock etc. are described in detail in chapter 5.3.2.

The following time sync methods can be selected:

## 7.4.8.1 Manual Clock Setting

Manual synchronization of time and date with the local time of the computer. After synchronization, the function is locked for the current session. The parameterization interface must be restarted for a new execution. The local time of the encoder is not updated online, but only after the parameterization has been



#### reloaded.

Time sync Method			
Time Synchronisation Metho	od:	Manual Clock setting	\$
Time Settings by Hand			
Date PC	11.07.2018	Date Device	01.04.2018
Local Time PC	08:53:25	Local Time Device	01:42:20
	Time Synchronisation	]	

## 7.4.8.2 DCF77

Settings for synchronization with DCF 77 radio clock Art. No. 111.9024.01.

Time sync Method		
Time Synchronisation Method:		DCF77 \$
Time settings DCF 77 with article 111	.9024.01	
Pulse-code Interface (COM2)	COM2	TxD
Protocol	RS232 🗢	RsD CTS R5485 Nog/B
Timezone of time source: sign	plus 🗢	RS485 Pos/A
Timezone of time source: hour	0	87654321
Timezone of time source: minute	0	
		COM 1 COM 2

## 7.4.8.3 IEEE1344

Settings for synchronization according to IEEE1344.

Time Settings IEEE 1344		
Pulse-code Interface (COM2)	COM2	TxD RTS GND
Protocol	RS232 🗢	RxD C16 R5465 Neg/B
Timezone of time source: sign	plus 🗢	RS465 Pos/A
Timezone of time source: hour	0	87654321
Timezone of time source: minute	0	
		COM 1 COM 2

## 7.4.8.4 IRIGB0..3

Settings for synchronization according to IRIGB formats 0 to 3.

Time sync Method Time Synchronisation Method:		IRIGB03
Time settings IRIG-B Formats 0 to 3		
Pulse-code Interface (COM2)	COM2	TxD
Protocol	RS232 🗢	R845 Nca/B
Timezone of time source: sign	plus 🗢	R\$465 Pos/A
Timezone of time source: hour	0	87654321
Timezone of time source: minute	0	
		COM 1 COM 2

## 7.4.8.5 IRIGB4..7

Settings for synchronization according to IRIGB formats 4 to 7, see IRIGB formats 0 to 3.

## 7.4.8.6 NMEA:RMC (GPS-Clock 111.7083)

Settings for synchronization according to GPS-Clock 111.7083 with NMEA protocol a message format RMC.

Time sync Method Time Synchronisation Method:	NMEA:RMC (GPS-clock 111.7083)
Time Settings NMEA RMC with GPS CI	ock 111.7083
Connection via COM1 and COM2 via R	485, Modbus RTU is not available in this mode.
NMEA Interface (COM1)	RS232 🗢
Pulse-code Interface (COM2)	RS232 🗢

## 7.4.8.7 NMEA:ZDA

Settings for synchronization with NMEA protocol and message format ZDA.

1



## 7.4.8.8 NTP

The PQI-DE supports up to four time servers in one network. It automatically uses the best signal available. It is possible to insert the IPv4-address and also the DNS hostname of the ntp server. To use DNS it is necessary to insert the DNS server in the IP-settings of the device (supported with firmware version v2.6.0).

Time Settings NTP				
NTP Sever 1: IP address	0.0.00	Port:	123	
NTP Sever 2: IP address	0.0.0.0	Port:	123	
NTP Sever 3: IP address	0.0.00	Port:	123	
NTP Sever 4: IP address	0.0.00	Port:	123	
NTP Pollcycle [s]	60			

Incorrect time settings can lead to errors or problems during measurement data recording! Using NTP, a good signal quality should be assured (at least Stratum 8)!

The availability of the NTP server, the stratum and the quality of both NTP and the other time synchronization methods can be checked with the help of online diagnostics!

The connection to the server and the quality of the signal can be checked with the online diagnostic program (see chapter 8):

실 WinPQ lite 6.1.0	- 01.09.2021							- 0
Logfile	e Aktualisieren							
Geräteinfo	rmationen	Details		NTP 1		NTP 2		NTP 3
WinPQ - Inte	rface (CCCI)	lastSync	04.11.2021 06:34:38	delay	0.037880897521973	delay	0.031489849090576	delay
Spei	her	quality	0	error	0.018955707782883	error	0.015760183567185	error
Systeminf		signal	0	offset	0.038717269897461	offset	0.044249296188354	offset
		Sommerzeit	False	receivedTime	Thu Nov 4 07:38:31 2021	receivedTime	Thu Nov 4 07:38:42 2021	receivedTime
SCA		syncSrc	NTP	server	ptbtime1.ptb.de	server	ptbtime2.ptb.de	server
Zeitsynchronisa		utc.fracsec.dst	0	state	ONLINE	state	ONLINE	state
PC	AP	utc.fracsec.fos	2013					
LU	A	utc.fracsec.lsd	0					
		utc.fracsec.lso	0					
		utc.fracsec.lsp	0					
		utc.fracsec.tqic	9					
		utc.soc	04.11.2021 06:38:50					
		Zeitzone	1					

## 7.4.9 RCM (Residual Current Measurement)

In the RCM menu, you can set the parameters, which are used to evaluate the residual current measurement. Here the residual current warning or residual current alarm thresholds refer to the rated limit of residual current. In addition, a time delay for the RCM status change can be parameterised (e.g. change from warning to alarm).

The transformer factor can be taken from the installed differential current sensor. The use of the residual current measurement depends on the license D1, which can also be installed later (see Chap. 12).

DIN EN 62020 defines an RCM system, which monitors the residual current as a whole. In this case, the RCM system consists of the PQI-DE from A. Eberle and an RCM converter.

In the menu RCM of the basic desktop a clear and interactive parameterization of the RCM input is possible. The display in the WinPQlite is only visible when the RCM function has been activated via the device display according to section 6.5.2.

First, the *Conversion factor of differential current transfor*mer must be defined. The differential current input of the PQI-DE has a nominal input current  $I_N$  of 30mA. A transformer with a ratio of 600A:1A can therefore measure a maximum differential current  $I_{RCM,max}$  of 18A RMS at the PQI-DE:

$$I_{RCM,max} = 30mA * \frac{600A}{1A} = 18A$$

*Informative:* The specification in the data sheets of the differential current sensors is usually standardized to 1A with 600A:1A.

The limit values to be set (differential current warning threshold and differential current alarm threshold) must be entered as absolute values. These refer to the *primary rated limit of residual current* of the differential current transformer. According to DIN EN 62020, recommended limit values are 150mA for the warning threshold and 300mA for the alarm threshold. Please also refer to the white paper "Residual current measurement".

실 WinPQ lite 6.4.0 - 06.02.202	23			
-	Connection settings		Conversion factor differential current tran	isformer
Basic settings	Rated limit of residual current IRN [mA]	0,5	Conversion factor differential current transformer	600
	Monitoring source	Monitor IRCM 🗸 🗸		
$\sim$	Rated limit of residual current (primary) [mA]	300		
Limits	Warning threshold of residual current [mA]	100		
LINITS	Alarming threshold of residual current [mA]	200		
M	Straight slope of power dependent threshold adaption [mA/kW]	1		
Oscilloscope Rekorder	Maximum threshold [mA]	300		
Oscilloscope Kekorder	RCM state change delay [s]	3		
	Preview of the curve			
10ms RMS recorder				
Ripple control	[True] 200			300
Time Settings	000 Monitor IRCM (TriA)			
RCM RCM	0	l 100 Total net-real power [k]	1 200	
		.sumer rear poner pr		



Depending on the application situation, it may be necessary to increase the warning and alarm thresholds by a linear factor in order to cope with leakage currents caused by loads and to avoid false alarms on site. For this purpose, the parameter *Straight slope* is available in [mA/kW]. If the value 0 is assigned to this parameter, no slope is stored. The differential current of the warning/alarm threshold at 0W is selected as the start value of the linear function. Depending on the slope parameter, a linear function is stored as a threshold until the maximum threshold current is reached. Changes to the parameters are directly visualized in the graphic. It is also possible to counteract leakage currents by reducing the frequency resolution (expert settings).

In addition, a time delay for the RCM state change can be parameterized (e.g. change from warning to alarm).

With the help of the parameter *Monitoring source*, it is possible to switch from the measured value "residual current" (iRCM) to the calculated value "fault current" (iFCM) for monitoring, in order to carry out alarming for pure fault currents and not residual currents!

> According to DIN-VDE 62020, only the measured residual current is permitted for on-site alarming!

### Expert desktop RCM

Note!

In the "Expert desktop" area it is possible to specify the connected transducer type (#1). By selecting the transducer type, the overall system consisting of the RCM transducer and the PQI-DE measures according to the selected type. In addition, a cut-off frequency #2 can be defined depending on the transducer type:

WinPQ Interface (CCCI)	Parameter Name	Value	Default Value
Webserver	Residual current measurement active	~	
SSH	Conversion factor differential current transformer	600	600
Device designation	Correction factor differential current transformer 1.Harm. {Re}	1	1
IP-Settings	Correction factor differential current transformer 1.Harm. {Im}	0	0
License Manager	Correction factor differential current transformer 3.Harm. {Re}	1	1
Modbus	Correction factor differential current transformer 3.Harm, {Im}	0	0
Thresholds / Recording     Size (General Advance)	Correction factor differential current transformer 5.Harm. {Re}	1	1
Significance thresholds and filters Norm Threshold Values			
Connection settings	Correction factor differential current transformer 5.Harm. {Im}	0	0
Recorder Trigger-Thresholds	Correction factor differential current transformer 7.Harm. {Re}	1	1
Oscilloscope Recorder (Trigger & Length)	Correction factor differential current transformer 7.Harm. {Im}	0	0
TRMS recorder (Trigger & Length)	Nominal differential current IRN, secondary [A]	0,0005	0,0005
<ul> <li>Trigger to Binary Output</li> </ul>	Differential current warning threshold [% of IRN]	33,33333	50
Residual Current Measurement	Differential current alarm threshold [% of IRN]	66,66667	100
<ul> <li>Measurement supervision</li> </ul>	Differential current threshold hysteresis [% of IRN]	2	2
Statistics	RCM state change delay [s]	3	3
Binary Recording Control	Auto-acknowledge RCM warning		
<ul> <li>Recording settings</li> </ul>	Monitoring source	Monitor IRCM	✓ Monitor IRCM
Binary Recording	Maximum threshold current [% of IRN]	100	100
<ul> <li>SCADA-Manager</li> <li>Manager (manager)</li> </ul>	Straight slope of power dependent threshold adaption [mA/kW]	1	0
<ul> <li>Memory settings (recorder)</li> <li>Syslog</li> </ul>		AC	✓ AC
		1000	1000
<ul> <li>Time settings</li> </ul>	2 Measuring bandwidth [Hz] (only valid for type A, AC, B)	1000	1000
<ul> <li>User Management</li> </ul>			

Care must be taken to specify the warning and alarm threshold of the differential current in this range as a percentage with respect to the *secondary nominal differential current*  $I_{RN}$ .

• Type A:

Type A RCM systems are designed for type A residual currents in accordance with IEC TR 60755 (General requirements for residual current operated protective devices), i.e. they respond as intended only to AC residual currents and pulsating DC residual currents of their rated frequency, i.e. the mains frequency. The response thresholds for residual currents with deviating frequencies are not defined. In the case of smooth DC residual currents or AC residual currents of higher frequency, detection is therefore no longer ensured with these RCM converters. An excessively large DC component in the residual current can even interfere with detection of the net-frequent AC residual current.

Here the set limit frequency **#2** is **active**.

#### • Type B:


Many power electronics devices, such as uninterruptible power supplies, photovoltaic inverters or frequency converters, generate a bipolar square-wave voltage (clocked DC voltage) from smooth DC voltages internally (DC link) or directly as output voltage, which modulates the sinusoidal output voltage with the desired output frequency by pulse width control. Therefore, in the event of a fault, frequency converters, for example, can cause fault currents with a frequency mixture of the clock frequency, with its harmonics and the output frequency, in addition to fault currents with mains frequency and smooth DC fault currents. In order to ensure comprehensive detection of residual currents when using this equipment, the RCM systems used for this purpose must also be able to reliably detect smooth DC residual currents and AC residual currents with these frequencies. The standard for RCMs of type B requires detection up to 1 kHz.

Here, the set limit frequency #2 is active.

#### • Type B+

RCM systems of type B+ differ from RCM systems of type B in their extended frequency range. The standard for RCM systems of type B requires detection up to 1 kHz. For RCM systems of type B+, the detection of differential AC currents normatively extends up to 20 kHz.

Here, the set cut-off frequency #2 is <u>not</u> active, but the measured value is always determined from all spectral components up to 20 kHz!

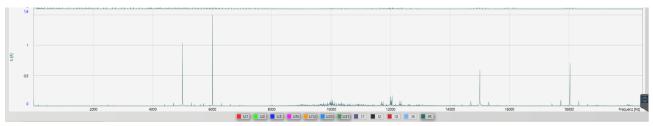

Frequency spectrum of a system with converters with high leakage currents in higher frequency ranges



# 7.5 Device setup Expert View

For access to the advanced settings of the device, such as the parameterization of data recording or SCADA protocols, the **Expert View**" provides a tabular representation of the device settings.

## 7.5.1 Device designations

The description of the device is defined in the **Device names** menu.

WinPQ Interface (CCCI)	Parameter Name	Value	Default Value
SSH	Company name	Werksidentifikator	Werksidentifikator
Device designation	Factory name	Werksbezeichnung	Werksbezeichnung
IP-Settings	Plant	Anlage	Anlage
<ul> <li>License Manager</li> <li>Modbus</li> </ul>	Station	Station	Station
<ul> <li>Thresholds / Recording</li> </ul>	Street	Strasse	Strasse
<ul> <li>Binary Recording</li> </ul>	Number	Nr	Nr
<ul> <li>SCADA-Manager</li> </ul>	Zip code	PLZ	PLZ
<ul> <li>Memory settings</li> </ul>	City	Ort	Ort
Syslog	GPS coordinates	N49.42889254E11.08919125	N49.42889254E11.08919125
<ul> <li>Time settings</li> <li>User Management</li> </ul>	Field	Messfeld-Name	Messfeld-Name
• Oser Management	Group	Messfeld-Gruppe	Messfeld-Gruppe
	Nominal voltage	Messfeld-Unenn	Messfeld-Unenn
	Nominal power	Messfeld-Inenn	Messfeld-Inenn
	Nominal frequency	Messfeld-f	Messfeld-f
	Power network configuration	Messfeld-Leitersys	Messfeld-Leitersys
	Device	Geraete-Name	Geraete-Name
	Device type	PQI-DA smart	Geraetetyp
		Betriebsmittelkennzeichen	Betriebsmittelkennzeichen

The orange marked fields describe the device tile as well as all fault records and measurement data in the archive.

The exact position of the measuring device can be entered in the "GPS" field using the geographical coordinates. To do this, proceed according to a certain pattern. The latitude is preceded by N (North) or S (South) depending on the hemisphere. For the longitude E (East) and W (West) are used analogously. As decimal separator the point is to be used, a comma is not taken over by the parameterization and leads to an incorrect entry!

#### **Tabelle 1: Examples to GPS coordinates**

City	Latitude	Longitude	Entry
Berlin	52.5170365	13.3888599	N52.5170365E13.3888599
New York	40.7127281	-74.0060152	N40.7127281W74.0060152
Buenos Aires	-34.6042184	-58.3718455	S34.6042184E58.3718455
Canberra	-35.3075384	149.1245100	S35.3075384E149.1245100

## 7.5.2 TCP/IP settings

In the TCP/IP settings section, the network settings of the device can be done. If the DHCP client is not activated, the IP address, the subnet mask and the gateway can be set. The device has Address Conflict Detection (ACD) according to RFC 5227 and RFC 2131, which means that the device queries the network for its parameterized IP address when it is restarted. If it receives a response to such an ARP request, the IP address is not set. If this function needs to be deactivated, the parameter "ACD (Address Conflict Detection): Number of packets" must be set to "0".

If the IP address is parameterized with the WinPQlite to an IP address already existing in the network, the device does not take over this after the check. However, there is no feedback to the WinPQlite whether the parameterized IP address has been set successfully. In this case the device remains on the previous parameters.




If an incremental update of V2.10 or newer is applied to a device with a firmware version lower than V2.6, the ACD remains deactivated. However, the ACD is directly activated when the device is delivered from the factory.

Furthermore, the device has the possibility to communicate via Domain Name Server (DNS). For this purpose, the host name of the device as well as the IP address of two DNS can be parameterized.

# 7.5.3 Thresholds and Recording

The menu tree **Thresholds and Recording** contains all parameters for Power Quality as well as all recording parameters.

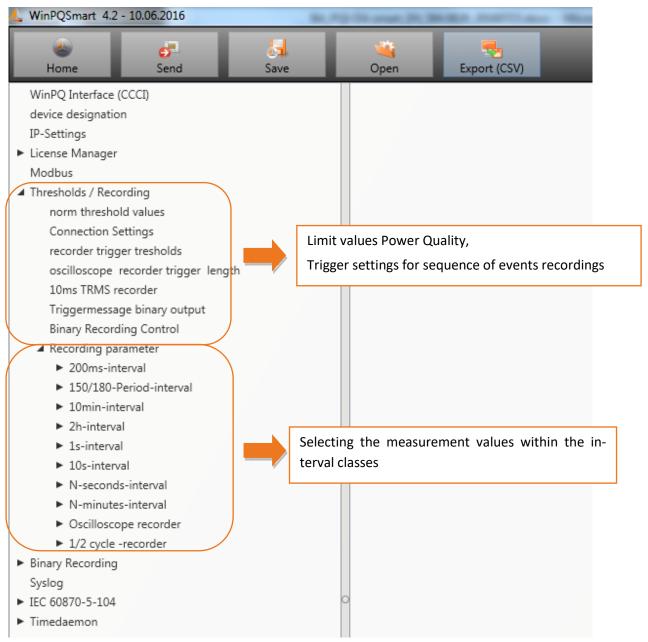

## 7.5.3.1 Norm thresholds

In **Norm thresholds** the limits for standard evaluations and for power quality events are set. The limits of EN 50160 for a low voltage system are stored in the default setting of delivery.

- Value: Value of PQI-DE this value can be changed
- Default:
- Default setting

device designation	Frequency	50Hz	✓ 50Hz
IP-Settings	Frequency ripple signal voltage [Hz]	168	168
<ul> <li>License Manager</li> </ul>	Flicker bulb	230V ·	✓ 230V
Modbus	Normalized voltage L-L-Sp. [percent from UNOM]	100	100
Thresholds / Recording     norm threshold values	hysteresis 1/2-Perioden-voltage [percent from UC bzw. UC/1	1	1
Connection Settings	tolerance band fast voltage change RVC, dd [percent from U		1
recorder trigger tresholds	threshold voltage dip (Dip) [percent from UC bzw. UC/1.73]	90	90
oscilloscope recorder trigger length	threshold voltage swell (threshold) [percent from UC bzw. UC		110
10ms TRMS recorder	threshold voltages interruption [percent from UC bzw. UC/1.7		5
Triggermessage binary output	lower threshold 10s- network frequency /Hz	49.5	49.5
Binary Recording Control	higher threshold 10s-Total network frequency /Hz	50.5	50.5
<ul> <li>Recording parameter</li> </ul>	lower threshold 10s-rotal network nequency /12 lower threshold 10min-voltage [percent from UC bzw. UC/1.73]		90
► 200ms-interval	higher threshold 10min-voltage [percent from UC bzw. UC/1]		110
<ul> <li>150/180-Period-interval</li> <li>10min-interval</li> </ul>		8	8
<ul> <li>Iomini-interval</li> <li>2h-interval</li> </ul>	threshold 10min-THD [percent]	-	
<ul> <li>Is-interval</li> </ul>	threshold 10min-voltages unbalance [percent]	2	2
► 10s-interval	threshold short time flicker PST	1	1
<ul> <li>N-seconds-interval</li> </ul>	threshold long time flicker PLT	1	1
<ul> <li>N-minutes-interval</li> </ul>	threshold 3 Sec -ripple signal voltages [percent from UC bzw	9	9
<ul> <li>Oscilloscope recorder</li> </ul>	Trigger-threshold 200ms-ripple signal voltage recorder [perc	1	1
► 1/2 cycle -recorder	<ul> <li>limit table 10min-voltages harmonic (H2) [percent]</li> </ul>	2	2
<ul> <li>Binary Recording</li> </ul>	threshold 10min-voltages harmonic (H3) [percent]	5	5
Syslog	threshold 10min-voltages harmonic (H4) [percent]	1	1
<ul> <li>IEC 60870-5-104</li> <li>Timedaemon</li> </ul>	threshold 10min-voltages harmonic (H5) [percent]	6	б
<ul> <li>Imedaemon</li> </ul>	threshold 10min-voltages harmonic (H6) [percent]	0,5	0,5

## 7.5.3.2 Connection settings

device designation	connection configuration voltage inputs	VT L1, L2, L3, N	<ul> <li>VT L1, L2, L3, N</li> </ul>
IP-Settings	reference voltage input Frequency measurement	U1N	✓ U1N
License Manager	Power calculation	without Unbalance Reactive Power	✓ without Unbalance Reactive Power Pow
Modbus	connection configuration current inputs	CT L1, L2, L3, N	<ul> <li>CT L1, L2, L3, N</li> </ul>
Thresholds / Recording norm threshold values	Network type	4 - wire system ( three phase grid)	✓ 4 - wire system ( three phase gr
Connection Settings	interval n-seconds-data class [s], 260	60	60
recorder trigger tresholds	binary input for trigger interval-Power	internal interval	✓ internal interval
oscilloscope recorder trigger length	interval N-Minute-data class [min] , 160	15	15
10ms TRMS recorder	THD and THC calculation	H40	✓ H40
Triggermessage binary output	voltage transducer factor (VT)	1	1
Binary Recording Control A Recording parameter	current transducer factor (CT)	1	1
200ms-interval	Transducer correction factor U1	1	1
<ul> <li>150/180-Period-interval</li> </ul>	Transducer correction factor U2	1	1
► 10min-interval	Transducer correction factor U3	1	1
2h-interval	Transducer correction factor U4	1	1
► 1s-interval	CT correction factor I1	1	1
► 10s-interval	CT correction factor I2	1	1
<ul> <li>N-seconds-interval</li> </ul>	CT correction factor I3	1	1
<ul> <li>N-minutes-interval</li> </ul>	CT correction factor I4	1	-
<ul> <li>Oscilloscope recorder</li> </ul>		-	-

The following basic instrument settings can be made in this menu item:



### Connection voltage inputs: 1, 2, 3, 4

VT L1, L2, L3, N
V-circuit, grounding L1
V-circuit, grounding L2
V-circuit, grounding L3

V-connection (two voltage transformers) Grounding L2 = connect VT L1 and VT L3 L2 will be calculated from the device

#### Reference voltage:

Determining the frequency measurement input channel: U1, U2, U3, Une, U12, U23, U31

#### Power calculation:

- Simplified power calculation without calculation of unbalance power
- According DIN40110-2; with calculation of the unbalance reactive power

This setting has also an effect on the power values in the display of the PQI-DE

## **Connection current inputs:**

CT L1, L2, L3, N	
CT L2,L3	Aron connection of current (two CT´s)
ct's L1, L3	CT L1, L3 = connect L1 and L3, current L2 will be calculated from the device
ct's L1, L2	

#### Network connection:

4 - wire system ( three phase grid)

- 4 wire system (unique independent phases )
- 3 wire system

#### Interval "n"-seconds data class:

Free interval - 2 seconds to 60 seconds

#### **Binary input for power intervals:**

internal interval

synchronised Power values at Binary Input 1

synchronised Power values at Binary Input 2

All power and energy intervals are synchronized to this impulse

### Interval "n"-minutes data class:

Free interval - 1 minute to 60 minutes (basic setting 15 minutes)

#### Calculation THD / THC:

Calculation  $2^{nd}$  to  $40^{th}$  harmonic or  $2^{nd}$  to  $50^{th}$  harmonic

Voltage transducer factor (basic setting = 1)

Example: VT 20,000 V / 100 V = factor 200

#### Current transducer factor (basic setting = 1)

Example: CT 600 A / 5 A = factor 120

#### CT correction factor

Additional to the current transducer factor it is possible to have a second CT correction factor. This factor will be multiplied with the current transducer factor. Possible values are from -2 to 2.



Using a current transformer correction factor of "-1", it is possible to change the power flow direction by software.



## 7.5.3.3 Trigger parameter for disturbance recorder

In this menu all limits for triggering of fault records can be changed. These thresholds are independent to the Power Quality thresholds.

Upper and lower trigger thresholds for frequency, voltage, current or unbalance can be set.

device designation	trigger signal-hold time [s]	1	1
IP-Settings	Frequency-hysteresis [Hz]	0,05	0,05
<ul> <li>License Manager</li> </ul>	Frequency : upper limit [Hz]	50,5	50,5
Modbus  Thresholds / Recording	Frequency : lower limit [Hz]	49,5	49,5
norm threshold values	Frequency : threshold df 1/2 [Hz/s]	0,5	0,5
Connection Settings	voltages-hysteresis [percent from UC bzw. UC/1.73]	2	2
recorder trigger tresholds	Star voltage: upper limit [percent from UC/1.73]	110	110
oscilloscope recorder trigger length	Star voltage: lower limit [percent from UC/1.73]	90	90
10ms TRMS recorder	Star voltage: threshold dU 1/2 [percent from UC/1.73]	10	10
Triggermessage binary output	Star voltage: threshold dphi 1/2 /Grad	6	6
Binary Recording Control A Recording parameter	Displacement voltage: upper limit [percent from UC/1.73]	30	30
<ul> <li>Recording parameter</li> <li>200ms-interval</li> </ul>	Displacement voltage: threshold dU 1/2 [percent from UC/1.73	] 10	10
► 150/180-Period-interval	line-to-line voltage: upper limit [percent from UC]	110	110
► 10min-interval	line-to-line voltage: lower limit [percent from UC]	90	90
2h-interval	line-to-line voltage: threshold dU 1/2 [percent from UC]	10	10
1s-interval	Star voltage: threshold envelopentrigger [percent from UC/1	20	20
► 10s-interval	line-to-line voltage: threshold envelopentrigger [percent fro	20	20
<ul> <li>N-seconds-interval</li> <li>N-minutes-interval</li> </ul>	Displacement voltage: threshold envelopentrigger [percent fr	20	20
<ul> <li>Oscilloscope recorder</li> </ul>	positive sequence voltage: upper limit [percent from UC/1.73]	110	110
► 1/2 cycle -recorder	o positive sequence voltage: lower limit [percent from UC/1.73]	90	90

### Example:

line-to-line voltage: lower limit [percent from UC]	90
line-to-line voltage: threshold dU 1/2 [percent from UC]	10


If one phase to phase voltage exceeds 110% or 90% of the nominal voltage, the oscilloscope and the  $\frac{1}{2}$  period RMS recorder will start recording.

## 7.5.3.4 Oscilloscope recorder

The oscilloscope disturbance recorder is set up under the menu item "Limits/Recording -> Oscilloscope Recorder".

	device designation	minimum recorder length (Nr. of items)	4096	4096
IP-Settings ► License Manager Modbus ▲ Thresholds / Recording	IP-Settings	maximum recorder length (Nr. of items)	10240	10240
	Rekorder pretime (Nr. of items)	1024	1024	
		lower voltage U1E -> aktive	1	1
		lower voltage U2E -> aktive	1	1
	norm threshold values	lower voltage U3E -> aktive	1	1
	Connection Settings recorder trigger tresholds	lower voltage U12 -> aktive	1	1
	oscilloscope recorder trigger length	lower voltage 012 -> aktive	1	1
	10ms TRMS recorder		1	1
	Triggermessage binary output	lower voltage U31 -> aktive	1	1
	Binary Recording Control	lower voltage U1E -> passive	0	0
	A Recording parameter     200ms-interval     150/180-Period-interval	lower voltage U2E -> passive	0	0
		lower voltage U3E -> passive	0	0
		lower voltage U12 -> passive	0	0
	► 10min-interval	lower voltage U23 -> passive	0	0
	2h-interval	lower voltage U31 -> passive	0	0
	► 1s-interval	over voltage U1E -> aktive	1	1
	▶ 10s-interval		1	-
	<ul> <li>N-seconds-interval</li> </ul>	over voltage U2E -> aktive	1	1
	<ul> <li>N-minutes-interval</li> </ul>	over voltage U3E -> aktive	1	1
	<ul> <li>Oscilloscope recorder</li> </ul>	over voltage U12 -> aktive	1	1
	► 1/2 cycle -recorder	o over voltage U23 -> aktive	1	1

- Minimum recorder length: Setting of the standard fault recorder length
- Maximum recorder length: If another trigger criterion occurs during the minimum recording length after the trigger signal holding time, the Record is extended by the minimum length up to the maximum length
- **Recorder pre time** is the time of the recorder file before the trigger threshold occurred.

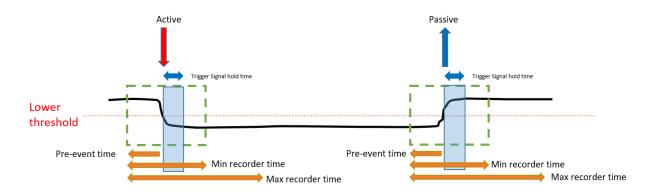

Active trigger = value exceeds or falls below threshold (start of the event)

Passive trigger = value comes back to normal (end of the event)

Sampling frequency : 40960Hz / 10240Hz	10240	40960	10240	40960
	с			

Sampling frequency of oscilloscope recorder can be changed from 10,240 Hz to 40,960 Hz
 The maximum recorder length with 10.24 kHz is 16 seconds as well as with 40.96 kHz is 4 seconds
 (40,960 Hz is only available with option B1)




**Example recorder length**: 20,480 = 2 seconds recorder length with a sampling frequency of 10,240 Hz and 500ms length with a sampling frequency of 40,960 Hz.

### 7.5.3.5 ½ cycle recorder

The trigger settings of ½ cycle recorder (10ms at 50 Hz) are independent to oscilloscope recorder.

device designation	minimum recorder length (valuee)	1000	1000
IP-Settings	maximum recorder length (valuee)	30000	3000
License Manager	Rekorder pretime (valuee)	250	250
Modbus  Thresholds / Recording	lower voltage U1E -> aktive	1	1
<ul> <li>Inresholds / Recording</li> <li>norm threshold values</li> </ul>	lower voltage U2E -> aktive	1	1
Connection Settings	lower voltage U3E -> aktive	1	1
recorder trigger tresholds	lower voltage U12 -> aktive	1	1
oscilloscope recorder trigger length	lower voltage U23 -> aktive	1	1
10ms TRMS recorder	lower voltage U31 -> aktive	1	1
Triggermessage binary output	lower voltage U1E -> passive	0	0
Binary Recording Control <ul> <li>Recording parameter</li> </ul>	lower voltage U2E -> passive	0	0
Binary Recording	lower voltage U3E -> passive	0	0
Syslog	lower voltage U12 -> passive	0	0
► IEC 60870-5-104	lower voltage U23 -> passive	0	0
▶ Timedaemon	lower voltage U31 -> passive	0	0
	over voltage U1E -> aktive	1	1
	over voltage U2E -> aktive	1	1
	over voltage U3E -> aktive	1	1
	over voltage U12 -> aktive	1	1

### Please see chapter 7.5.3.3 explanation trigger thresholds

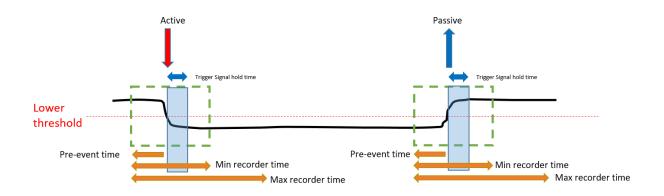

#### Example recorder length:

3000 x 10ms (at 50 Hz) RMS values results in a length of 30 seconds for this recorder.

## 7.5.3.6 Trigger of binary output 2 to 4

It is possible to assign all trigger events, the states of the RCM monitoring and the states of the measured value monitoring to the binary outputs 2 to 4. In addition, the behaviour of the respective binary outputs can be defined in the General menu. In the following, this chapter explains the various parameterisation options.

#### General

The General menu defined the behaviour of the binary outputs 2 to 4.

Here the relay can be inverted, which results in the following behaviour:

• Invert relays - The relay behaviour changes from NO to NC

The following relay behaviour can also be selected:

- Pulse Short pulse wipe of the relay of one second.
- Permanent The relay remains permanently energised.

WinPQ Interface (CCCI)	Parameter Name	Value		Default Valu
SSH	Invert relays			
Device designation	Operation mode	Pulse	~	Pulse
IP-Settings				
<ul> <li>License Manager</li> </ul>				
Modbus				
Thresholds / Recording				
Norm Threshold Values				
Connection settings				
Recorder Trigger-Thresholds				
Oscilloscope Recorder (Trigger & Length)				
TRMS recorder (Trigger & Length)				
Trigger to Binary Output				
▲ Binary Output 2				
General				
Trigger				
Events				
Residual Current Measurement				
Measurement supervision				
Binary Output 3				
Binary Output 4				
Residual Current Measurement				
<ul> <li>Measurement supervision</li> </ul>				
Statistics				
Binary Recording Control	0			
<ul> <li>Recording settings</li> </ul>				
<ul> <li>Binary Recording</li> </ul>				
<ul> <li>SCADA-Manager</li> </ul>				
Syslog				
Temperature measurement				
Time settings				
<ul> <li>User Management</li> </ul>				



## Trigger

#### In the Trigger menu, you can define trigger events to which the binary output should react.

WinPQ Interface (CCCI)	Parameter Name	Value	Default Value
SSH	Undervoltage U1E -> active	~	~
Device designation	Undervoltage U2E -> active	~	~
IP-Settings	Undervoltage U3E -> active	~	1
License Manager	Undervoltage U12 -> active	~	~
Modbus	Undervoltage U23 -> active	7	1
Thresholds / Recording	Undervoltage U31 -> active	~	· ·
Norm Threshold Values			
Connection settings	Undervoltage U1E -> passive		
Recorder Trigger-Thresholds	Undervoltage U2E -> passive		
Oscilloscope Recorder (Trigger & Length) TRMS recorder (Trigger & Length)	Undervoltage U3E -> passive		
<ul> <li>Trigger to Binary Output</li> </ul>	Undervoltage U12 -> passive		
<ul> <li>A Binary Output 2</li> </ul>	Undervoltage U23 -> passive		
General	Undervoltage U31 -> passive		
Trigger	Overvoltage U1E -> active	~	~
Events	Overvoltage U2E -> active	~	~
<ul> <li>Binary Output 3</li> </ul>	Overvoltage U3E -> active	~	1
<ul> <li>Binary Output 4</li> </ul>	Overvoltage U12 -> active	~	~
Residual Current Measurement	Overvoltage U23 -> active	~	1
<ul> <li>Measurement supervision</li> </ul>	Overvoltage U31 -> active	1	1
Statistics	Overvoltage UNE -> active		~
Binary Recording Control		, L	Ū.
Recording settings	Overvoltage U1E -> passive		
Binary Recording     SCADA-Manager	<ul> <li>Overvoltage U2E -&gt; passive</li> </ul>		
	Overvoltage U3E -> passive		
Syslog Temperature measurement	Overvoltage U12 -> passive		
Time settings	Overvoltage U23 -> passive		
User Management	Overvoltage U31 -> passive		
		-	-

#### Possible triggering criteria:

- Lower / upper voltage
- Positive sequence / negative sequence
- Envelop voltage trigger
- Voltage step / current step
- Phase change
- Lower frequency / upper frequency
- Frequency change
- Lower current / upper current
- Binary input

All trigger events can be set to the start of the event or to the end of the event (active / passive trigger).



Simultaneous parameterisation of trigger events and states is not possible!



With activation of the RCM function (see chapter 6.5.2), the active and passive trigger is also activated in case of overcurrent of the residual current  $I_{RCM}$  as well as the fault current  $I_{FCM}$ . Deactivation of the measured variables is not possible, therefore the respective parameter fields are grayed out (from WinPQ / WinPQlite version 6.0.0).

#### **Events – Residual Current Measurment**

In the menu, residual current measurement the different monitoring states can be assigned to the binary output. Here a distinction is made between the following states:

- Normal
- Warning
- Alarm
- Error

In addition, a distinction is made between acknowledgement and non-acknowledgement:

- Not confirmable The relay remains energised until the status is left again.
- Acknowledgement required the relay remains energised until the status is acknowledged on the device display.

WinPQ Interface (CCCI)		Parameter Name	Value	Default Val
SSH		Normal (not confirmable)		
Device designation		Warning (not confirmable)		
IP-Settings		Alarm (not confirmable)		
License Manager		Error (not confirmable)		
Modbus				
A Thresholds / Recording		Warning (acknowledgement required)		_
Norm Threshold Values		Alarm (acknowledgement required)		
Connection settings		Error (acknowledgement required)		
Recorder Trigger-Thresholds				
Oscilloscope Recorder (Trigger & Length)				
TRMS recorder (Trigger & Length)				
<ul> <li>Trigger to Binary Output</li> </ul>				
Binary Output 2				
General				
Trigger				
<ul> <li>Events</li> </ul>				
Residual Current Measurement				
Measurement supervision				
<ul> <li>Binary Output 3</li> </ul>				
<ul> <li>Binary Output 4</li> </ul>				
Residual Current Measurement				
<ul> <li>Measurement supervision</li> </ul>				
Statistics				
Binary Recording Control		0		
<ul> <li>Recording settings</li> </ul>				
<ul> <li>Binary Recording</li> </ul>				
<ul> <li>SCADA-Manager</li> </ul>				
Syslog				
Temperature measurement				
Time settings	1			
<ul> <li>User Management</li> </ul>	1			

The relays are controlled based on the defined behaviour when entering the defined state.



Simultaneous parameterisation of trigger events and states is not possible!



#### Event – Measurement supervision

In the Measurement supervision menu, monitoring states 1 to 32 can be assigned to relays 2 to 4. The parameter setting of the monitoring states is described in chapter7.11.

state 1 state 2 state 3 state 4 state 5 state 6 state 7		
state 3 state 4 state 5 state 6		
state 4 state 5 state 6		
state 5 state 6		
state 5 state 6		
state 6		
state /		
state 8		
state 9		
state 10		
state 11		
state 12		
state 13		
state 14		
state 15		
state 16		
state 17		
state 18		
state 19		
state 20		
state 21		
state 22		
state 23		
state 24		
state 25		
state 26		
state 27		
state 28		_
state 30		
1		
n	n state 29 n state 30 n state 31	n state 29 n state 30 n state 31

The relays are controlled based on the defined behaviour when entering the defined state.

1

Simultaneous parameterisation of trigger events and states is not possible!

## 7.5.3.7 Control of recording via binary inputs

With the input signal of the two digital inputs, it is possible to start and stop the PQI-DE recorders. The following functions can be started or stopped via the digital input:

- All permanent recorder
- Oscilloscope recorder
- ½-cycle RMS recorder

Pocording control with Pinony Japut	2020	✓ none
logic level recording control	Recording ist running with low gauge at B	X Recording ist running with low gauge
	Recording control with Binary Input logic level recording control	

To control the recording of PQI-DE with the eight binary inputs, nine settings are available:

none
Binary Input 1
Binary Input 2
Binary Input 3
Binary Input 4
Binary Input 5
Binary Input 6
Binary Input 7
Binary Input 8

With the function "logic level recording control" the signal may be negated.

Recording starts at low level and stops at high level Recording starts at high level and stops at low level



## 7.5.3.8 Residual Current Measurement

Via the menu, differential current measurement the parameterisation for the differential current monitoring can be made.

WinPQ Interface (CCCI)	Parameter Name	Value	Default Value
SSH	Residual current measurement active		
Device designation	Conversion factor residual current transformer	1	1
IP-Settings	Correction factor residual current transformer 1.Harm. {Re}	1	1
· License Manager Modbus	Correction factor residual current transformer 1.Harm. {Im}	0	0
Thresholds / Recording	Correction factor residual current transformer 3.Harm. {Re}	1	1
Norm Threshold Values	Correction factor residual current transformer 3.Harm. {Im}	0	0
Connection settings	Correction factor residual current transformer 5.Harm. {Re}	1	1
Recorder Trigger-Thresholds	Correction factor residual current transformer 5.Harm. {Im}	0	0
Oscilloscope Recorder (Trigger & Length)	Correction factor residual current transformer 7.Harm. {Re}	1	1
TRMS recorder (Trigger & Length)	Correction factor residual current transformer 7.Harm. {Im}	0	0
<ul> <li>Trigger to Binary Output</li> <li>Residual Current Measurement</li> </ul>	Nominal residual current IRN [A]	0,00012	0,00012
Measurement supervision	Residual current warning threshold [% of IRN]	50	50
Statistics	Residual current alarm threshold [% of IRN]	100	100
Binary Recording Control	Residual current threshold hysteresis [% of IRN]	2	2
<ul> <li>Recording settings</li> </ul>	RCM state change delay [s]	3	3
Binary Recording	Auto-acknowledge RCM warning		
SCADA-Manager			



With the parameter Auto Acknowledge RCM warning, you can activate automatic resetting of the pop-up display-warning message.

## 7.5.3.9 Statistic

The data class for the extreme values of voltage and current in the device display can be selected via the Statistics menu.

WinPQ Interface (CCCI)	Parameter Name	Value
SSH	(4261413984/FE000460) Source of D	0rag Counter 10T/12T data class
Device designation		
Logbook		
IP-Settings		
<ul> <li>License Manager</li> </ul>		
SD-Card parameter		
Modbus		
Thresholds / Recording		
Factory parameters (EEPROM + Filesystem)		
Norm Threshold Values		
Connection settings		
Recorder Trigger-Thresholds		
Oscilloscope Recorder (Trigger & Length)		
TRMS recorder (Trigger & Length)		
<ul> <li>Trigger to Binary Output</li> </ul>		
Display		
Statistics		

The following data classes are available for this purpose:

- 10/12 periods (200ms interval)
- 1 second interval
- 10 minute interval
- N x minutes Interval



It is not necessary to activate the required recording parameters for the respective data class! The extreme values voltage and current will reset automatically, if the data class is changed.

## 7.5.4 Recordings parameter

At this point, the selection of all permanent measured values within the interval data class is set.

The following interval data classes available

- 10/12 cycle (200ms interval)
- 150/180 cycle (3 seconds interval)
- 10 minutes interval
- 2 h interval
- 1 seconds interval
- 10 seconds interval
- N x seconds interval (range 2seconds to 60 seconds)
- N x minutes interval (range 1minute to 60 minutes basic setting 15 min.)



WinPQ Interface (CCCI)	<u>^</u>	1 2
device designation		RMS value u1E / u1N
IP-Settings		RMS value u2E / u2N
<ul> <li>License Manager</li> </ul>		RMS value u3E / u3N
Modbus	<b>V</b>	
Thresholds / Recording		RMS value u12
norm threshold values	<b>v</b>	
Connection Settings		RMS value u31
recorder trigger tresholds		Phasor value u1E / u1N
oscilloscope recorder trigger length		Angle from phasor u1E / u1N
10ms TRMS recorder		Phasor value u2E / u2N
		Angle from phasor u2E / u2N
Triggermessage binary output		Phasor value u3E / u3N
Binary Recording Control		Angle from phasor u3E / u3N
<ul> <li>Recording parameter</li> </ul>		Phasor value u0E / uNE
► 200ms-interval		Angle from phasor u0E / uNE
<ul> <li>150/180-Period-interval</li> </ul>		Phasor value u12
▲ 10min-interval		Angle from phasor u12
voltagesvalues		Phasor value u23
Harmonic u1E / u1N		Angle from phasor u23
Interharmonic u1E / u1N		Phasor value u31
Harmonic u2E / u2N		Angle from phasor u31
Interharmonic u2E / u2N	<b>V</b>	Value from positive sequence
Harmonic u3E / u3N		Angle from positive sequence
Interharmonic u3E / u3N	<b>V</b>	Value from negativ sequence
Harmonic u0E / uNE		Phase from negativ sequence
Interharmonic u0E / uNE	<b>V</b>	Value from zero system
Harmonic u12		Phase from zero system
Interharmonic u12	<b>V</b>	Unbalance u 2 (negativ/positiv system) [percent] with sign rotation
Harmonic u23		Unbalance u 0 (zero/positv system) [percent]
Interharmonic u23	<b>V</b>	THD from u1E / u1N [percent]
Harmonic u23		THD from u2E / u2N [percent]
		THD from u3E / u3N [percent]
Interharmonic u31		THD from u0E / uNE [percent]
Angle of Harm. 250 from u1E / u1N	-	THD from u12 [percent]

All activated measuring values are permanently recorded in this data class.

<b>V</b>	T Fill u1N
	RMS value u2E / u2N
	RMS value u3E / u3N
	RMS value u0E / uNE
	RMS value u12

With right mouse click you can activate or deactivate all parameters in this list with the function "fill".

With activation of the RCM function (see chapter 6.5.2) the long-term measurement of the residual current  $I_{RCM}$ , the fault current  $I_{FCM}$  as well as harmonics of the residual current is activated in the following data classes:



- 150/180 periods (3 seconds interval)
- 10 minutes interval

Deactivation of the measured variables is not possible, therefore the respective parameter fields are displayed grayed out (from WinPQ / WinPQlite version 6.0.0).

## 7.5.4.1 Disturbance recorder parameter

For oscilloscope recorder and ½ cycle recorder it is possible to activate and deactivate measurement values.

Home	Send	S	Save	Open own templates	Open default templates		
device designation	on						
IP-Settings			Time diffe	erence [TineReso] zero	crossing Referenz	ohasor Start time	
Modbus			Frequency	y [Hz]			
PQ application			RMS value	e from u1E / u1N			
PQ-paramete			RMS value	e from u2E / u2N			
General user	2		RMS value	e from u3E / u3N			
Trigger-para			RMS value	e from u0E / uNE			<b>V</b>
· ·	recorder ( User! )		RMS value	e from u12			
	ecorder ( User! )		RMS value	e from u23			
Recording page			RMS value	e from u31			<b>V</b>
► 200ms-ir			RMS value	e from i1			
	Perioden-interval		RMS value	e from i2			
► 10min-in ► 2h-interv			RMS value	e from i3			
<ul> <li>2n-interv</li> <li>1s-interv</li> </ul>			RMS value	e from iE / iN			<b>V</b>
<ul> <li>Is-interv</li> <li>10s-interv</li> </ul>			Phase-rea	al power L1			
N-second			Phase-rea	active power L1			
M-secon				al power L2			
	ope recorder			active power L2			
1	loscope data 3-wire-	/4-wire-	Phase-rea	al power L3			
▲ 1/2 cylcle		,		active power L3			
	ylcle -value, 3-wire /	4-wire-Sy					
► Timedaemon	•		Total-disp	, placement-reactive po	wer		
			Phase Tot	tal-fundamental-appa	rent power S G		
			0	tages-Phasor from u1l			
			Phase volt	tages-Phasor from u1	E/u1N		
			Value volt	tages-Phasor from u2I	E/u2N		
				-			

#### Example:

The ½ cycle recorder should also record the power and the frequency during a disturbance record.



With activation of the function RCM (see chapter 6.5.2) the recording of the differential current  $I_{RCM}$  as well as the fault current  $I_{FCM}$  in the oscilloscope recorder as well as the half-period recorder is activated.

A deactivation of the measured variables is not possible, therefore the respective parameter fields are displayed grayed out (from WinPQ / WinPQlite version 6.0.0).

## 7.5.5 Parameterization of the temperature measurement

The recording of the temperature measurement variables is only available in the two data classes nseconds and N-minutes. These are deactivated by default. Therefore, it must first be activated.

ZNIIZ#7NIIZ IL/IN	^	Parameter Name	Value	Default Value
Power values			-	
Energy Values		temp	$\checkmark$	
Temperature Values				
<ul> <li>N-minutes-interval</li> </ul>				

Afterwards, the properties of the temperature sensor can be entered in the Temperature measurement tab:



#### We take care of it.

WinPQ Interface (CCCI)	Parameter Name	Value	Default Value
SSH	Wire mode	4-Wire 🗸	2-Wire
Device designation	Resistor at norm temp	100	100
IP-Settings	Norm temperature	0	0
▶ License Manager Modbus	Linear coefficient	0,00391	0,0039083
Thresholds / Recording	RMS coefficient	0	-5,775E-7
<ul> <li>Binary Recording</li> </ul>	Lower measuring range limit	-50	-50
SCADA-Manager	Upper measuring range limit	250	250
Syslog	Lower monitoring threshold	0	0
Temperature measurement	Upper monitoring threshold	100	100
<ul> <li>Time settings</li> <li>User Management</li> </ul>	Hysteresis monitoring	2	2
-			

For the connection type, the connection settings from chapter 5.7.2 must be taken into account. The other values can be found in the data sheet of the temperature sensor. The last three fields are independent of the sensor and lead to the generation of a PQ event if a limit is exceeded or undercut.

The binary output can also be connected to the temperature input using the measured value monitoring function (select group S - Other) (more on measured value monitoring in chapter 7.11).

Setup	of measurands	
	Nsec	~
► F		
▶		
► P		
⊿ S		
	Other	
	temp [temp]	
►U		



The quantities in the "Value" column are rounded to five decimal places. Therefore, they are visually different from the factory settings, but contain the identical values!

# 7.6 Online measurement values



The "**Online** function offers extensive analysis functions for online measurement values.

Measure values	Harmonic 2 - 50	Inter-Harmonic 2 - 50	Frequency bands 2 - 9 kHz	Device panel
Measure values	Voltage Ph-E	Voltage Ph-E	Voltage Ph-E	10 60 cm
Vector-Diagram	Voltage Ph-Ph	Voltage Ph-Ph	Voltage Ph-Ph	Software Trigger
oscilloscope-picture	Current	Current	Current	
FFT-Spectrum				

Start screen of the online measurement values:


## 7.6.1 Measurement values

Display of online measurement values for voltages, currents, power and grid frequency.

Frequency		Power		Power factor		THD		Binäreingänge		
F:	49,98 Hz	P1:	0,00 W	PF1:	1,00	THD U1E:	6,19 %	BI1:	•	
		P2:	-0,02 W	PF2:	1,00	THD U2E:	2,09 %	BI2:		
Voltage		P3:	-0,01 W	PF3:	1,00	THD U3E:	2,09 %	BI3:		
UL1:	12,81 V	P total:	-0,02 W	PF Netz:	1,00	THD UNE:	0,00 %	BI4:	•	
JL2:	233,30 V	S1:	0,07 VA	0,07 VA			THD U12:	1,86 %	BI5:	•
JL3:	233,28 V	S2:	0.81 VA	Phase Angle		THD U23:	0.00 %	BI6:	•	
JNE:	9,55 V	S3:	0,63 VA	PHL1:	0,00 °	THD U31:	1.86 %	BI7:	•	
J12:	230,06 V	S total:	1,51 VA	PHL2:	-73,85 °	THD I1:	0,00 %	BI8:	•	
J23:	0,03 V		_/	PHL3:	-73,85 °	THD I2:	0,00 %			
U31: 230,04 V			cos PHL1:	1,00	THD I3:	0.00 %				
				cos PHL2:	1,00	THD I4:	0,00 %			
				cos PHL3:	1,00	IIID PA	0,00 10	Symetrie		
				cos PH:	1,00			UU:	-99,99 %	
Current Reactive Power (fundamental)		Distortion Power				Reactive powe	r total			
1:	0,01 A	QV1:	0,00 VAR	D1:	0,07 VAR			Q1:	0,07 VAR	
2:	0,00 A	QV2:	-0,02 VAR	D2:	0,81 VAR			Q2:	0,81 VAR	
3:	0,00 A	QV3:	-0,01 VAR	D3:	0,63 VAR			Q3:	0,63 VAR	
[4:	0,01 A	QV total:	-0,15 VAR	D total:	1,50 VAR			Q total:	1,51 VAR	



## 7.6.2 Vector diagram

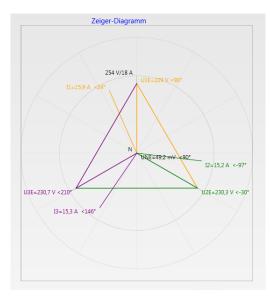


In the vector diagram, connection faults are easy to detect. All phase voltages and currents are displayed with phase angles.

## 7.6.3 Oscilloscope image

Online oscilloscope (40.96 kHz/ 10.24kHz) for the following channels:


- Conductor-earth voltages L1, L2, L3, NE
  - Conductor-conductor voltages L12, L23, L31
- Currents L1, L2, L3, N

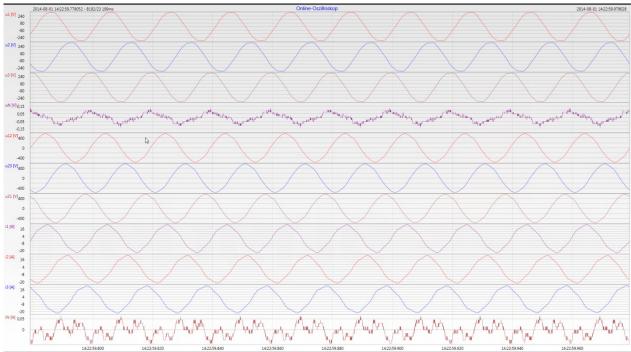


## 7.6.4 Online spectrum FFT-Analyse

Online-FFT analysis depending on the license of the device

- Sampling frequency 41.96 kHz = FFT analysis up to 20 kHz
- Sampling frequency 10.24 kHz = FFT analysis up to 5 kHz

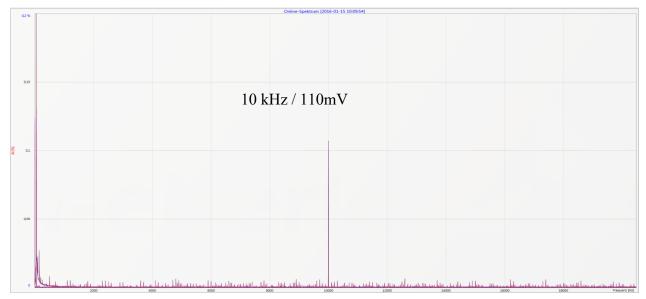

Example: charging device for electrical cars / 10 kHz sampling frequency visible in the FFT analysis.

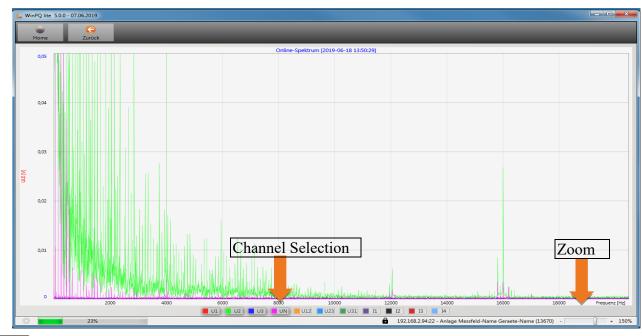

Using the zoom function it is possible to adjust the scaling of the application.

Using the buttons U1 / U2 ... I4 it is possible to fade in and fade out channels every second during refresh.

1



## 7.6.5 Harmonic


From the **Harmonics** tab page, all of the current and voltage harmonics (2<sup>nd</sup> to 50<sup>th</sup>) can be displayed online. The measurement data is calculated by the measuring device in accordance with IEC61000-4-30 Class A Ed. 3 and transferred to the PC.

There are three bar charts available:

- Voltage harmonics conductor-earth
- Voltage harmonics conductor-conductor
- Current harmonics

As the EN50160 only specifies limits for harmonics up to the 25<sup>th</sup> ordinal, the compatibility level of IEC61000-2-2 has been stored for the 26<sup>th</sup> to the 50<sup>th</sup> harmonics in the basic settings.

Compatibility levels in accordance with EN50160 & IEC61000-2-2 are shown as green limit value bars.

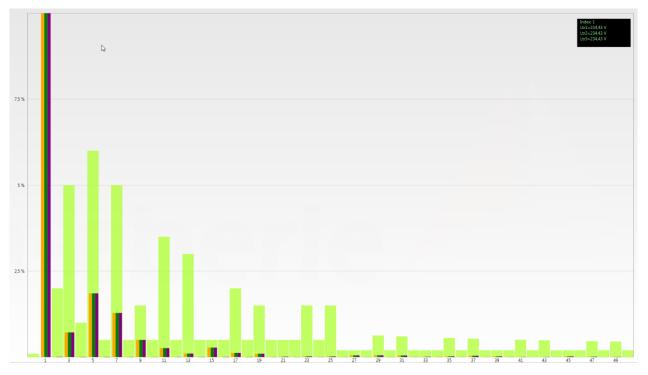


If a harmonic is selected with the mouse pointer, this measurement value is displayed in the field on the top right.

## 7.6.6 Interharmonic

The **Interharmonic** card is used to display all current and voltage Interharmonic up to 2,500 Hz online. The measurement data is calculated by the measuring device in accordance with IEC61000-4-30 Class A following the grouping process and transferred to the PC.

There are three bar charts available:

- Interharmonic voltages line-earth
- Interharmonic voltages line-earth

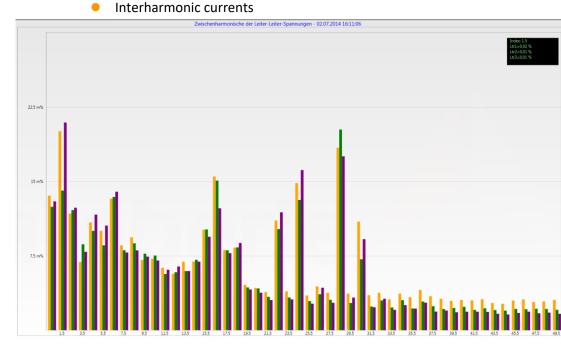


If an Interharmonic is selected with the mouse pointer, this measurement value is displayed in the field on the top right.

### **Explanation of the grouping process in accordance with the IEC:**

To evaluate the Interharmonic in the grid, subgroups are created. In each case, all of the Interharmonics between two harmonics are combined into one harmonics subgroup.

Example for 50 Hz: Interharmonic H2 includes all frequencies from 110 Hz to 140 Hz.

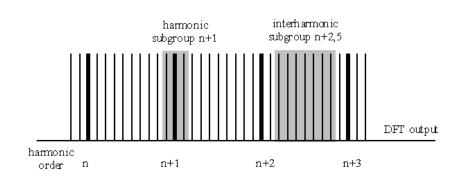




# 7.6.7 Supraharmonics from 2 kHz to 9 kHz

## **•** The device characteristic "Supraharmonics from 2kHz to 20 kHz" is a device option

The card **2 to 9kHz** is used to display all current and voltage harmonics in 200 Hz groups. Evaluation is in accordance with the IEC61000-4-7 standard.


The centre frequency of the corresponding frequency band is stated.

**Example:** All frequencies from 8,805 Hz to 9,000 Hz are located in the 8.9 kHz band.

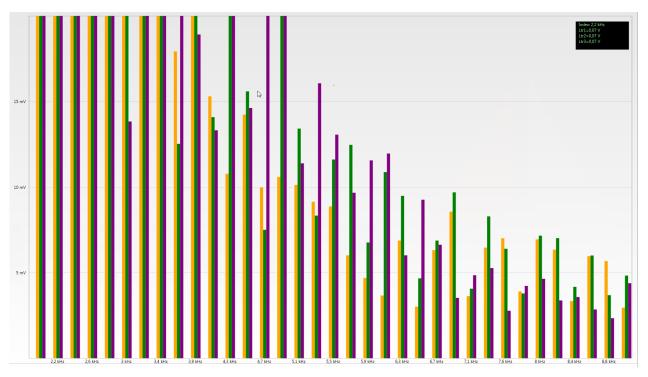

If a frequency band is selected with the mouse pointer, this measurement value is displayed in the field on the top right.

# 7.6.8 Software trigger

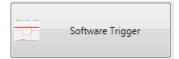

The "Software Trigger" key can be used to trigger the oscilloscope recorder and ½-period RMS recorder manually. The recorder length corresponds with the settings in the setup menu of the device.

# 7.7 Measurement data import



Import The Import function can be used to load all measurement data from the PQI-DE to the PC and to evaluate it there.

WinPQSmart 04.02.2015				
کے Home In	🐓 nport	Loopelete		
▲ Recorder Data				
200ms TRMS 3s TRMS		Inactive	e Data class not active	e – no measurement data
> 10min TRMS				
<ul> <li>2h TRMS</li> </ul>		Data cla	ass active – measuren	nent data available
1s TRMS				
<ul> <li>10s TRMS</li> </ul>				
variable second interv	al TRMS			
<ul> <li>variable minute interv</li> </ul>	al TRMS			
Async				
<ul> <li>Disturbance recorders</li> </ul>	5			
PQ-events				

Import of data can be selected to:

- Only selected data files from the device
- All events
- Selected events






کی Home				
Files	Scaling	Marker		
🔺 📃 Recorder Data				Selecting the main folder "recorder
200ms TRI	MS		<b>*</b> *	date" will activate all available data
3s TRMS				for download
🔺 🗹 10min TRM	MS			Coloret the internal data alaraa
☑ 11.03.2	2016 17:20:01 - 11.03.20	16 19:35:17 - 73Kb		Select the interval data classes
☑ 11.03.2	2016 19:35:29 - 11.03.20	16 21:56:43 - 76Kb		3 permanent recorder files available
☑ 11.03.2	2016 21:57:57 - 11.03.20	16 23:30:01 - 63Kb		
2h TRMS				
1s TRMS				
10s TRMS				
📃 variable se	cond interval TRMS			
variable m	inute interval TRMS			
Async				
🔺 📝 Disturband	ce recorders		_	
Oscilloscope Rekorder				Select the number of the triggered
I0ms TRMS Recorder				sequence of events recordings (oscillo-
🗾 Нр	11.03.2016 21:57:05 49	Kb	~	scope and ½ cycle RMS recorder)
PQ-events				

### Level-time diagram of permanent measuring data

When a file is selected this measurement data is saved on the PC immediately and a selection field with all available measurement data appears in the window.


▲ Rekorder Daten
10T
150T
▲ 10min
11.09.2014 13:30:01 - 11.09.2014 16:06:08 - 88Kb
11.09.2014 16:06:12 - 12.09.2014 10:10:01 - 415КЬ
► 2h
1s
► 10s Ns
Ns Mmin
Mmin     Async
Async A Rec
A Rec A Osc
Osc 11.09.2014 13:45:53:72100
▲ HP
Hp 11.09.2014 13:46:08:42500
Ereignissrekorder Daten
•
<ul> <li>Timestamp</li> </ul>
Status
Spannungsmessgroessen
🖾 f
u1
🔲 u2
u3
0u 🖾
u12
u23
u31  Harmonische u1E / u1N
Harmonische ulE / ulN     Zwischenharmonische ulE / ulN
Zwischenharmonische u1E / u1N     Harmonische u2E / u2N
Harmonische uzt / uzN     Zwischenharmonische uZE / u2N
Zwischennarmonische u2E / u2N     Harmonische u3E / u3N
Tarmonische use / usiv     Zwischenharmonische u3E / u3N
European Content and Cont
Frequenzbaender 2KHZ.9KHZ U1E / U1N      Frequenzbaender 2KHZ.9KHZ u2E / u2N
Frequenzbaender 2KHz.9KHz u3E / u3N
Spannungs-Extremwerte
Spannungs-Statistikgroessen
Strommessgroessen
Harmonische i1
Harmonische i2
Harmonische i3

If measurement values are selected, they appear as a level-time diagram on the screen.

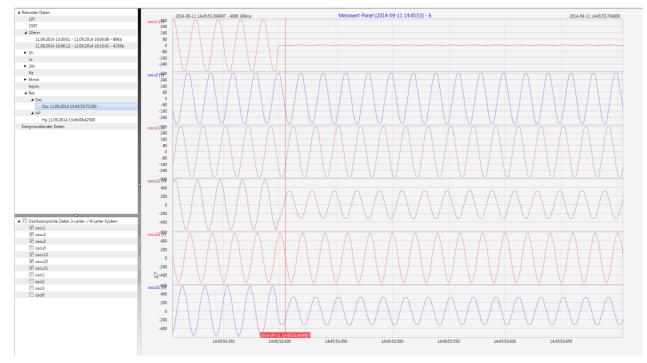

Example: Oscilloscope recorder – selecting voltage L1, L2, L3, L12, L23, L31



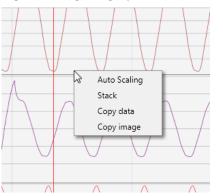


Right-clicking the graphics with the mouse will open the following menu:

### Functions:

- Auto scaling: The Y-axis of the measurement values is scaled automatically or can be scaled manually.
- A Menu appears where the last measurement can be scaled free or automatic



 Stack – associated measurement data can be represented with a common scale or separated

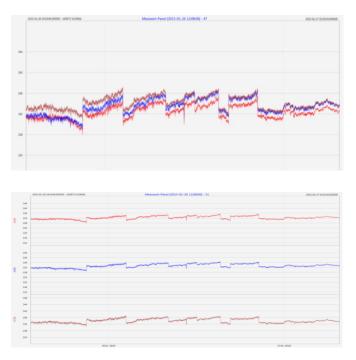

Example: presentation of voltage L1, L2, L3 in two variants

- **Copy data:** Measurement data is copied to the clipboard and can be processed further, e.g. in MS Excel.
- **Copy Image:** Copies the level-time diagram to the Windows clipboard and can then be inserted, e.g. in MS Word.

# 7.8 Deleting measurement data in the device memory

With the **Delete** function, measurement data can be deleted in the PQI-DE device memory.



**Delete selected recorders** – deletes only selected files.

Delete recorder - deletes all recorder file.

**Remove all recorders of this class -** deletes e.g. all 10-minute data files.

**Delete all records** – All disturbance recordings and long-term measurement data on the device memory are deleted.

کی Home	🐓 Import	
Files	Scaling	Marker
Recorder Data 200ms TR		
I 200ms TR IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	412	
<ul> <li>Image: Some second secon</li></ul>	٨S	
2h TRMS		
📝 1s TRMS		
<ul> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction</li> <li>Instruction&lt;</li></ul>		
📝 variable se	cond interval TRMS	
🕨 📝 variable m	inute interval TRMS	
Async		
🕨 📝 Disturban	ce recorders	
PQ-events		




# 7.9 Evaluating measurement data offline



Archiv The Archive function can be used to evaluate all measurement data offline.

All measurement data which has been selected in the **Import** function is saved automatically on the PC. These can be evaluated offline without being connected to the measuring device.

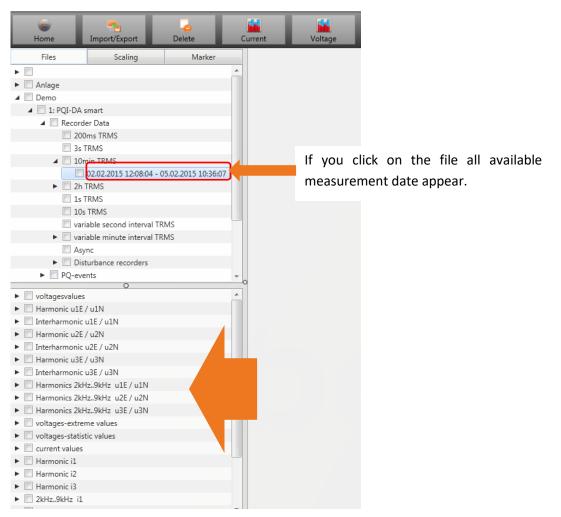

Screen: Data folder


When measurement values or measuring channels have been selected, the associated level-time diagram appears.



Example: selection voltage extreme value and 5<sup>th</sup> harmonic L1

# 7.9.1 Edit measurement data

With the icon **Chart**, the following functions are available:

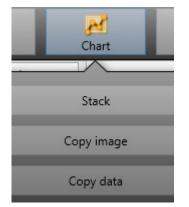




**Copy data:**Copies all the data displayed in the Windows clipboard

Di	atei Start	Eir	nfügen Sei	tenlayout F	ormeln Da	ten Übe
	<b>i *</b>	Cali	bri	* 11 * A*	A <sup>•</sup> ≡ ≡	
Ei	nfügen 🚽	F	<i>K</i> <u>U</u> -	🛛 •   🦄 • 🗚	· = = :	■ 🛊 🛊
Zwis	chenablage 🕞		Schrift	art	-Fai	A
	F8		<b>-</b>	f <sub>*</sub>		
	А		В	С	D	E
1	Time		u1 [V]	u2 [V]	u3 [V]	
2	26.01.2015 1	2:08	229,908829	230,371948	231,529633	
3	26.01.2015 1	2:08	229,95433	230,324997	231,544083	
4	26.01.2015 1	2:08	230,115509	230,450394	231,635376	
5	26.01.2015 1	2:08	230,227463	230,414688	231,666489	
6	26.01.2015 1	2:08	230,21347	230,309494	231,4431	
7	26.01.2015 1	2:08	230,140366	230,290192	231,453842	
8	26.01.2015 1	2:08	230,140869	230,322891	231,519913	
9	26.01.2015 1	2:08	230,231445	230,381744	231,602417	
10	26.01.2015 1	2:08	230,168167	230,458282	231,623047	
11	26.01.2015 1	2:08	230,301575	230,440216	231,705002	
12	26.01.2015 1	2:08	230,420013	230,432693	231,702087	
13	26.01.2015 1	2:08	230,316681	230,510208	231,799652	
14	26.01.2015 1	2:08	230,414185	230,703064	231,960907	
15	26.01.2015 1	2:08	230,387589	230,661697	231,889923	

Example: Measurement values in MS Excel

- **Copy image:** Photo is copied to the Windows clipboard
- Zoom function


To zoom in an area you draw with the left mouse button a window from top left to bottom right. To zoom out is the opposite direction. You can zoom in multiple stages or zoom out an image.

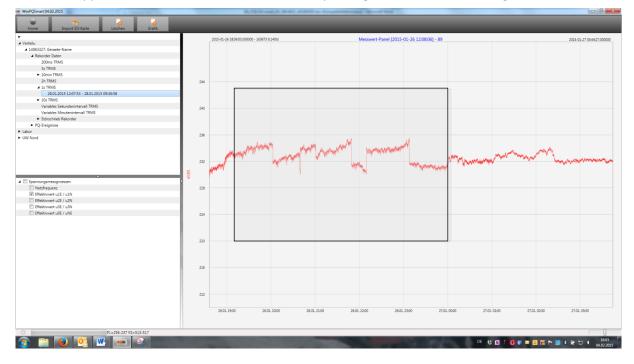

# 7.9.2 EN50160 report



In the 10 minute data class, the EN50160 report is readily available. If you select one measurement file a multipage report is created.

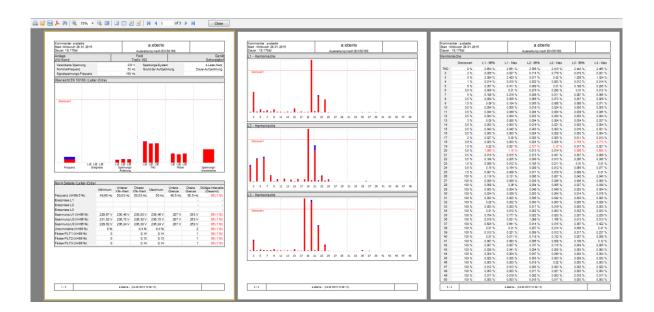

# 7.9.3 Voltage harmonics and interharmonics




With the Icon **Voltage** you can reach the statistics of the voltage harmonics, voltage interharmonics and supraharmonics 2 kHz to 9 kHz.

WinPQSmart 02.0	02.2015					
کے Home	Timport from SD card	M Voltage	Current	EN-Report		
•			1			
▲ Verteilu		Statistik Harmonis				
⊿ 14063327: Ge	▲ 14063327: Geraete-Name		Statistic Harmonis			
▲ Recorder	Data	Statistik Interharm				
200m	s TRMS	Statistic Internation				
3s TRI	3s TRMS		Statistik 2,0 - 9,0 k			
⊿ 10mir	n TRMS	Statistic 2,0 - 5,0 km				
24	4.01.2015 05:39:22 - 26.01.2	010-1207-22				
26	5.01.2015 12:07:50 - 02.02.2	015 12:08:04				





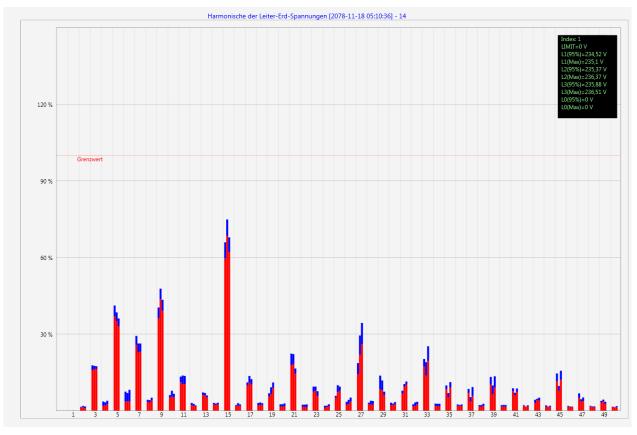



Statistic voltage harmonic - scaled to the corresponding compatibility level of the power quality standard.

# 7.9.4 Current harmonics and interharmonics



With the Icon **Current** you can reach the statistics of the current harmonics, current interharmonics and supraharmonics 2 kHz to 9 kHz.

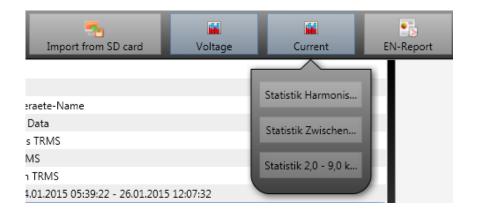

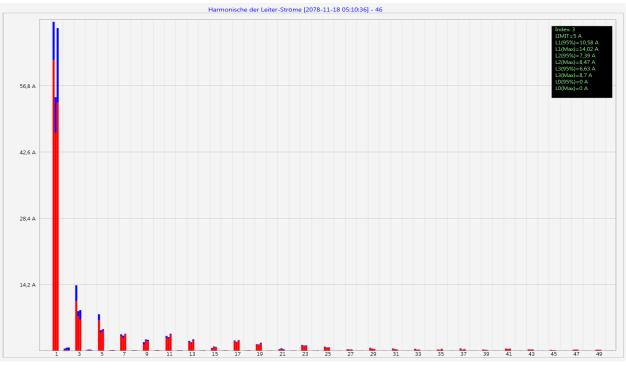


Example: Statistic current harmonics 2nd to 50th - scaling in ampere

If you select with the cursor a particular harmonic, the corresponding measured values are displayed for these harmonics in the display window.

Index: 3
LIMIT=5 A
L1(95%)=10,58 A
L1(Max)=14,02 A
L2(95%)=7,39 A
L2(Max)=8,47 A
L3(95%)=6,63 A
L3(Max)=8,7 A
L0(95%)=0 A
L0(Max)=0 A

The red bar always shows the 95% values and the blue bar shows the maximum measured value.

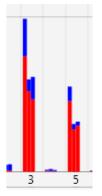



# 7.10 Importing measurement data from an SD card



The function **Import from SD card** is used to transfer selected measurement data from the SD memory card to the PC.

Please select the folders to be impor	ted:	
🔺 🌉 Computer		*
🛛 🖉 Lokaler Datenträger (C:	)	
🖻 👝 Lokaler Datenträger (D:	)	Highlight a Folder
A SDHC (E:)		Press "Select" to Import
🛯 🌽 Anlage_Geraete-Nam	e_14084041	
a 🔒 2016		
🐌 Q3		-
Ordner: 2016		
		OK Abbrechen

# 7.11 Measurement supervision

The supervision of measurements gives the possibility to observe 32 different measurands with an individual threshold. Next to the pure threshold it is possible to define a threshold of quitting the supervision state depending on the hysteresis.

Parameter Name	Value	Default Value
Active	✓	
Measurement ID	cos phi L1 (l1_cosphi) (	0
Threshold	0,9	0
Hysteresis [% of threshold]	1	0
Monitor for	Higher than threshold $\backsim$	Higher than threshold
Description	cosPhi_L1	

Figure 2: Example for the parameterization to supervise the cos(Phi)

# 7.11.1 Parameterization of an supervised measurand

The settings of the measurement supervision can be made in the **Expert Desktop** of the parameterization (chapter 7.4.1). The tab **Measurement supervision**, which contains the 32 states of supervision, is placed in the tab of **Thresholds/Recording** (Figure 3). With the factory settings all states of supervision are deactivated.

Thresholds / Recording	^	Parameter Name	Value	Default Value
Norm Threshold Values		Active		
Connection settings		Measurement ID	0 2	0
Recorder Trigger-Thresholds		Threshold	0 3	0
Oscilloscope Recorder (Trigger & Length)		Hysteresis [% of threshold]	0 4	
TRMS recorder (Trigger & Length)				5 er than threshold
<ul> <li>Trigger to Binary Output</li> </ul>		Monitor for	Higher than threshold	5 er than threshold
Residual Current Measurement		Description	6	-
<ul> <li>Measurement supervision</li> </ul>			-	
Supervision state 1				
Supervision state 2				

Figure 3: Parameterization of the supervision state

Hence the supervision state has to be *activated* first (1). The measurement devices are able to log many thousands of measurands. To identify them clearly there are used the measurement IDs. With the measurement-ID a clear identification of the measurand depending on the quantity and data classes.

After clicking into the field of the *Measurement-ID* a new window appears (2). All quantities, which can be supervised, can be picked in this setup (Figure 4). Firstly the correct data class has to be chosen with the drop-down-menu. The possible quantities will change depending on the data class. The quantities are grouped into frequency (F), current (I), voltage (U) and other (S). These groups are helpful to choose the concrete measurand. The search mask can only find the Measurement-IDs. It is not possible to search for the english descriptions.



Setup of m	easurands			
	200ms	~		
⊿ U				^
► Gera	dzahlige Harm	onische		
	eradzahlige Har			
_ 0.1g	-	monische		
⊿ 3				_
	Harmonic 3.	order [u1h3]		
	Harmonic 3.	order [u2h3]		~
262912	Q	Harmonic 3. order [u1h3]	Cancel OK	



With the chosen Measurement-ID the next step is the *threshold* (3). The threshold has to be tipped in as an float value. But there is no check about the plausibility of this value!

It is also possible to define the *hysteresis* of the supervision state (4). This makes it possible to define a threshold of quitting the supervision state which is different from the threshold. If the hysteresis equals 0% both thresholds have the same value. Depending on the monitoring for higher/lower of the threshold the hysteresis of quitting has different influence:

- Exceeding threshold: threshold of quitting=threshold \* (100% hysteresis)
- Falling threshold: threshold of quitting = threshold \* (100% + hysteresis)


In addition, it is possible to specify whether exceeding (higher) or falling (lower) below the defined limit value is to be *monitored* (5). The field *description* is open to the user, but it would be helpful to fill it with the data class and the quantity of the measurand (6).

# 7.11.2 Parameterization of the reaction after exceeding the threshold

The device can react with three different actions, if the thresholds are exceeded or deceeded.

### **Binary outputs:**

The binary outputs 2, 3 and 4 can be triggered on the oscilloscope-/TRMSrecorder (tab Trigger) or the measurement supervision (tab **states**  $\rightarrow$  **Measurement supervision**). If the binary output should be triggered on the measurement supervision, all ticks in the column *Value* of the tab **Trigger** has to be neglected (chapter 7.5.3.6). There will be a mistake in the parameterization, if this step would not be done. Afterwards the supervision states, which have to be triggered, can be ticked.

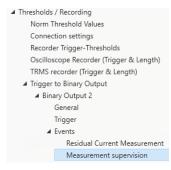


### Oscilloscope-/TRMS-recorder:

The table with possible events of these recorders contains also the supervision states. They are placed in the bottom.

# 7.11.3 Evaluation of the supervision states

The evaluation of the states with measurement supervision, which are triggered with the oscilloscope- and/or TRMS-recorder, can be done with the **Import**-function of the WinPQlite. The triggered disturbance records are in the tab **Disturbance Recorder**, for more informations about evaluating disturbance records chapter 7.7 is recommended.

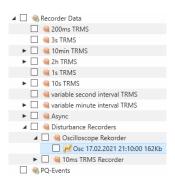



The export of the parameterization of **Thresholds/Recording** will make this evaluation easier (chapter 7.4.1). Because it helps to differentiate between classical events and the measurement supervision.

At least it is possible to check the supervision states via Modbus. The register is read-only and give for each state just the information, if it is active (1) or not active (0). The table of datapoints and more informations about Modbus can be find in chapter 13.1. For reading the supervision states via Modbus it is necessary to restart the device after the parameterization of the first supervision state once.



# 8. Online Diagnostic

With the help of the Online Diagnostic, the most important information of the PQI-DEs can be read out via Streaming. The device status can be seen as well as the complete device properties.



# 8.1 Device Information

In the **Device information** part, the device log file can be loaded from the device using the **Logfile** button.

👍 WinPQSmart 4.6	5.0 - 20.03.2019		- Bernetters	and the second	manufi Stati
Home	Logfile	روب Refresh			
Device Inf	ormation				
WinPQ - Inte	erface (CCCI)				
Men	nory				
System In	System Information				
SCA	SCADA				
Time synchroniz	ation - method				
PC	AP				
LU	IA				

# 8.2 Time synchronization method

The quality as well as the current state of the time synchronization can be checked in this menu. Legend to the line names of the WinPQlite:

- lastSync: time of the last time setting
- quality: Signal quality
- signal:
  - 0, if no signal is detected
  - o unequal 0, if a signal is detected and the appropriate protocol is selected
- Sync.Src: specification of the synchronization protocol
- Utc.fracsec.tqic: quality of the device time in relation to the time source
  - $\circ$  15 device time not synchronized or deviates from the time source by more than 10s
  - $\circ$   $\leq$ 10 device time synchronized and deviation from the time source is less than 1s

Logfile Refresh				
Device Information	details		NTP 1	
WinPQ - Interface (CCCI)	lastSync	02.09.2021 12:29:06	server	192.168.1.10
Memory	quality	0	state	OFFLINE
	signal	0		
System Information	Summer time	False		
SCADA	syncSrc	NTP		
Time synchronization - method	Timezone	1		
PCAP	utc.fracsec.dst	0		
LUA	utc.fracsec.fos	2157		
	utc.fracsec.lsd	0		
	utc.fracsec.lso	0		
	utc.fracsec.lsp	0	_	
	utc.fracsec.tqic	15		
	utc.soc	02.11.2021 13:23:07		



# 9. User database and access rights

The measuring device is equipped with a user role and user rights concept including user database, which corresponds to the current IT security guidelines.

The main functions are:

- Any number of users can be stored in the device with uniquely identifiable names.
- The users are to be assigned to a role.
- The roles (administrator, operator and user) define the rights.



The detailed description of the rights and roles with specification of the rights is listed in the security documentation.

Whenever a function is called from the WinPQ lite software, such as Read parameterization (Para), Online data (Online), Data Explorer (Import), the encoder checks by entering the user name and password whether the user has the required rights for this function.

If the password and or the user name are entered incorrectly or if the user does not have the right to access a function, this is reported back accordingly.


 If incorrect entries are made, the connection to the meter via the SSH tunnel is automatically disconnected!



- The number of failed attempts (factory setting: 3) before a user is locked for a certain time (factory setting: 1 hour) can be set.
- Failed attempts are logged internally and output via Syslog and can also be queried via the user administration.

# 9.1 Adding and Editing Users


If the meter is set up in Security Mode (see chapter 6.2) any number of users can be created in the meter. During the first setup, one user each for the roles "User", "Operator", "Administrator" and, if applicable, "Machine-to-Machine" was stored in the measuring device. To store additional users or edit, block or delete users that have already been created, proceed as follows:

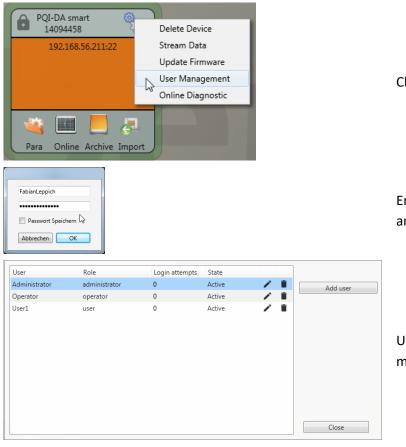

Click on "Edit user" in the device settings.

Enter the user name of the administrator and the corresponding password.

User information is downloaded from the meter and displayed.

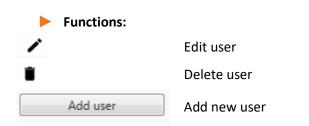



Jsername:	Administrator		Min. password length: 6
Comment:	Generated by WinPO	Qlite	
Role:	administrator	•	Min. lower case letters: 1
Suspended			Min. capital letters: 1
Suspended:			Min. Numbers: 1
ogin attempts:	0	Reset login attempts	Min. other characters: 1
Password:	Password	Confirm	win, other characters; 1

#### If clicking on "Edit user" or on "Add user", an input mask for the parameterisation of the user opens.

Click on Save to transfer the settings to the instrument, store them and activate them from this point on.

# 9.2 IT security settings and password requirements

The administrator has the possibility to specify the assignment of passwords via the so-called password policy. Proceed as follows to make the settings:



Click on **Para** to download the complete instrument parameterization from the measuring instrument.

Enter the user name of the administrator and the associated password, since the policy can only be set by the administrator.

Changing the interface from the basic view to the expert view

1

🖕 WinPQ lite 5.0.0 - 19.07.2019 (Software Mode)			
WinPQ Interface (CCCI)	Parameter Name	Value	Default Value
SSH	Maximum number of failed login attempts	5	5
Device designation	User password expiration [days]	0	0
IP-Settings	Maximum number of password change attempts	5	5
<ul> <li>License Manager</li> </ul>	Minimum password length	6	6
Modbus  Thresholds / Recording	Minimum number of digits in passwords	1	1
<ul> <li>Binary Recording</li> </ul>	Minimum number of upper case letters in passwords	1	1
SCADA-Manager	Minimum number of lower case letters in passwords	1	1
Syslog	Minimum number of other characters in passwords	1	1
<ul> <li>Time settings</li> </ul>	Minimum number of required character classes in passwords	4	4
User Management			

In the menu item **User** administration parameters the following necessary parameters can be defined in addition to the password guidelines:

- **Maximum number of failed logon attempts**: Number of logon attempts on the device before a user can log on to the device again for a configurable time (factory setting: 1 hour). The parameter can be freely set via the SSH console if required for the lockout period.
- User password expiration [days]: After the set days have expired, the user can no longer log on to the device without having to change the password.
- **Maximum number of password change attempts:** Number of attempts to change the password on the device.

The password should be as complex as possible!

It is always recommended to adhere to the relevant known and country-specific guidelines!

Germany: It is recommended to adhere to the guidelines for passwords of the Federal Office for Information Security (BSI).



# **10.** Firmware update for PQI-DE

Power Quality devices are constantly evolving in terms of functions and standards. It may therefore become necessary to update a device, e.g. due to changes in standards, new functions or necessary (security) patches. You will find the latest firmware version with a transparent changelog to check whether an update is necessary using the following link:

For a firmware update administrative rights are necessary!

<u>https://www.a-eberle.de/en/download-center-categories/f%C3%BCr-festinstallierte-ger%C3%A4te-0</u> A.Eberle generally provides two firmware packages which differ in their function:

## Incremental update (patch) - available on the homepage


The incremental update does not change any parameters or settings. It also does not delete any measurement data, but only updates the changes to the last version.

The file name is e.g. "*"XXX\_v2.0.0\_13390.zip* ". The incremental update is the common way to bring the measuring instruments up to date.


### Factory Update - only available on request

This update deletes all settings including all recorded data and resets the device to factory settings. The file name of the update has the extension "factory".

**Example**: ""XXX\_*factory\_v2.0.0\_13390.zip* ". The factory update should only be used in consultation with product support.

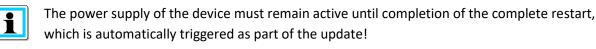

# 10.1 Firmware update with software WinPQ lite

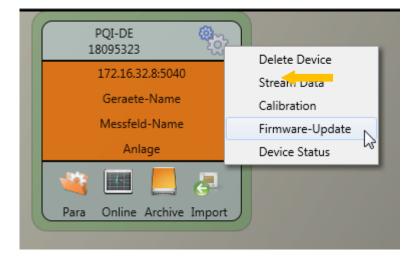

The **General setup** device function tile can be used to carry out a firmware update for the PQI-DE measuring device.

• Select the folder where the file for the firmware update is located.

The offnen function is used to transfer the firmware to the network analyser.

😋 🕞 🗢 👢 « Data (D:)	) ► A-I	Eberle-Produktgruppen 🕨 PQ festinstallie	ert 🕨 PQI	I-D smart 🕨 Firmwar	re Smart 🕨	<b>▼ \$</b> ↑	Firmware Sr	mart durch:	s 🔎
Organisieren 🔻 Neuer	r Ordne	r						-	0
눆 Favoriten	-	Name		Änderungsdatum	Тур	Größe			
<ul> <li>Desktop</li> <li>Downloads</li> <li>Dropbox</li> <li>Zuletzt besucht</li> </ul>	Ш	4 PQI-DA_Smart_RC0.zip		22.08.2014 16:45	ZIP-komprimierter	1.270 KB			
<ul> <li>Bibliotheken</li> <li>Bilder</li> <li>Dokumente</li> <li>Musik</li> <li>Videos</li> </ul>	4	ß							
Datein	ame:						nware (*.zip) Öffnen	Abbrech	• en

When the transfer of the firmware to the measuring device has been completed, it will automatically restart and install the new version.

# **10.2** Ensuring the integrity of firmware updates

Since firmware version 2.12, the archive of the firmware update and the update procedure are protected by a digital signature including certificate handling. Detailed documentation on this can be found in the associated security documentation.

If a firmware archive should have an invalid digital signature, the unit immediately interrupts the update process for security reasons.

# **10.3** Automatic Firmware Update of Many Devices

Using the WinPQ system software, many PQI-DEs can be updated with just a few clicks, with full clarity and control. Further information can be found in the documentation "WinPQ Commissioning Instructions" of the WinPQ system software.



# **11.** Calibration PQI-DE (license required)

The power analyser PQI-DE is factory calibrated and shipped with an appropriate test certificate. Depending on the application, calibration and adjustment can also be carried out directly at the installation site using the additional software.



This software functionality is subject to licensing and can be enabled using a license code.


**Compatibility note:** As of firmware V2.10.0, the measuring device can no longer be calibrated and adjusted with the WinPQlite software.

## Requirements for calibration equipment

According IEC61000-4-30 class A the PQI-DE has an accuracy of < 0.1% for voltage measurement. The reference measurement device must meet a minimum accuracy of 0.02% (e.g. Fluke 8508A or Agilent multimeter 34410 A). The voltage source has to deliver a sinus signal with 100 V (50 or 60 Hz) with a THD > 0.1%. In addition a current source with a sinus-shaped signal of 5 A (50 of 60 Hz) is required.

## Calibration process with the WinPQ lite software

The calibration process with the WinPQ lite is completely guided by an assistant. The complete process with the corresponding instructions is described by the software wizard. The calibration wizard is started by the settings menu of a PQI-DE, see next figure.

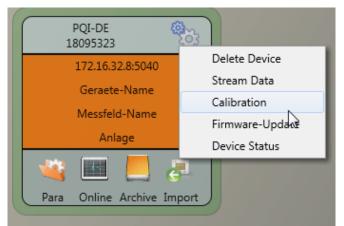

Starting the calibration requires a valid license key. Please enter the key in the corresponding input field on the start screen page.

The wizard guides the user throw the complete calibration process. Please follow the instructions of the assistant.

## Creation of the calibration test report certificate

After successful completion of the calibration process the PQI-DE performs an automatic restart and is then again ready for operation. At the end of the calibration process the software automatically generates and displays the corresponding test report certificate with the specified calibration parameters and results in PDF format.


# 12. License Update PQI-DE

The network analyser PQI-DE can be equipped with various options. These options can be activated via a license code, even after the purchase, at any time.

To order an option the following information to create a license codes are required:

- Serial number of the instrument
- Article number of the instrument
- Option to install

If you received a valid license for the connected device, please paste it to the device setting.

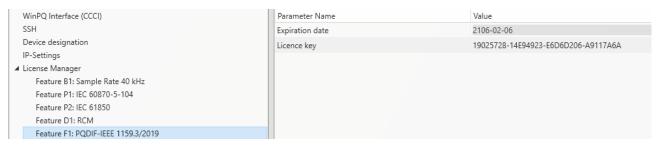

Example: Upgrading Option 40.96 kHz for PQI-DE

The following options are available:

- B1: 40.96 kHz sampling (2 kHz to 20 kHz harmonic measurement)
- P1: IEC 60870-5-104
- P2: IEC 61850
- P3: Modbus Master recording
- D1: RCM Residual Current Monitoring
- F1: PQDIF regarding IEEE 1159.3



Licences should be sent to the unit without further adjustment of the parameterization and their acceptance checked in the display/online diagnosis. Only then are individual parameters of the added option available.

# 13. SCADA

In the device settings **SCADA** the following protocols can be selected:

- Modbus supplied as standard
  - IEC60870-104 chargeable device option
- IEC61850 chargeable device option

Setup	1 / 6	SCADA	1 / 2
Parameters Time setup Basic setting Memory Interface config. SCADA		Modbus IEC60870-5-104 IEC61850	

# 13.1 Modbus

The following data classes are available in the PQI-DA *smart* via Modbus TCP or Modbus RTU:

Data class	Measurand	Functioncode
10 ms	All measurands	Read Holding Register
200 ms	All measurands	Read Holding Register
1 sec	All measurands	Read Holding Register
3 sec	All measurands	Read Holding Register
N sec	All measurands	Read Holding Register
10 min	All measurands	Read Holding Register
N min	All measurands	Read Holding Register
2 h	All measurands	Read Holding Register

The available measurands of each data class are shown in the technical datasheet of the device.

Additionally these events can be requested via Modbus:

Event	Functioncode	
Messages (states of 2 binary in- and -outputs, trigger command, 32 supervision states)	Read Coils	
Endless counter for disturbance recorder and PQ-Events	Read Coils	
Power Quality settings – write Modbus, only in contact with the support		


# 13.1.1 Modbus data list

Please download the extensive Modbus interface point list from our website www.a-eberle.de

For Modbus there are over 10.000 measurement values available. Also as Excel-sheet available, please contact our <u>Support</u>.

# 13.1.2 Modbus settings

Settings of the Modbus TCP and Modbus RTU interface can be changed via the device setup.

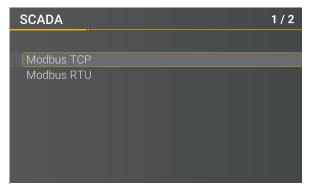

## 13.1.2.1 Modbus RTU

You can enable Modbus RTU. Modbus interface is fixed assigned to COM1

Modbus RTU	1 / 5
Modbus RTU	activated
Interface	/dev/uart1
Baudrate	115200
Parity	even
Slave ID	17
Mode	RS232

The interface can be changed to Modbus RTU RS232 or RS485.

## 13.1.2.2 Modbus TCP

Modbus TCP is deactivated by default and can be enabled at this point. The port number can be set-up.

Modbus TCP	1 / 2
Modbus TCP	activated
Port	502



# 13.1.3 Set-up parameter Modbus with WinPQ

WinPQ Interface (CCCI)	Parameter Name	Value	Default Value
SSH	TCP Server activated	✓	
Device designation	RTU Server activated		
IP-Settings	Use Modbus Gateway (own ID=250)		
<ul> <li>License Manager</li> <li>Modbus</li> </ul>	Modbus Gateway Slave Timeout [ms]	1000	1000
<ul> <li>Thresholds / Recording</li> </ul>	TCP Port	502	502
<ul> <li>Binary Recording</li> </ul>	TCP endianness	Little-Endian	<ul> <li>Little-Endian</li> </ul>
SCADA-Manager	Serial Interface	COM 1	V COM 1
Syslog	RTU Slave ID	17	17
<ul> <li>Time settings</li> </ul>	RTU endianness	Little-Endian	<ul> <li>Little-Endian</li> </ul>
<ul> <li>User Management</li> </ul>	Baud rate	115200	✓ 115200
	Parity	None	✓ Even
	Interface mode	RS232	✓ RS232

The Modbus TCP and Modbus RTU interfaces can be modified via the WinPQ lite software. Modbus could be activated via the parameters TCP or RTU Server (0 = OFF / 1 = ON)

#### **Parameter serial:**

RTU Server activated	Activation of Modbus RTU
Serial Interface	Selection of the COM interface used (COM1 / COM2)
Baud rate	Baud rate of the serial interface for Modbus RTU
Parity	Serial port parity for Modbus RTU
interface mode	Switching between RS232 and RS 485
RTU - byte order	See chapter 13.1.3.1

### Parameter TCP/IP

TCP Server activated	Activation of Modbus TCP
TCP - Port	Changing the TCP / IP port for Modbus TCP / IP
RTU - byte order	See chapter 13.1.3.1

### Parameter Modbus Gateway (see chapter )

TCP Server activated	Activation of Modbus TCP
Use Modbus Gateway	Activation of Modbus Gateway
TCP - Port	Change of the TCP / IP Ports for Modbus TCP / IP
TCP - byte order	See chapter 13.1.3.1
Serial Interface	Selection of the COM interface used (COM1 / COM2)
Baud rate	Baud rate of the serial interface for Modbus RTU
Parity	Serial port parity for Modbus RTU
interface mode	Switching between RS232 and RS 485
RTU - byte order	See chapter 13.1.3.1
TCP - byte order Serial Interface Baud rate Parity interface mode	See chapter 13.1.3.1 Selection of the COM interface used (COM1 / COM2) Baud rate of the serial interface for Modbus RTU Serial port parity for Modbus RTU Switching between RS232 and RS 485

## 13.1.3.1 Byte Order

According to the Modbus specification, data are transmitted in the byte order Big-Endian. Regarding a 16bit Modbus register, the data on the client side is interpreted without conversion. The following example illustrates this with the example value 0x1A2B:

Address	Communication (Big-Endian)	Client-Side (Big-Endian)
High Byte	0x1A	0x1A
Low Byte	0x2B	0x2B

## 13.1.3.2 Modbus-Register-Order

Interpreting the data transferred via multiple Modbus registers (e.g., 32 bits Unsigned Integer =>  $2 \times 16$  Bit Modbus registers), a distinction must be made between the Little-Endian and Big-Endian sequences. In this case, the entire register contents and not the bytes are exchanged. In the default configuration, the software is operated in Little-Endian mode. The following examples illustrate the variants:

	32 Bit-value	0x1A2B3C4D -	Modus	Little-Endian:
--	--------------	--------------	-------	----------------

Address	Example (Big-Endian)	Communication (Little-Endian)	Client-Side (Big-Endian)
Register 0 High Byte	0x1A	0x3C	0x1A
Register 0 Low Byte	0x2B	0x4D	0х2В
Register 1High Byte	0x3C	0x1A	0x3C
Register 1Low Byte	0x4D	0x2B	0x4D

### **32** Bit-Wert 0x1A2B3C4D - Mode Big-Endian:

Address	Example (Big-Endian)	Communication (Little-Endian)	Client-Side (Big-Endian)
Register 0 High Byte	0x1A	0x1A	0x1A
Register 0 Low Byte	0x2B	0x2B	0x2B
Register 1High Byte	0x3C	0x3C	0x3C
Register 1Low Byte	0x4D	0x4D	0x4D



## 13.1.3.3 Data bits

By default, a Modbus packet with 8 data bits and one stop bit is built up at the measuring device.

### 13.1.3.4 Data Types

The Modbus implementation in the PQI-DE currently works with the following data types.

### Unsigned Integer 32 Bit (uint32\_t)

This data type stores unsigned integer values. According to the width of 32 bits, they are stored in two registers.

## Float 32 Bit (float32)

Float 32 bit floating point numbers are transmitted according to the IEEE 754 standard. These are stored in two registers. The interpretation of the values is described in detail at <u>https://de.wikipedia.org/wiki/IEEE 754</u>

## Float 64 Bit (double)

Float 64 bit floating-point numbers are also transmitted according to the IEEE 754 standard. The width of 64 bits requires storage in four registers. The interpretation of these values is also described at <u>https://de.wikipedia.org/wiki/IEEE 754</u>.

## Status (status\_t)

The status value has a width of 32 bits. It is stored accordingly in two registers. The meaning of the individual bits is listed in the following table:

Bit-Number	Meaning	
0	RVC, Voltage U1E	
1	Dip, Voltage U1E	
2	Swell, Voltage U1E	
3	Interruption, Voltage U1E	
4	Overload, Voltage U1E	
5	RVC, Voltage U2E	
6	Dip, Voltage U2E	
7	Swell, Voltage U2E	
8	Interruption, Voltage U2E	
9	Overload, Voltage U2E	
10	RVC, Voltage U3E	

11	Dip, Voltage U3E	
12	Swell, Voltage U3E	
13	Interruption, Voltage U3E	
14	Overload, Voltage U3E	
15	RVC, Voltage U12	
16	Dip, Voltage U12	
17	Swell, Voltage U12	
18	Interruption, Voltage U12	
19	Overload, Voltage U12	
20	RVC, Voltage U23	
21	Dip, Voltage U23	
22	Swell, Voltage U23	
23	Interruption, Voltage U23	
24	Overload, Voltage U23	
25	RVC, Voltage U31	
26	Dip, Voltage U31	
27	Swell, Voltage U31	
28	Interruption, Voltage U31	
29	Overload, Voltage U31	
30	State Frequency Synchronization	
31	free	

## Timestamp (uint32\_t)

The 32-bit-wide time stamp is stored in two registers and must be interpreted as an integer value without sign. This is a UNIX time stamp, that is, the number of seconds since 1 January 1970, 00:00 hours (coordinated world time UTC), with no switching counts being counted.

Example: 1478787619 (0x58248223)

Value of time: 11. October 2016 14:20:19 (UTC)

Further information and an implementation example can be found at <u>https://en.wikipedia.org/wiki/Unix\_time</u>.



## Sub seconds (tmFracSec\_t)

The sub second value has a width of 32 bits and is accordingly stored in two registers. The data type is based on the time format, which is defined in IEEE C37.118. The meaning of the individual bits is listed in the following table:

Bit-Number	Meaning
023	Sub seconds in 100 ns increments
2427	time quality indicator
28	Set as the announcement of a switch (1 min before)
29	Set, 24 hours after a switch
30	Add Leap Second (0) or remove (1)
31	Indicator winter time (0) or summer time (1)

## 13.1.4 Modbus Gateway

The measurement device can be parameterized as Master in a RTU-bus. This Master is able to transform the data transparently to Modbus TCP. In this case the measurement device acts as a TCP-Server. The counterpart is the TCP-client. With RS-232 are two participants in total allowed on the bus, with RS-485 32.

To parameterize the device as Modbus Gateway the expert settings in the WinPQlite are required. The checkboxes of TCP-Server and Modbus Gateway need to be activated. A parallel activation of TCP-Server and RTU-Server is not allowed. Additionally the TCP-settings and RTU-settings which are listed in chapter 13.1.3 should be parameterized.

With these settings the TCP-Client could connect to the Modbus Gateway device. To request the register of the device itself (Modbus-Gateway/RTU-Master) the ID 250 needs to be used, this ID is hardcoded. Any unique slave IDs between 1 and 31 can be selected for the slaves. Within a TCP session, any registers of all RTU slaves can be queried.



With activated mode "Modbus Gateway" only one connection of a TCP Client to the device is possible!

Notes on electrical wiring can be found in chapter 5.7.1.2.

# 13.1.5 Modbus Master with recording

The device can be parameterized on an RTU bus as a master, which saves the register data of the slaves in internal recording files. With the help of the I-Sense feeder measurement technology, a complete measurement of up to 16 outgoing feeders for e.g. local network stations is possible. In addition, the solution is able to read third-party components such as meters, energy measurement technology or even door contacts and temperature sensors on the bus and record them locally in the device. These recording files of the so called slaves can then be evaluated using the WebPQ and WinPQ(lite) software solutions.



The Modbus master recording function is licensed via feature P3, which can be purchased subsequently for the PQI-DA smart and PQI-DE devices (see Chap. 12).

## 13.1.5.1 Parameterization of the I-Sense - A. Eberle feeder measurement

The correct connection of the bus with I-Sense is described in the technical data sheet of the I-Sense feeder measuring technology and is mandatory for a correct function! The default parameterization of the measuring devices is selected in such a way that the activation of the outgoing measurement with the I-Sense feeder measurement technology can be carried out as quickly as possible. To do this, open the expert view in the parameterization interface. Only the following settings must be made on the measuring device.

### Modbus RTU adaptation:

The I-Sense devices are preconfigured on the RS485 bus with the following settings:

- Baud rate: 19200
- Parity: Even

Accordingly, these parameters have to be set on the PQI:

- Baud rate = 19200
- Parity = Even
- Interface = RS485

### Activation of the function "Modbus Master"

Open the "Modbus" tab, select the Modbus RTU Slaves tab and activate the checkbox:

🚣 WinPQ lite 7.1.0 - 04.08.2023					
	SD-Card parameter	^	Parameter Name	Value	
-	▲ Modbus		(4278190730/FF00028A) Activate Modbus Master	✓	
	✓ Modbus RTU Slaves ► Slave A		(4278190731/FF00028B) Pollrate [s]	1	
			(4270130731)(1000200) Foliate [3]	1	

### Activation of the single slaves Slaves A - P

Selection of the respective slave and activation of the checkbox. If necessary, individual name assignment:

The other default parameters are according to the I-Sense factory settings:

- Pollrate: 10sec
- Storing interval: Nsec with N=60s
- Activated registers 5-16: 12x (4x I\_avg, 4x I\_min, 4x I\_max)



<ul> <li>Deactivated registers 1-4: 4x I_live</li> </ul>				
🚣 WinPQ lite 7.1.0 - 04.08.2023				
IP-Settings	^	Parameter Name	Value	
<ul> <li>License Manager</li> </ul>		(2701131776/A100000) Activate slave	$\checkmark$	
SD-Card parameter A Modbus		(2701132032/A1000100) Modbus address	2	
		(2701132288/A1000200) Storing interval [s]	NSec	
Modbus RTU Slaves		(2701132544/A1000300) Little Endian		
► Slave A		(2701132800/A1000400) Slave name	AbgangBert	
▲ Slave B				
Register 1 Register 2				

### Template

Starting with WinPQ lite V 7.1, a template file "*I-Sense\_ModbusMaster\_16-feeders.xml*" with 16 activated I-Sense devices is already supplied in the "Customer/Eberle" folder (2) in the template area (1). This only has to be adapted to the number of active feeders. All other settings are already selected for the application.

Wield-Schnitzstelle (CCC)       Perametername       Wert       Werksinstellung         Wield-Schnitzstelle (CCC)       Perametername       Wert       Werksinstellung         Construction       Construction       Construction       Excernition         Construction       Construction       Construction       Excernition         Vield-Schnitzstelle (CCC)       Online       Wort       Werksinstellung         Vield-Schnitzstelle (CCC)       Online       Wort       Werksinstellung         Vield-Schnitzstelle (CCC)       Online       Wort       Werksinstellung         Vield-Schnitzstelle (CCC)       Online       Vield-Schnitzstelle (CCC)       Vield-Schnitzstelle (CCC)         Vield-Schnitzstelle (CCC)       Promoderschnitzstelle (CCC)       Promoderschnitzstelle (CCC)       Promoderschnitzstelle (CCC)         Vield-Schnitzstelle (CCC)       Online       Vield-Schnitzstelle (CCC)       Promoderschnitzstelle (CCC)         Vield-Schnitzstelle (CCC)       Promoderschnitzstelle (CCC)       Promoderschnitzstelle (CCC)       Promoderschnitzstelle (CCC)         Significancy (CCC)       Vield-Schnitzstelle (CCC)       Promoderschnitzstelle (CCC)       Promoderschnitzstelle (CCC)       Promoderschnitzstelle (CCC)         Significancy (CCC)       Schnitzstelle (CCC)       Schnitzstelle (CCC)       Promoderschnitzstelle (CCC) <t< th=""><th>📥 WinPQ lite 7.1.0 - 26.09.2023</th><th></th><th></th><th></th><th></th><th>- 🗆 ×</th></t<>	📥 WinPQ lite 7.1.0 - 26.09.2023					- 🗆 ×
Webserer TO Sever atkivet   Gerstebeschung   TVD/P-Enstellungen    Modus: Gateway brutzen (ejs.)D=250 Modus: Gateway brutzen (ejs.)D=250 Gerstebeschungen Gerstebeschungen Gerstebeschungen Gerstebeschungen Gerstebeschungen Organiseer Neuer Ordner Sprinklanschweiten Organiseer Neuer Ordner Sprinklanschweiten Organiseer Neuer Ordner Sprinklanschweiten Organiseer Neuer Ordner Suchtasschulten (T) Toteles SVN Gerstebeschungen Organiseer Neuer Ordner Suchtasschulten (T) Toteles SVN Toteles SVN Urong Erstelldatum: 02:10:2023 16:45 Datisonder Datisonder Datisonder Urong Erstelldatum: 02:10:2023 16:45 Datisonder Datisonder Urong Erstelldatum: 02:10:2023 16:45 Datisonder Datisonder Vieter ANN Statistik Name Manne Totele Software KinPQlite > Templates > Customer > Eberle Vieter ANN Totele Software Totele Software Statistik Anderungsdatum Typ Große Manne Totele Software Totele S	WinPQ - Schnittstelle (CCCI)	Parametername	Wert	Wer	kseinstellung	Expertenansicht V
Gertebezeichnung TCP/P – Einstellungen Licznazwerkung Gertebezeichnung Modus Gesewus Stave Timeore Inel 100 Modus Gesewus Stave Timeore Inel 100 Modus Gesewus Stave Timeore Inel 100 Modus Gesewus Stave Timeore Inel 100 Modus Gesewus Stave Timeore Inel 100 Modus Gesewus Stave Timeore Inel 100 Modus Gesewus Stave Timeore Inel 100 Modus Gesewus Stave Timeore Inel 100 Modus Gesewus Stave Timeore Inel 100 Modus Gesewus Stave Timeore Inel 100 Modus Gesewus Stave Timeore Inel 100 Modus Gesewus Stave Timeore Inel 100 Modus Gesewus Stave Timeore Inel 100 Genzowerfe Aufzichnung Signifikanzschwellen un Nom Genzwerfe Aufzichnung Signifikanzschwellen un Nom Genzwerfe Aufzichnung Signifikanzschwellen un Nom Genzwerfe Gesewus Stave Timeore Inel 2002 16:45 Dateiordner Dateiordner Dateiordner Dateiordner Dateiordner Dateiordner Dateiordner Dateiordner Dateiordner Dateiordner MinPQlite > Templates > Customer > Eberle V & P Eberle durchsuchen Ei v I 2 Mane <u>3</u> Änderungsdatum Typ Große		TCP Server aktiviert			•	
TO/IP - Einstellungen       Modulus Gateways Value Timonou final       1000       Vorlage Offnen         Lisenzevertewaltung       Offnen       1000       1000       1000         Genzoverte / Aufzichnungs       Image Offnen       1000       1000       1000         Signifikanzschweiten       Neuer Ordner       Image Offnen       Image Offnen       Image Offnen         Aufzichnungs       Image Offnen       Image Offnen       Image Offnen       Image Offnen       Image Offnen         Norm Genzwerte       Num Genzwerte       Aufzeichnungs       Image Offnen       Image Offne		RTU Server aktiviert				Senden
LC/L/P       Locative contract line       100       100         LC/L/P       Contract line       100       100         LC/L/P       Contract line       100       100         LC/L/P       Contract line       100       100         LC/L/P       Contract line       100       100         LC/L/P       Contract line       100       100         LC/L/P       Contract line       100       100         LC/L/P       Contract line       100       100         Contract line       Contract line       100       100         Contract line       Contract line       Contract line       Second line         SumatraPDF       Contract line       Contract line       Contract line       Contract line         Contract line       Contract		Modbus Gateway benutzen (eig. ID=250)				Vorlage Öffnen
Modbus       Contract of Aufzeichnungste       Contract of Contr		Modbus Gateway Slave Timeout [ms]	1000	100	n	
Grenzwerte / Aufzeichnung					×	Eigene Vorlage öffnen
Norm Grenzwerte Anchlusseinstellungen       Organisieren × Neuer Ordner       Export (SxV)         Bekorder Tiggerschwei Oziziloskop Rekorder (Tigger Statiski Binäre Aufzeichnungsst       SumstraPDF       Name       Anderungsdatum       Typ       Größe         Mem Senzertie TRMS Rekorder (Tigger Statiski Binäre Aufzeichnungsst       Totaker Schware       Dateiordner       Dateiordner       Dateiordner       Dateiordner         UNP       VideoLAN       Vertweise Schware       Dateiordner       Dateiordner       Dateiordner         UNP       VideoLAN       Vertweise Schware       Dateiordner       Dateiordner       Dateiordner         UNP       VideoLAN       Vertweise Schware       Dateiordner       Dateiordner       Dateiordner         UNP       VideoLAN       Vertweise Schware       Dateiordner       Dateiordner       Dateiordner         UNP       VideoLAN       Vertweise Schware       Dateiordner       Dateiordner       Dateiordner         UNP       VideoLAN       Vertweise Schware       Dateiordner       Dateiordner       Dateiordner         UNP       VideoLAN       VideoLAN       VideoLAN       Vertweise Schware       Dateiordner         Marme       Jinderungsdatum       Typ       Große       Costore Schware       P	✓ Grenzwerte / Aufzeichnung ← → ×  📘 > Dieser PC	C → Lokaler Datenträger (C:) → Programme → WinPC	Qlite > Templates >		ひ P Templates durchsuchen	Speichern
Anschlusseinstellungen Rekorder (Trägerschuel Oralicatop Rekorder (Trägerschuel Oralicatop Rekorder (Trägerschuel Trägerschu						Export (CSV)
Rekorder (Triggerschule)       Tablet       Calib       02.10.2023 16.45       Dateiordner         TRMS Rekorder (Trigger       TortoiseSVN       Calib       02.10.2023 16.45       Dateiordner         Messwertbilderwachung       Tracker Software       Urror [stretideratum 02.10.2023 16.45       Dateiordner         Messwertbilderwachung       Tracker Software       Urror [stretideratum 02.10.2023 16.45       Dateiordner         Binäre Aufzeichnungsst       UNP       VideoLAN       Dateiordner       Dateiordner         Dateiordner       UNP       VideoLAN       Dateiordner       Dateiordner         Mame       MinPQlite > Templates > Customer > Eberle       ©       ©       Eberle durchsuchen         Imager (C:) > Programme > WinPQlite > Templates > Customer > Eberle       ©       ©       Eberle durchsuchen         Imager       Imager       Typ       Größe       @	Anschlusseinstellungen		Änderungsdatum	Tvn Größe		Werkseinstellungen
Outlindcob Recorder ()       TotoloscSVN       Custoper       Outlindcob Recorder ()         TRMS Rekorder ()       TotoloscSVN       Custoper       Outlindcob Recorder ()         Messorerüberwachung       Tracker Software       Custoper       Outlindcob Recorder ()       Dateiordner         Binäre Aufzeichnungsst       UNP       Europ Errelaldatum 02.10.2023 16:45       Dateiordner       Dateiordner         Dateiordner       UNP       Southburger (C) > Programme > WinPQlite > Templates > Customer > Eberle       V C       V       P Eberle durchsuchen         Mame       3       Änderungsdatum       Typ       Größe       V       V	Rekorder Triggerschwell					
Trigger auf Binkrausgan Trister Software UNP VideoLAN Trister Software UNP VideoLAN Trister Software UNP VideoLAN Trister Software UNP VideoLAN Trister Software UNP VideoLAN Trister Software UNP VideoLAN Trister Software UNP VideoLAN Trister Software UNP VideoLAN Trister Software UNP VideoLAN Trister Software UNP VideoLAN Trister Software UNP VideoLAN Trister Software UNP VideoLAN Trister Software UNP VideoLAN Trister Software UNP VideoLAN Trister Software UNP VideoLAN Trister Software UNP VideoLAN Trister Software UNP VideoLAN Trister Software UNP VideoLAN Trister Software UNP VideoLAN Trister Software VideoLAN	Oszilloskop kekorder (I					
Mame       Tracker Software     UNP       UNP     UNP       VideoLAN     Southwire       Defendence     Defendence       Defendence     Defendence       Defendence     Defendence       Defendence     Defendence       Defendence     Defendence       Defendence     Defendence       Defendence     Defendence       Defendence     Defendence       Defendence     Defendence       Defendence     Defendence       Defendence     Defendence       Defendence     Defendence       Defendence     Defendence	trans transformer (trigger					
Statistik     UNP     Southleme     Dateiordner       VideoLAN     VideoLAN     Dateiordner		C+=0 22.4 MP				
Binäre Aufzeichnungsst VideoLAN Name VideoLAN VideoLAN VideoLAN VideoLAN VideoLAN Name VideoLAN	Castistile	South Ordner: BASF_Ludwigshaf	fen, Eberle, ENEDIS, Mercedes-Benz,	Dateiordnor		
Name Sinderungsdatum Typ Größe	Bināre Aufzeichnungsst	SouthAnica	02.10.2025 10.45	Dateiorunei		
nträger (C:) > Programme > WinPQlite > Templates > Customer > Eberle v 0 / Eberle durchsuchen	VideoLAN					
nträger (C:) > Programme > WinPQlite > Templates > Customer > Eberle v 0 / Eberle durchsuchen						
nträger (C:) > Programme > WinPQlite > Templates > Customer > Eberle v 0 / Eberle durchsuchen						
Name ^ J Änderungsdatum Typ Größe				×		
Name ^ 3   Änderungsdatum   Typ   Größe	enträger (C:) → Programme → WinPQlite → Templa	tes > Customer > Eberle				
Name ^ 3   Änderungsdatum   Typ   Größe				iii 🖌 🔟 🧖		
iSense_ModbusMaster_16-fexters.xml 20.09.2023 06:17 XML-Datei 37 KB	Name Är	nderungsdatum Typ	Größe			
	📑 ISense_ModbusMaster_16-feaders.xml 20	0.09.2023 06:17 XML-Datei	37 KB			
	×					

### **13.1.5.2** Parameterization of the Modbus Master for Third Party Devices

For the physical structure of the bus, the general information from Chap. 5.7.1.2 must be observed.

The parameterization is freely selectable for the connection of all devices corresponding to the Modbus standard, so that any external devices with any measured variables can be connected.

### Global settings

On the tab "Modbus RTU Slaves" the function Modbus Master has to be activated first and the poll rate has to be selected. A minimum of 0.1s is permitted for the poll rate, which can only be reached by the process for individual slaves and registers. Generally it has to be considered for the poll rate that all activated slaves and registers are read one after the other. If individual registers (blocks) or slaves are not accessible, the poll duration of the entire process is delayed by time constants for reconnect and timeout. This may cause

the internal poll duration to exceed the parameterized poll rate. Therefore it is necessary to ensure that the storage rate of each slave is set at least twice as high as the poll rate.

	🚣 WinPQ lite 7.1.0 - 04.08.2023			
	SD-Card parameter	^	Parameter Name	Value
	Modbus		(4278190730/FF00028A) Activate Modbus Master (4278190731/FF00028B) Pollrate [s]	~
	Modbus RTU Slaves			1
	<ul> <li>Slave A</li> </ul>		(42/01/01/01/01/00/200) / Onnate [3]	

### Slave settings

By clicking on the designation of a slave, the settings for each slave can be made selectively.

Activate slave: De-/activation of the slave

Modbus address: Input of the Modbus address of the slave at the RS485 bus

**Storing interval:** Storage interval of the polled data, to be noted: Storage rate > poll rate \* 2 The storage of the polled data is independent of the poll rate. However, the polled values are not cached and aggregated to the interval. Instead, the last obtained value of a storage interval is written to the record file. In terms of the I-Sense connection, this means that the rolling 10min average value of the I-Sense is saved at the 10min clock strike. This ensures the highest possible synchronization to the internal data classes of the PQ measuring device minus the run times in the Modbus protocol.

실 WinPQ lite 7.1.0 - 04.08.2023										
IP-S	Settings	^	Parameter Name	Value						
<ul> <li>License Manager</li> </ul>			(2701131776/A1000000) Activate slave	$\checkmark$						
SD-	-Card parameter		(2701132032/A1000100) Modbus address	2						
▲ Modbus			(2701132288/A1000200) Storing interval [s]	1s	~					
1	Modbus RTU Slaves Slave A		(2701132544/A1000300) Little Endian							
	▲ Slave B		(2701132800/A1000400) Slave name	AbgangBert						
Register 1										

Little Endian: Selection of the byte order of the slave, in case of deactivation big endian is assumed. Slave name: Insertion of an individual device name, which will be displayed in WinPQ and WebPQ.

### Register settings

For each register several individual settings are possible. These are reached by opening of the respective slave:

IP-Settings	^	Parameter Name	Value	Default Value
<ul> <li>License Manager</li> </ul>		(2701198592/A1010500) Use register	$\checkmark$	$\checkmark$
SD-Card parameter		(2701198848/A1010600) Register address	2	2
Modbus		(2701199104/A1010700) Conversion factor t	1	1
▲ Modbus RTU Slaves ► Slave A		(2701199360/A1010800) Measurement ID	I_L2_live (i_l2_live) (2686452224)	2686452224
Slave B		(2701199616/A1010900) Modbus Function	READ HOLDING REGISTER (03) 🗸	READ HOLDING REGISTER (03)
Register 1		(2701199872/A1010A00) Data type	float 🗸	float
Register 2		(2701200128/A1010B00) Comment		
Register 3				

Use register: De-/activation of the register

Register address: Input of the register address of the relevant measured value at the slave.

If a register cannot be read out, the value "0" is stored for it in the WinPQ software.

We take care of it.



**Conversion factor:** In the PQ meter, all quantities are saved in the SI units without SI prefixes (kilo, mega, etc.). With the conversion factor, the read-out measured value can be referred to the SI base unit.

**Measurement ID:** With the help of the measured value ID, the measured value at the slave is linked to already known physical variables of the A.Eberle PQ products. This makes it possi-

ble to access unique contexts in the further chain in the PQ system. For this purpose, clicking on the measured value ID opens a popup menu for selecting the available variables.

If a slave records an unknown quantity at a register, a placeholder can be selected for this in the area *Other*  $\rightarrow$  *Reserved quantities* for Modbus slaves. On request, it is possible to store an additional physical variable for one of the reserved variables (e.g. air pressure with a fixed unit). You are welcome to contact the support for this purpose: pqsys-support@a-eberle.de

Setup der Modbus Slaves Voltage Current Frequency Power Energy Admittance Other

Modbus Functioncode: So far this feature supports only READ HOLDING REGISTER (03) (Firmware V2.14)

**Data type:** Input of the data type with which the data is made available at the selected register (float32, (U)Int8/16/32).

#### 13.1.5.3 Recording

The recorded channels are saved in individual recording files per slave and can be retrieved in the data explorer of WinPQlite in the "Modbus" area:

실 WinPQ lite 7.1.0 -	04.08.2023				
	G Delete	Chart	RCM Report		
Files		Scaling		Marker	
G.(     G	08.2023 20:47:38 - 0 08.2023 14:36:39 - 0 IS S		525Kb		^
Modbu      Modbu	reOA reOB 19.07.2023 11:16:5 19.07.2023 11:23:50 19.07.2023 11:39:0	1 - 19.07.2023 11:23: 6 - 19.07.2023 11:38: 5 - 19.07.2023 11:54: 2 - 19.07.2023 12:04:	19 - 3Kb 36 - 3Kb		

Send: pa.	listMbMasterData(1)
ModbusMast	ter Values
Slave1 ('	Smart1'):
Timestamp	(UTC): 2023-06-23, 14:12:06
Reg.00:	232.605713
Reg.01:	232.440720
Reg.02:	231.067337
Reg.03:	0.216099
Reg.04:	3.214363
Reg.05:	3.296536
Reg.06:	3.582236
Reg.07:	0.000000
Reg.08:	464.990540
Reg.09:	464.650330
Reg.10:	461.866913
Reg.11:	0.252905
Reg.12:	232.329895
Reg.13:	232.119934
Reg.14:	230.888000
Reg.15:	0.193317

An LUA command is available for retrieving the last polled values. This can be executed in the online diagnostics area and displays as well the actual polling time required. This poll duration comprises the sum of the readout processes of all activated slaves and registers:

- Query all slaves: pq.listMbMasterData()
- Query single slave N: pq.listMbMasterData(N)



## 13.2 IEC60870-104

Under Device Settings / SCADA protocol can be selected and activated IEC60870-104.

IEC60870-5-104	1 / 5
State	activated
Client 1 IP	0.0.0
Station address	104
High	0
Low	104

You can setup the device address and client address directly in the display menu.

### 13.2.1 IEC60870-104 Data point

Please download the extensive IEC60870-104 data point list from our website www.a-eberle.de

### 13.2.2 IEC60870-104 Settings in WinPQ lite

WinPQ Interface (CCCI)	Parametername:	Wert:	Werkseinstellung:
device designation	ASDU-Adress (Decimal):	104	104
IP-Settings	Client IP address 1	192.120.50.10	0
<ul> <li>License Manager</li> </ul>	Client IP address 2	0.0.0.0	0
Modbus NTP	Client IP address 3	0.0.0.0	0
<ul> <li>Thresholds / Recording</li> </ul>	Client IP address 4	0.0.0.0	0
<ul> <li>Binary Recording</li> </ul>	Timeout connection establishment [s]	30	30
SCADA-Manager	Timeout wait of ACK [s]	15	15
▲ IEC 60870-5-104	Send acknowledges after [s]	10	10
Protocol Settings	Idle Time-out for test frames [s]	20	20
<ul> <li>Datapoints IEC 104</li> </ul>	K: Max. APDU without ACK [s]	12	12
<ul> <li>PQ-Event counter</li> <li>Binary Inputs</li> </ul>	W: latest ACK after receiving w APDU [s]	8	8

IEC60870-104 settings can be modified via the WinPQ lite software.

#### **ASDU Address:**

The ASDU address must be entered unstructured as a decimal number and has a value range of 0 - 256 **Example:** Address of the PQI-DE is "104" - which would correspond to "0" (high byte) - "104" (low byte) in a structured display.

Client IP – Addresses:

It is possible to enter several client IP addresses (up to a maximum of 4) into the set-up of the interface, whereby only one client can actively access the PQI-DE. If the setting for all four client IP addresses is set to "0.0.0.0", any IEC60870-5-104 server could theoretically connect to the PQI-DE. **However, this is not rec-ommended for safety reasons!** 

#### 13.2.2.1 Settings of the data points for IEC60870-5-104

The IEC 60870-5-104 interface has the following data types with the corresponding settings for each individual data point:

- TK 30: Single message with time stamp (UTC), e.g. Binary inputs of the PQI-DE.
- TK 36: Measured value floating point with time stamp (UTC), e.g. Voltage current

Each data point can be activated or deactivated individually to reduce the amount of data. A special feature is that all TK 36 measurement values can be scaled via the scale Factor parameter



Since the set-up of the individual modules is can be individually transferred to the PQI-DE, for example, "Limit values / recording" or "IEC60870-5-104", it is recommended to save a template which can be used for all devices in your Grid!

<ul> <li>License Manager</li> </ul>		Parametername:	Wert:	Werkseinstellung:
Modbus		Datapoint active (0:Deactivated / 1: Active)	1	0
NTP		IEC Object Type		TK 30: single-point information with
<ul> <li>Thresholds / Recording</li> </ul>			3.	5.
<ul> <li>Binary Recording</li> </ul>		Information Object Adress:	1376513	0
SCADA-Manager				
▲ IEC 60870-5-104	c			
Protocol Settings				
Datapoints IEC 104				
<ul> <li>PQ-Event counter</li> </ul>				
Binary Inputs				
Binary input 1				
Binary input 2	-			



# 13.3 IEC61850

The IEC61850 interface offers the possibility to connect 6 clients directly to the IEC61850 server (PQI-DE). The implementation of the IEC 61850 has been done on the basis of edition 2.1 of IEC 61850. The interface has the most important Power Quality parameters according to EN50160.

## 13.3.1 Display settings IEC61850

Under Device Settings / SCADA protocol IEC61850 can be selected and activated.

IEC61850	1/1
State	activated
IED name	TEMPLATE
ICD file name	PQSMART_ED2.icd
ICD revision	1

## 13.3.2 IEC61850 Data Points

Please download the comprehensive description and data point list from our website <u>www.a-eberle.de</u>. The PQI-DE is supplied with two standard ICD files in the basic delivery with activated IEC61850 license. The profile (ICD file) matching the voltage level is selected automatically depending on the basic setting used (commissioning wizard).

- Low Voltage
- Medium Voltage / High Voltage

In the low voltage (EN50160 LV - Low Voltage), the harmonics and events line to earth are evaluated and correspondingly also made available in the IEC61850 interface. On the other hand, when selecting the EN50160 MV (medium voltage medium voltage) or HV (high voltage) template, the harmonics are provided as –line to line sizes. The basic settings of the measuring instrument are described in detail in chapter 6.1 and must be performed once.

## 13.3.3 IEC61850 settings in WinPQ lite

Parameter Name	Value	Default Value
SCL-configuration	PQSMART_ED2.icd	PQSMART_ED2.icd
IED name	TEMPLATE	TEMPLATE
Template Name	PQI-DA-SMART LV Configuration	PQI-DA-SMART LV Configuration
SCL-version	3.5.18	4.2.2
SCL-revision	4	1
orig. SCL-schema version	2007	2007
orig. SCL-schema revision	В	В
Travers subdirectories recursively		
Max. number of entries for listing	80	80
Format of exported file	no export	no export
	no export	
	COMTRADE	
	PQDIF	
	SCL-configuration IED name Template Name SCL-version SCL-revision orig. SCL-schema version orig. SCL-schema revision Travers subdirectories recursively Max. number of entries for listing	SCL-configuration     PQSMART_ED2.icd       IED name     TEMPLATE       Template Name     PQI-DA-SMART LV Configuration       SCL-version     3.5.18       SCL-revision     4       orig. SCL-schema version     2007       orig. SCL-schema revision     B       Travers subdirectories recursively     I       Max. number of entries for listing     80       Format of exported file     no export       COMTRADE     COMTRADE

#### IED – name:

Each participant in an IEC61850 subnet requires a unique identifier. This can be adjusted using the "IED name" parameter. The IED name must meet the following standards (according to IEC61850):

- The IED name can consist of a maximum of 64 characters (letters, numbers or '\_')
- Letter "Umlauts" or blanks are not allowed
- The first character must be a letter

If the IED name has been changed in the interface and sent with **Send** to the PQI-DE, the IED name is automatically taken over in the ICD file. The next readout of the set-up also takes the IED name into the ICD file and displays it.



The icon **ICD File** can be used to download the ICD file in the device to be able to import it back into the SCADA system.

🔾 🗢 🎽 🕨 Computer 🕨	Lokaler Date	enträger (D:) ▶ Temp ▶ ICD File	<b>▼</b> 4	• ICD File du	irchsuchen
Organisieren 👻 🛛 Neuer Ord	ner				:= - 1 0
Favoriten	<u>^</u>	Name	Änderungsdatum	Тур	Größe
Nesktop		PQSMART_ED2.icd	03.11.2016 14:24	ICD-Datei	284 KB
〕 Downloads	=				
💱 Dropbox	-				
🝊 OneDrive					
📃 Zuletzt besucht					

#### Max. Number of entries for directory listing

If not all files can be placed in the same PDU, the standard splitting procedure with "MORE" is used. By default, the server responds with a maximum of 80 files / PDU This parameter is freely adjustable in its limits.



Search directories recursively

• ON:

On client request, the device itself creates a listing of all sub-directories required in IEC61850. This list is then made available to the client.

• OFF:

The client must query the subdirectories itself sequentially or selectively.

Only files from the requested directory will be included in the response.

#### Export file format

There are several options for selecting the export formats; these are described in Chapter 15.3.



Up to firmware version V2.10.4, the selection of the export file is directly in the IEC61850 settings. After updating to a version V2.12 and newer, the parameter is overwritten and must be set again according to chapter 15.3.

# 14. Webserver

A web server is implemented on the device, through which both the standard export formats described in chap. 15 and the proprietary recording files can be downloaded from the device.

## 14.1 Parameterization

The web server is deactivated by default and must first be activated via the parameterization in the expert view of **WinPQlite**.

Communication is technically possible both unencrypted via http and encrypted via https. For encrypted communication, the self-signed certificate "aeberle-cert.pem" from A.Eberle is stored.

	<b>B</b>		
WinPQ - Schnittstelle (CCCI)	Parametername	Wert	Werkseinstellung
Webserver	Webserver aktivieren		
SSH	Anzahl Threads	2	2
Gerätebezeichnung	Unverschlüsselte Kommunikation (HTTP) erlauben	$\checkmark$	$\checkmark$
TCP/IP – Einstellungen Lizenzverwaltung	HTTP port	80	80
Modbus	Verschlüsselte Kommunikation (HTTPS) erlauben	$\checkmark$	✓
<ul> <li>Grenzwerte / Aufzeichnung</li> </ul>	HTTPS port	443	443
<ul> <li>Binäraufzeichnung</li> </ul>	Name des SSL/TLS Zertifikats	aeberle-cert.pem	aeberle-cert.pem
<ul> <li>SCADA-Manager</li> </ul>			
<ul> <li>Speichereinstellungen (Schreiber)</li> </ul>			
Syslog			
<ul> <li>Zeiteinstellung</li> </ul>			
<ul> <li>Nutzerverwaltung</li> </ul>			


## 14.2 Access and REST-API

The web server can be called up directly by entering the IP address in the web browser:

- Unencrypted: http://<IP address>
- Encrypted: https://<IP address>

A landing page appears there, which refers to the listing of the recording files. These listings depend on the settings made in chapter 15.3.

The listings are specified as json files and can be used for the REST API to download the files. A detailed description of how to use the REST API will be provided by the product up-port on request.

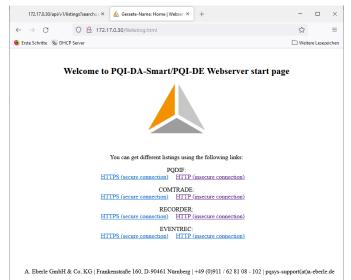



# **15.** Data exchange formats

The device basically records all measurements in a proprietary format. In parallel, it is possible to generate the recordings directly on the unit in standard formats. These include the COMTRADE and PQDIF formats. The differences between the two formats and parameters for activating the respective recording are explained in this chapter.

These files can be exported via the web server (chap. 14) and IEC-61850 (chap. 13.3).

## 15.1 COMTRADE

The Common format for Transient Data Exchange for power systems (COMTRADE) is an exchange format standardised according to IEEE C37.111 for storing oscilloscopic disturbance records. The measuring instrument can record an oscilloscopic and 10ms TRMS disturbance record. Therefore, a COMTRADE file is generated by the device for both disturbance records.

A COMTRADE file consists of several files which can only be evaluated together:

- .CFG file: This file contains the information about the mapping of the recorded quantities and timestamps which are necessary to reconstruct the data in the .DAT file. This file is in a human-readable format.
- .DAT file: This non-human readable file contains the recording data of the fault record.
- .HDR file: This human-readable file contains supplementary information about the .DAT file that is not contained in the .CFG file.

### 15.2 PQDIF

The Power Quality Data Interchange Format (PQDIF) is a data exchange format for power quality measurements defined by the IEEE 1159.3 standard. This data can be obtained from the device via the control technology protocol of IEC 61850.

In order to be able to save the measurement data in the PQDIF format in addition to the previous format, the following requirements must be met:

- A valid license for PQDIF must be installed on the device via the parameterization (see chapter 12).
- Activation of the PQDIF functionality. This is possible in the Expert view under the PQDIF memory settings:

	WinPQ Interface (CCCI)	Parameter Name	Value			Default Value
	SSH	PQDIF active	$\checkmark$			
	Device designation	Reserved portion for PQDIF files within	50			50
	IP-Settings	File wrapping criteria for PQDIF files	2h		~	2h
►	License Manager			2h		
	Modbus			6h		
►	Thresholds / Recording			12h		
►	Binary Recording			24h		
4	SCADA-Manager			2411		
	▲ IEC 61850					
	IEC61850 Protocol Settings					
4	Memory settings					
	PQDIF					
	Syslog					

- The parameter "PQDIF active" is deactivated by default and must be set to active for the use of PQDIF.
- The total synchronous memory of the PQI-DA smart is approx. 500MB by default. A fixed area of this memory is reserved for backing up the PQDIF files, which can be set here. Since the memory requirement for PQDIF is similar to that for the usual recording data, a proportion of 50% is recommended.

**Annotation:** As soon as the parameterization with these settings has been sent to the device, the synchronous memory is emptied so that the memory portion reserved for PQDIF is free. Therefore, it should be ensured beforehand that the existing, historical recording data has been saved on a server or SD card.

• The device saves the 10s, 10min and 2h data classes as well as the fault records in the PQDIF. The file wrapping criterion defines the time duration contained in a PQDIF file of the synchronous data classes. You can choose between 2h, 6h, 12h and 24h. With a wrapping of 2h, a new file is created every 2h (synchronous on UTC) for the 10s, 10min and 2h data classes, with 24h it is only one (correspondingly larger) file per day and data class.



# 15.3 Selection of the export format

To select the export format, the *Export format* parameter is included in the *Memory settings*  $\rightarrow$  *File export*. There are three different options to choose from:

WinPQ Interface (CCCI)	Parameter Name	Value		Default Value
Webserver	Export format	No export		
SSH	-		No export	
Device designation			Recorder: COMTRADE	
IP-Settings			Recorder: COMTRADE, long-te	erm and events: PQDIF
<ul> <li>License Manager</li> </ul>			Recorder, long-term and even	its: PQDIF
Modbus			-	
<ul> <li>Thresholds / Recording</li> </ul>				
<ul> <li>Binary Recording</li> </ul>				
<ul> <li>SCADA-Manager</li> </ul>				
<ul> <li>Memory settings (recorder)</li> </ul>				
PQDIF				
File export				
Syslog				
<ul> <li>Time settings</li> </ul>				
<ul> <li>User Management</li> </ul>				

• Recorder: COMTRADE:

Disturbance records are generated in COMTRADE format (oscilloscope and 10ms TRMS records).

• Recorder: COMTRADE, long-term and events: PQDIF:

Disturbance records are generated in COMTRADE format (oscilloscope and 10ms TRMS records). The long-term data and PQ events are generated in parallel in PQDIF format.

• Recorder, long-term und events: PQDIF:

Disturbance records (oscilloscope and 10ms TRMS records), long-term data and PQ events are generated as PQDIF files.

In order for the export to the PQDIF format to succeed, make sure that the PQDIF function is activated according to chapter 15.2.



PQDIF is a module that requires a licence and must be activated via licence F1.

# 16. Intended use

The product is used exclusively for the measurement and evaluation of voltage and current signals in the energy network. If the instrument is used in a manner which is not specified by the manufacturer, the protection supported by the device may be severely impaired.



# **17.** Measurement methods PQI-DE

The aggregation of the measurement values is carried out in accordance with the IEC61000-4-30 (2008) standard for class A devices.

RMS values of the voltages and currents, min. / max. values

#### U eff / I eff

The interval value of the voltage or current is the mean of the RMS values of the length of the selected interval.

#### U min / max; I min / max

Per measurement period, the highest and lowest 10 ms voltage or current RMS value is saved in addition to the average.

#### Ripple control signal

#### U Ripple Control (200 ms)

In the PQI-DE setup any interharmonic can be set. This is displayed as the 200 ms maximum value within a measurement interval.

#### Flicker levels Pst / Plt

The **Short term flicker levels P**<sub>st</sub> (10 min) and **Long term flicker levels P**<sub>it</sub> (2 h) are calculated for the star and delta voltages.  $P_{st}$  and  $P_{it}$  are defined in EN 61000-4-15: 2010.

The source for implementation recommendations is "EMV Messung von Spannungsschwankungen und Flickern mit dem IEC-Flickermeter" by W.Mombauer, VDE-Verlag, VDE-Schriftenreihe "Normen verständlich", ISBN 3-8007-2525-8.

Formula for P<sub>lt</sub> calculation:

$$P_{lt} = \sqrt[3]{\frac{1}{12}\sum_{i=1}^{l2}P_{st,i}^3}$$

The flicker meter can be parameterized in the device setup for the following grid configurations:

230 V / 50 Hz; 230 V / 60 Hz and 120 V /50 Hz; 120 V /60 Hz

#### THD – PWHD – K factor

Total harmonic content, calculated using the following formulae in accordance with IEC61000-4-7.

Calculating the THD values of the voltages and signal sampling:

- H2 up to H40 (based on EN50160)
- H2 up to H50 (based on IEC61000-x-x)
- THD voltage:

$$THD_{u} = \frac{\sqrt{\sum_{\nu=2}^{40} U_{\nu}^{2}}}{U_{1}}$$

• THD current in %:

$$THD_i = \frac{\sqrt{\sum_{\nu=2}^{40} I_{\nu}^2}}{I_1}$$

• THD(A) current in Ampere:

$$THC = \sqrt{\sum_{n=2}^{40} I_n^2}$$

• PWHD - Partial Weighted Harmonic Distortion The partial weighted THD calculates the 14th to 40th harmonics.

$$PWHD = \frac{\sqrt{\sum_{n=14}^{40} n \cdot C_n^2}}{C_1}$$

• PHC - Partial Odd Harmonic Current The PHC is calculated from the odd current harmonics n = 21...39.

$$PHC = \sqrt{\sum_{n=21,23}^{39} C_n^2}$$



• K Factor

The values of the K-factors for phase currents are calculated from the corresponding RMS values  $C_n$  of the harmonics n = 1...40.

The K factor is a measure that indicates the ability of a transformer to withstand the current harmonics of a system.

Various transformer suppliers offer transformers with, for example, K factors K=4, K=13, K=20 and K=30.

Transformers are heated more by harmonic currents than 50 Hz currents.

A transformer with a higher K-factor withstands this better and is not heated as much as a transformer with a lower K factor.


The device shows the K factor for the current. Only the K values that appear at maximum power are of interest. Just as with the THD of the currents in %, the value is not relevant at very low currents.

$$K = \frac{\sum_{n=1}^{40} (n \cdot C_n)^2}{\sum_{n=1}^{40} C_n^2}$$

#### Harmonics / Interharmonics

The determination of the harmonics and interharmonics interval values displayed using the methods of the IEC61000-4-30 Class A standard based on 10/12 period values.

The PQI-DE recognizes for all voltage and current channels, respectively, the harmonics up to the 50th ordinal. To evaluate the interharmonics, harmonic subgroups are created. 50 subgroups are recorded for all current and voltage channels.

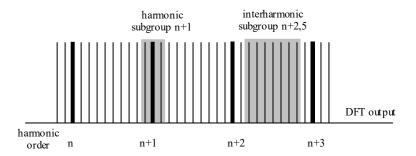

#### Example:

"IH1" is the first interharmonics group and evaluated the frequency range from 5 Hz to

45 Hz.

The harmonics for n = 0...50 are calculated.

Voltage harmonics (standardized, 10/12 periods):

$$U_{hn-10/12} = \frac{\sqrt{\sum_{k=n \cdot N-1}^{n \cdot N+1} U_{n-10/12}^2}}{U_{1-10/12}}$$

Current harmonics:

$$|I_{n-10/12}| = \sqrt{\frac{1}{2} \cdot \sum_{k=n \cdot N-1}^{n \cdot N+1} |C_k|^2}$$



#### Reactive power / Reactive energy

In the setup of the device two variants of the power calculation are adjustable

• Simplified power calculation

Reactive power without unbalanced reactive power calculation:

$$Q = \sqrt{Q_V^2 + D^2}$$

• Reactive power calculation according DIN40110 part 2 Reactive power calculation with unbalanced power:

$$Q_{L-10/12} = Sgn(\varphi_{L-10/12}) \cdot \sqrt{S_{L-10/12}^2 - P_{L-10/12}^2}$$
$$Q_{10/12} = Sgn(\varphi_{1-10/12}) \cdot \sqrt{S_{10/12}^2 - P_{10/12}^2}$$

• Reactive energy:

"Supply reactive energy" inductive reactive energies +EQ.

$$Q_{S}(n) = |Q_{L-10/12}(n)| \qquad \qquad f \ddot{u}r : Q_{L-10/12}(n) \ge 0$$
$$Q_{S}(n) = 0 \qquad \qquad \qquad f \ddot{u}r : Q_{L-10/12}(n) < 0$$

"Consumer reactive energy" capacitive reactive energies -EQ.


$$Q_{S}(n) = |Q_{L-10/12}(n)|$$
 für :  $Q_{L-10/12}(n) < 0$ 

#### Distortion reactive power - D

The distortion-reactive power - also called harmonic oscillation power - describes a special form of reactive power caused by alternating and three-phase current through nonlinear loads such as rectifiers in power supplies. The harmonics of the current in combination with the mains voltage give reactive power components, which are referred to as distortion-blocking powers.

The distortion reactive powers are calculated from the voltages and the associated distortion currents calculated:

$$D = U \cdot \sqrt{\sum_{\nu=2}^{\infty} I_{\nu}^2}$$

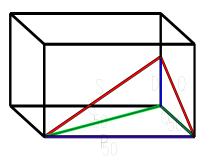

#### Power Factor PF

In electrical engineering the power factor or active power factor is calculated as the ratio of real power P to the apparent power S. The power factor can be between 0 and 1.

The ration is expressed in the following equation:

Power Factor PF:  $\lambda = IPI / S$ 

#### Apparent Power - S

In the setup of the device two variants of the power calculation are adjustable

Simplified power calculation

$$S = \sqrt{P^2 + Q^2}$$

Power calculation according DIN40110 part 2

Conductor apparent power 4-wire system:

$$S_{\scriptscriptstyle L} = U_{\scriptscriptstyle LNrms} \cdot I_{\scriptscriptstyle Lrms}$$

Conductor apparent power 3-wire system:

$$S_{L} = U_{L0rms} \cdot I_{Lrms}$$

Collective apparent power in accordance with DIN40110:

$$S_{\Sigma} = U_{\Sigma} \cdot I_{\Sigma} \qquad U_{\Sigma} = \frac{1}{2} \cdot \sqrt{U_{12rms}^2 + U_{23rms}^2 + U_{31rms}^2 + U_{1Nrms}^2 + U_{2Nrms}^2 + U_{3Nrms}^2}$$

4-wire network:



$$I_{\Sigma} = \sqrt{I_{1rms}^2 + I_{2rms}^2 + I_{3rms}^2 + I_{Nrms}^2}$$

3-wire network,  $11 + 12 + 13 \neq 0$ :

$$U_{\Sigma} = \frac{1}{2} \cdot \sqrt{U_{12rms}^2 + U_{23rms}^2 + U_{31rms}^2 + U_{1Erms}^2 + U_{2Erms}^2 + U_{3Erms}^2}$$

$$I_{\Sigma} = \sqrt{I_{1rms}^2 + I_{2rms}^2 + I_{3rms}^2 + I_{Erms}^2}$$

Geometric Fundamental Oscillations - Apparent Power:

$$\underline{S}_{G} = 3 \cdot [\underline{U}_{1\_PS} \cdot \underline{I}_{1\_PS}^{*} + \underline{U}_{1\_NS} \cdot \underline{I}_{1\_NS}^{*} + \underline{U}_{1\_ZS} \cdot \underline{I}_{1\_ZS}^{*}]$$

#### Active Power - P

The sign of the active power corresponds with the flow direction of the fundamental oscillation active energy (+: supply, - : consumer).

The values of the conductor - active power are calculated from the samples of a synchronization cycle.

$$P_{L-10/12} = \frac{\sum_{n=1}^{2048} p_L(n)}{2048}$$

(200 RMS values) with conductor index L = {1, 2, 3, E}

The 10 min values are calculated as linear averages.

The collective effective power is defined for 4-wire systems as

$$P_{\Sigma} = P_1 + P_2 + P_3$$

The collective effective power is defined for 3-wire systems as

$$P_{\Sigma} = P_1 + P_2 + P_3 + P_E$$

Fundamental oscillation - active power (line):

 $P_G = \operatorname{Re}\{\underline{S}_G\}$ 

 $\underline{S}_{G}$  = Geometric fundamental oscillation apparent power

#### Symmetric Components

The complex symmetrical components are calculated from the corresponding complex spectral components of the fundamental oscillations of the phase voltages and phase currents.

Phase voltage in a 4-wire system = Phase-to-Neutral voltage

Phase voltage in a 3-wire system = Phase-to-Ground voltage



Positive sequence:

$$\underline{U}_{1_{PS}} = \frac{1}{3} \cdot \left( \underline{U}_{1N-1} + \underline{a} \cdot \underline{U}_{2N-1} + \underline{a}^2 \cdot \underline{U}_{3N-1} \right)$$
$$\underline{I}_{1_{PS}} = \frac{1}{3} \cdot \left( \underline{I}_{1-1} + \underline{a} \cdot \underline{I}_{2-1} + \underline{a}^2 \cdot \underline{I}_{3-1} \right)$$

Negative sequence:

$$\underline{U}_{1_NS} = \frac{1}{3} \cdot \left( \underline{U}_{1N-1} + \underline{a}^2 \cdot \underline{U}_{2N-1} + \underline{a} \cdot \underline{U}_{3N-1} \right)$$
$$\underline{I}_{1_NS} = \frac{1}{3} \cdot \left( \underline{I}_{1N-1} + \underline{a}^2 \cdot \underline{I}_{2N-1} + \underline{a} \cdot \underline{I}_{3N-1} \right)$$

Zero sequence:

$$\underline{U}_{ZS} = \frac{1}{3} \cdot \left( \underline{U}_{1N-1} + \underline{U}_{2N-1} + \underline{U}_{3N-1} \right)$$
$$\underline{I}_{ZS} = \frac{1}{3} \cdot \left( \underline{I}_{1N-1} + \underline{I}_{2N-1} + \underline{I}_{3N-1} \right)$$

#### UU Unbalance

The unbalanced voltages are calculated from the corresponding values of the modal positive sequence, negative sequence and zero sequence components.

For the EN50160 (events) only the voltage unbalance  $u_u$  is relevant and corresponds to the ratio of the negative sequence to the positive sequence. The value is expressed in [%].

#### Frequency analysis 2 kHz to 20 kHz

In the frequency analysis 2 kHz to 20 kHz respectively 200 Hz frequency bands are summarized.


The specification of each frequency is the centre frequency in this 200 Hz band. In the recording files themselves the supraharmonics up to 20 kHz can be recorded. Up to 18.6 kHz the 200 Hz wide frequency bands are calculated according to IEC 61000-4-7. Above this, the attenuation of the internal filter is not as high as specified by the standard. Therefore, these measured quantities are marked with a "\*".

$$Y_{\rm b} = \sqrt{\sum_{f={\rm b}-95\,{\rm Hz}}^{{\rm b}+100\,{\rm Hz}} Y_{{\rm C}f}^2}$$

Example: Frequency band 8.9 kHz corresponds to all 5 Hz spectral lines from 8,805 Hz to 9,000 Hz

# 18. Service

This unit is maintenance-free for customers.

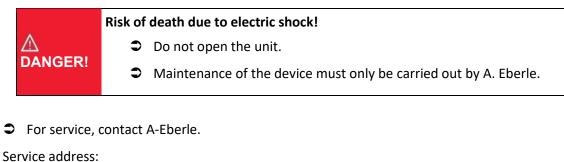

A. Eberle GmbH & Co KG Frankenstraße 160 D-90461 Nuremberg

#### **Cleaning:**

Use a short, slightly damp, lint-free cloth. Make sure no liquid gets in the housing. Do not use window cleaner, household cleaners, sprays, and solvent, cleaners that contain alcohol, ammonia solutions or abrasive cleaning agents. Please use only water for cleaning.



# 19. Disposal

Directive 2012/19/EU, better known as the WEEE2 Directive, deals with the return and recycling of waste electronic and electrical equipment in order to recover valuable raw materials. This concerns all A. Eberle products marked with the symbol of a waste garbage can shown.

• Our WEEE registration number is: DE 37396879

For old devices, please also note the information on our homepage: <u>https://www.a-eberle.de/en/about-us/take-back-recycling/</u>



# 20. Product Warranty

We guarantee that every product A. Eberle GmbH & Co KG is free from material and manufacturing defects under normal use.

The detailed conditions for the warranty can be found in our general terms and conditions of business under: <u>https://www.a-eberle.de/en/general-terms/</u>



A. Eberle GmbH & Co. KG

Frankenstraße 160 D-90461 Nuremberg Germany

Tel.: +49 (0) 911 / 62 81 08-0 Fax: +49 (0) 911 / 62 81 08 96 E-Mail: info@a-eberle.de

http://www.a-eberle.de

Firmware Version: v2.14 WinPQ lite Version: v7.1

Version: 2/10/2024 2:18 PM